



INSTRUCTION MANUAL for 553174 and 553182

** GENERAL PRODUCT INFORMATION **

- Materials: Egg Vibrator - Ultra-premium, fully silicone/ Remote Control - ABS+PU Coating
- 100% safe, phthalate-free and latex-free
- Vibrating Egg can be controlled by the Remote Control or its own button.
- Can be used in as far as 5 meters apart
- Waterproof
- Vibrating Egg: Rechargeable, uses USB plug-in (can charge device on computer)
- Remote Control: powered by 1pcs 23A battery
- 10 different patterns (3 speeds and 7 pulsating passion patterns)
- No medical claims are warranted or implied by use of this product.

** IMPORTANT NOTICE FOR INITIAL USE **

- Make sure the product is 100% dry before charging.
- Before first use, the vibrator needs to be charged between 4-6 hours using the designated DC charging cable (included).
- Initial Charging Time: between 4-6 hours
- Normal Charging Time after the first use: EGG – 1.5 hours

CHARGING INSTRUCTIONS FOR VIBRATING EGG

- Charging Time: 1.5 hours
- Use only the DC charging cable included
- To charge, insert charging cable pin head into the pin port of the vibrator and the other end to a power source (USB).
- Indicator light on power button blinks: indicates that egg is charging
- Indicator light steadily on: indicates that device is fully charged
- The Egg will run for 60 minutes on highest speed

OPERATING INSTRUCTIONS

a. CONTROLLING THE VIBRATING EGG THRU THE REMOTE CONTROL

- **To turn on (Standby Mode):** Press and hold the power button of the egg for 3 seconds. You are now on Standby Mode with no vibration. Indicator light is on.
- **To switch patterns :** Press the button on the remote control to enter into lowest speed. Then short press the button to switch the patterns, 3 speeds +7 pulsating passion patterns to cycle.
- **Back to Standby Mode:** Long press the button on the control to go back to the standby mode with no vibration. Then short press the button to enter into the lowest speed again.
- **To turn off:** Press and hold the power button of the egg for 3 seconds, the egg is turned off.

b. CONTROLLING THE EGG THRU ITS OWN BUTTON

- **EGG:** Press and hold power button on the egg for 3 seconds. Now on standby mode with no vibration. Light indicator is on. Press the button to enter into the lowest speed and then repeatedly to switch between patterns (10 different patterns to choose from).
- **To turn off:** Press and hold power button for 3 seconds, the egg is turned off.

CLEANING AND CARE INSTRUCTIONS

- Cleaning is recommended before the first use and in between each use.
- Please clean the vibrator with water. A Special cleaner, disinfectant for adult wellness products or a suitable toy cleaner suggested by your retailer is always recommended.
- Alcohol is NOT recommended because sustained use of alcohol could corrode and damage the surface of the product.
- After cleaning, use a towel or soft cloth to wipe water from the surface, let it dry naturally.
- Avoid exposure to the sun.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.