

USER INSTRUCTION

WATCH REMOTE USER INSTRUCTION



This watch remote is designed to be used on specific series cars only. All the pictures showed in this instruction are for sample. Please refer to the actual situation.

REMOTE CONTROL CAR AND REMOTE PARTS INSTRUCTION

1. Battery model: 3.7V rechargeable battery set
2. Non rechargeable batteries are not rechargeable.
3. The rechargeable battery can only be charged under adult supervision.
4. The rechargeable battery should be removed from the toys before charging.
5. Remove and install the batteries: Use the screwdriver to lose the screws and open the battery holder. Install the batteries and make sure the batteries are in the correct Polarity.
6. Follow the signs on the battery holder to install and remove the batteries.
7. Always use the same model of batteries.
8. Do not use the used batteries and new batteries in the same time or different model of batteries.
9. Batteries should be installed in the correct polarity.
10. Flat batteries should be removed from the toys.
11. The power terminals should not be short-circuited.

FCC ID:2A3EQQR5501

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.


However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

USER INSTRUCTION

12 PIECE 2.4 G HAND GESTURE GRAVITY SPRAY DRIFT REMOTE CONTROL CAR USER GUIDE

REMOTE CONTROL CAR AND REMOTE PARTS INSTRUCTION

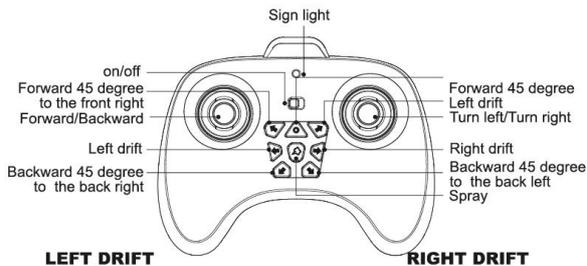


REMOTE CONTROL CARE BATTERY RECHARGE METHOD

Switch off the remote control car to disconnect the remote control car and batteries. Remove the rechargeable battery set. Then connect the battery charging head to the USB charging head correctly.

CAUTION


When the USB sign light turns to red, that means it is charging. The charging time is 180 minutes. It is fully charged when the colour of sign light change to darker.

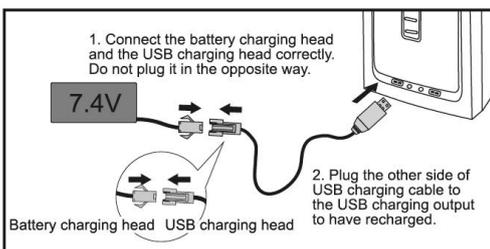


CAUTION

1. The remote control car use 7.4V rechargeable lithium ion battery, the remote use two of the 1.5 "AA" non-rechargeable batteries.
2. Non-rechargeable batteries can not be recharged.
3. The rechargeable battery can only be charged under adult supervision.
4. The rechargeable battery should be removed from the toys before charging.
5. Remove and install the batteries: Use the screwdriver to lose the screws and open the battery holder. Install the batteries and make sure the batteries are in the correct Polarity.
6. Follow the signs on the battery holder to install and remove the batteries.
7. Always use the same model of batteries.
8. Do not use the used batteries and new batteries in the same time or different model of batteries.
9. Batteries should be installed in the correct polarity.
10. Flat batteries should be removed from the toys.
11. The power terminals should not be short-circuited.

BATTERY INSTALLATION FOR REMOTE CONTROL CAR AND REMOTE

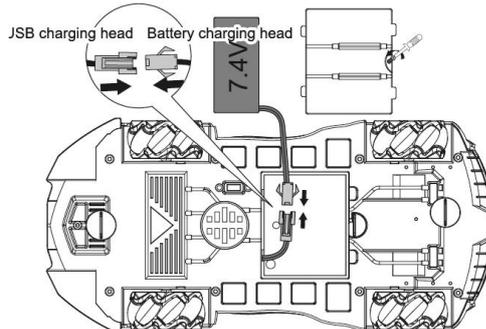


Use the screwdriver to lose the screws on the battery cover, open the battery cover and install 4.8V. Rechargeable battery set. Connect the USB charging head and the battery charging head correctly and then put the battery cover on by using the screwdriver and tight up the screws. (Batteries are included in the package)

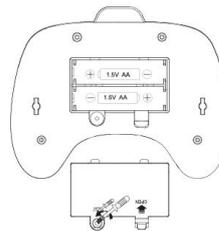

Use the screwdriver to lose the screws on the battery holder cover, open the battery holder cover and install two 1.5 V "AA" batteries in correct polarity. Then install the battery holder cover and tight up the screws. (Batteries are not included)

WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.

USER INSTRUCTION

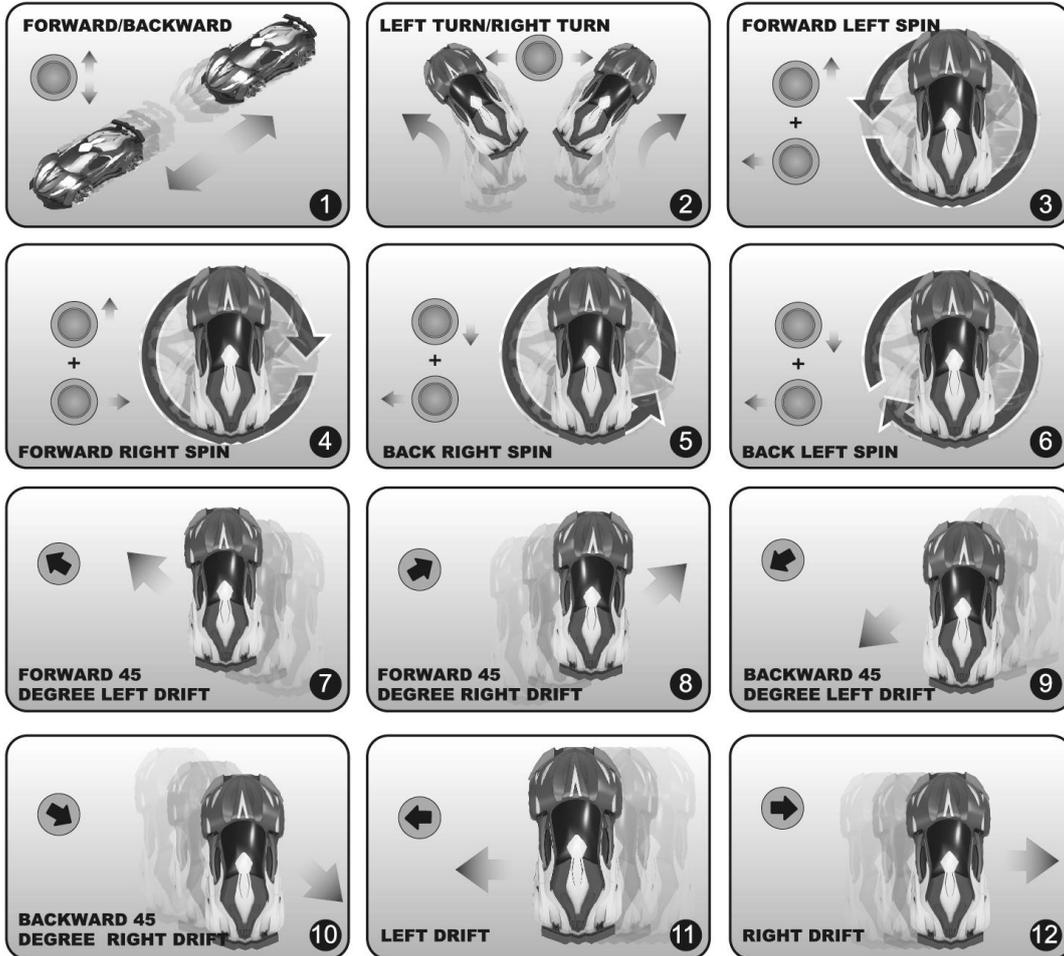

WARNING

When the remote can not control the car, switch off the power of remote first, then switch off the power of remote control car. Turn on the power again to have pair by pulling controller on the remote.

CAUTION

1. Keep away all small parts safely, avoid children swallow.
2. When the electric wave disturbs playing, please find somewhere else.
3. Stop playing when the battery is low.
4. Dispose all the package waste in the correct bin to avoid pollution
5. Please keep the remote and the car in a cool and dry place.
6. Do not storage close to the fire, heat or wet place.
7. When the batteries soak with water, please dry it properly. Do not use the battery anymore when the shape of batteries has been changed.