

# DOUBLE-SIDED STUNTCAR

\*Please read the manual carefully before use.  
\*Please keep the packaging box and the manual for future reference.

## Safety instructions:

- Please use it under close supervision of adults!
- Do choose a safe place for competition, and do not use it near the street.
- Keep fingers, hair and loose objects away from tires, wheel hubs or motors during use.



## FCC statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:  
1) This device may not cause interference.  
2) This device must accept interference, including interference that may cause undesired operation of the device.  
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
FCC Radiation Exposure Statement:  
This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

P.1

14+  
AGES  
CE

Precautions for battery use:  
1. It is recommended to use alkaline batteries.  
2. Do not charge the battery that cannot be charged.  
3. Before charging, please take out the rechargeable battery from the toy.  
4. Charge the rechargeable battery under the supervision of an adult.  
5. Do not mix alkaline batteries, standard batteries (carbon-zinc batteries) or rechargeable batteries (nickel-cadmium batteries).  
6. Do not mix new and old batteries.  
7. Only use the same or equivalent battery as the recommended battery.  
8. Batteries should be inserted with correct polarity.  
9. The power terminals must not be short-circuited.  
10. If the battery is leaking, please take out of the toy and disposed of immediately; do not throw the battery into a fire source.  
11. If the toy is not to be used for a long time, please take out the battery.  
12. Take out the battery from the toy when not using it and clean the water on its surface.  
13. Pay attention to the objects on the lawn when using the olive-shaped wheel, which will affect the movement.  
14. It is recommended to use at most 3 batteries in a single play.  
15. As the speed of this stunt car is faster than that of its counterparts, please turn off the remote control when changing the version.  
16. Regularly check if the electrical components of the product have signs of damage; do not use the product until the damage is properly assessed.


If the product fails to work correctly, please remove the battery and wait for one minute and then reinsert it.  
If the fault persists, please replace the battery with a new one.  
The battery can only be installed by an adult.

## INSTRUCTIONS FOR BATTERY INSTALLATION


### REMOTE CONTROL CAR

1. Make sure that the power switch is in the OFF position.  
2. Use the screwdriver to unscrew the screws.  
3. Then remove the battery cover.  
4. Install the battery as shown in the picture below:  
-Connect the rechargeable battery of the battery pack as shown in the picture.  
-The AA battery must be installed in the correct position.  
5. Put back the battery cover and tighten the screws.



### OLIVE-SHAPED WHEEL VERSION

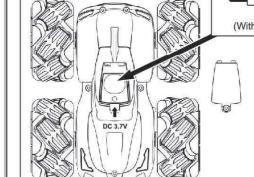

### WHEEL VERSION

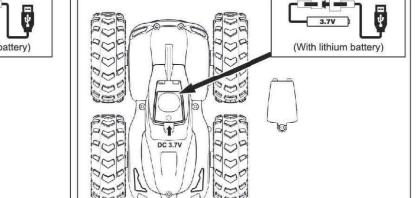


P.2

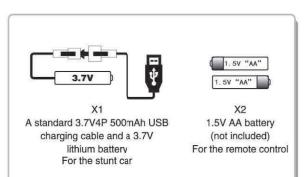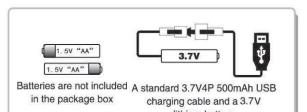

## HOW TO MOVE FORWARD




## HOW TO MOVE BACKWARD

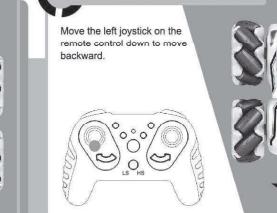


## HOW TO MOVE RIGHT





## HOW TO MOVE LEFT

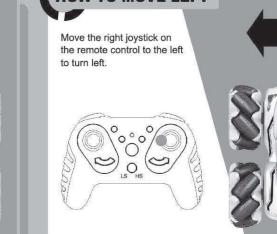

## HOW TO MAKE A 360°RIGHT ROTATION

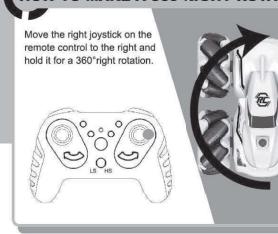

## HOW TO MAKE A 360°LEFT ROTATION

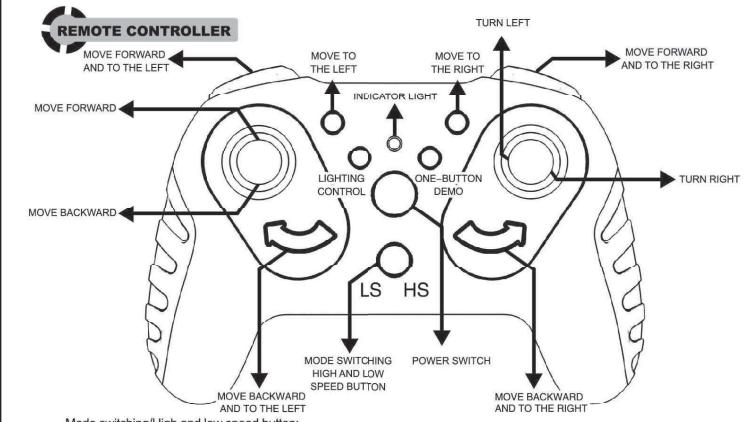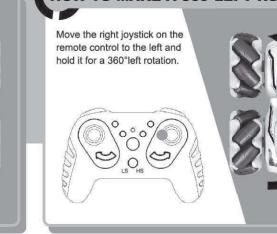

Mode switching/High and low speed button:  
1. It's defaulted as low speed mode after powering on, press the button once to switch to high speed mode.  
2. It's defaulted as olive-shaped wheel mode after powering on, whether it is at high speed mode or low speed mode, long press this button and the indicator light shall flash twice, and it shall switch to desert wheel mode, and it's the same to switch from desert wheel mode to olive-shaped wheel mode. (Long press for 3 seconds)  
3. One-button demo: 1. Press once for one-button demo and press twice to exit one-button demo.

## HOW TO CHANGE A WHEEL



## PRECAUTIONS

### CHARGING TIME

Charge for 2-3 hours, a fully charged battery can be used for 18-25 minutes.

### DISTANCE AND RECEPTION

\*The ideal transmission distance is about 35m.  
\*Although it rarely happens, due to mutual interference, you may encounter too low received signal or vehicle control failure, which is usually caused by high-voltage wires, transformers, high buildings, etc.  
\*If you do encounter such kinds of interference, please stagger the sequence of the frequency matching, as long as the frequency is correct, there will be no interference of the same kind.

### THE STUNT CAR CANNOT MOVE OR MOVES SLOWLY

\*Please make sure the battery is full. Low battery power may result in performance being lower than the peak. Please check the AA batteries in the controller.

\*Please check whether the battery is low or damaged. Please check whether the batteries are correctly installed.

\*Please make sure the ON/OFF switch on the stunt car is in the 'ON' position. Please also check the 'ON/OFF' switch on the remote controller.

\*Shorten the distance between the controller and the stunt car to ensure normal reception.

\*As the battery power decreases, the control distance will also be relatively reduced. Please recharge the battery in time when the stunt car obviously slows down and does not function smoothly, and the lights are dim.

P.3

P.4