

Warning:

the tablet should be opened and used on the charging base. The product cannot be used alone without the charging base. Because there are metal contacts at the bottom of the flat panel that need to communicate with the flat panel to transmit medical signals, the flat panel should always be placed on the charging base for use. If you hold it in your hand, you cannot communicate with the charging base.

Installation guide: Put the tablet computer on the charging base, charging base connected to the power will automatically charge, press the on key to start, as shown in the picture below.



1.1 Acknowledgement

Thanks for your purchase of our product, it is a 8 inches high clear board computer. Its CPU is MT8735V/WM it is based on Android 8.1 operation system, and easy to expand the third application procedure.

It is easy to achieve wireless communication and internet, you have access to surf the internet anytime and anywhere; it is also built with high accuracy GPS module, so that it can be used for navigating through installing map software. There are many sensors which offer you brand-new operation and entertainment; besides, it has camera shooting, which leads electronic consumption to enter into a fresh palm internet entertainment time. The manual systemically introduces the functions, use techniques and announcements, please read this manual carefully before your operation.

1.2 Announcements

Preventive maintain Please always keep the MID dry. To avoid the device short trouble, corrosion fault and

electric short, please prevent the device, battery and charger from water and moisture, and don't operate the device or charger by wet hand.

To avoid failure of device, battery and charger, please prevent the device, battery, charger from violent shock or shake.

To avoid failure of device, battery and charger, please prevent the device, battery, charger of all over heating or too cold circumstance

Never shock, throw, prod the MID, or drop, extrude, bend the MID.

Never disassemble the device and accessories arbitrarily, otherwise the device and accessories are not in our company warranty scope.

2 MID Introduction

2.1 MID Operation and Preparation

Battery Charging

If this navigator is first used, please use AV adaptor base to fully charge it.

1. Apply the power adaptor base to charge for MID.

2.2 MID Status and Reminder

Reminder icons

When some remind message appears in your reminder window, please click column and slip the screen to open the reminder list. Choose the menu you need, and confirm the information.

Then you can close the reminder window through clicking the column to slide up. Please refer to below status icons:



New email



USB connected



USB debugging connected



Return button



Downloading



 
Display recently-used application



Home button



Current electric volume.



WIFI connected, internet is available

2.3 Reminder board

Reminder icons will work while receiving emails, WIFI is open, you can open the reminder board to view the detailed information.

Open the reminder board

When the reminder column shows new reminder icon, please hold the column and slip down your finger, then the reminder board is opened.

3. Quick Start Guide

3.1 Startup and Shutdown

Startup

Long press POWER key for three seconds, you can enter into startup picture. The system enters into screen lock status, please unlock it.

Shutdown

1. Long press POWER, it will popup shutdown window.

2. Shutdown window contains airplane mode, reboot mode and shutdown three options.
3. Click Shutdown is the last step.

3.2 Open and Close of the Screen

 
Screen will be closed on its own when no operation happens.

Screen will be closed on its own if no operation happens for some time to save battery power

1. When screen is open, press POWER key, the screen will be closed immediately.

Open the screen when it is closed.

If the screen is closed, short press POWER to open the screen. The screen will be locked open it, it will show the picture as below picture, left slide to unlock and enter into camera, right slide to unlock and enter into phone.

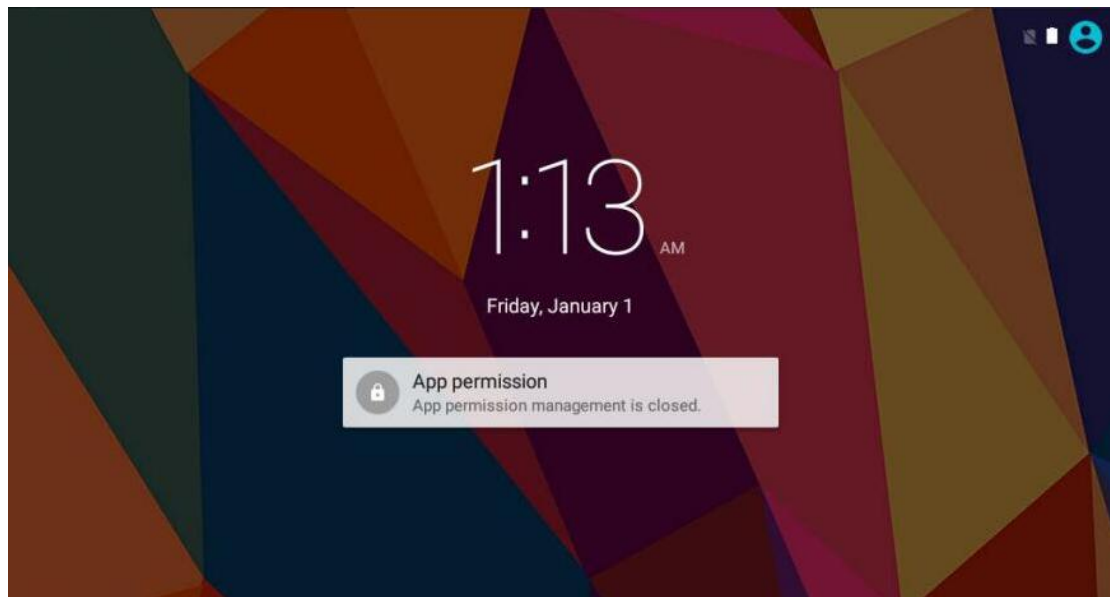

3.3 Usage of Touch Screen

MID operating methods

There are below methods to view the main screen, menu and application procedure in your MID.

Click

When you want to use the screen keyboard typing or choose application in the main interface, you

only need to touch it by your finger.

Press on

If you want to open some item(textbox or the link in the webpage), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide

Quickly slide or slide indicates make quick vertical or horizontal movement by finger.

Pull

Before you pull, you need to hold it and pull it into the position you want.

Rotate

For most pictures, you only need to rotate the MID to change the screen direction from

 
horizontal to vertical. For instance, when you are typing words, and watching movies.

3.4 Home Page

Main interface as below picture 3.2, long press the blank and it will popup windows to set wallpaper, folder, widgets, and shortcut.

The extended home page


The home page can be extended beyond the wideness of screen to provide more space, which you can put new-added shortcuts and widgets. Click the blank space in home page then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures, as Picture below

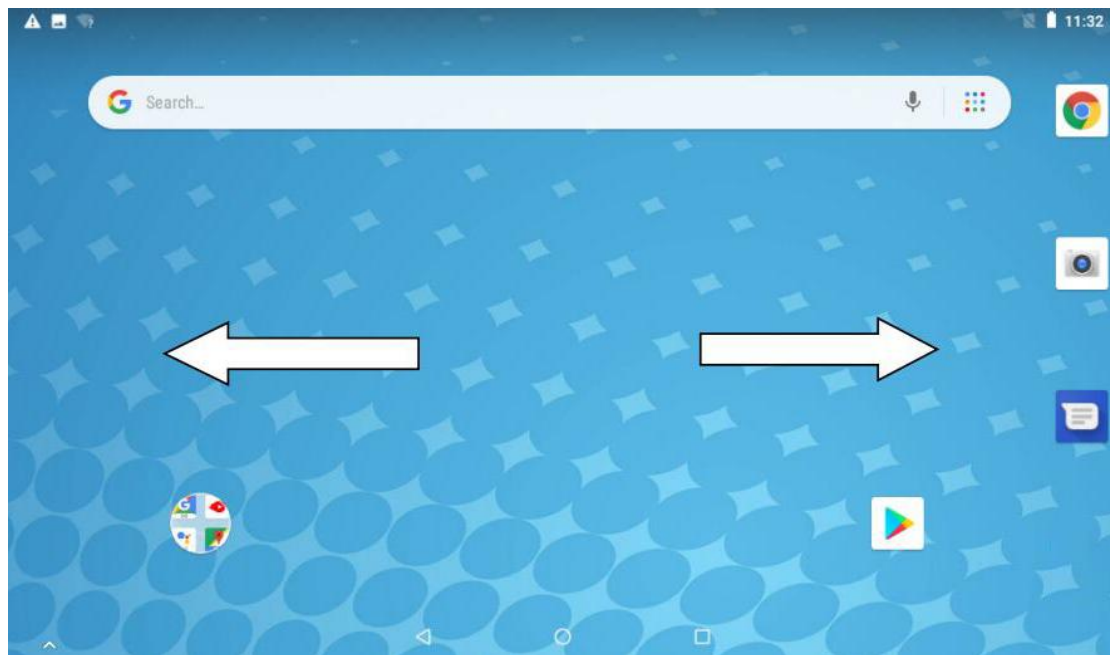

The shortcut icons management in desktop application.

Create folder icon in desktop

 1. Drag the icons need to be put together on one icon(can also overlay several icons)as Picture below
 2. Then click the over layed icons, the applications can be folded, as Picture below
- Click the unnamed folder in the black box, it will popup the hidden keyboard, the folder name can be renamed (this is similar with Apple IOS system), the icons position can be changed through long press

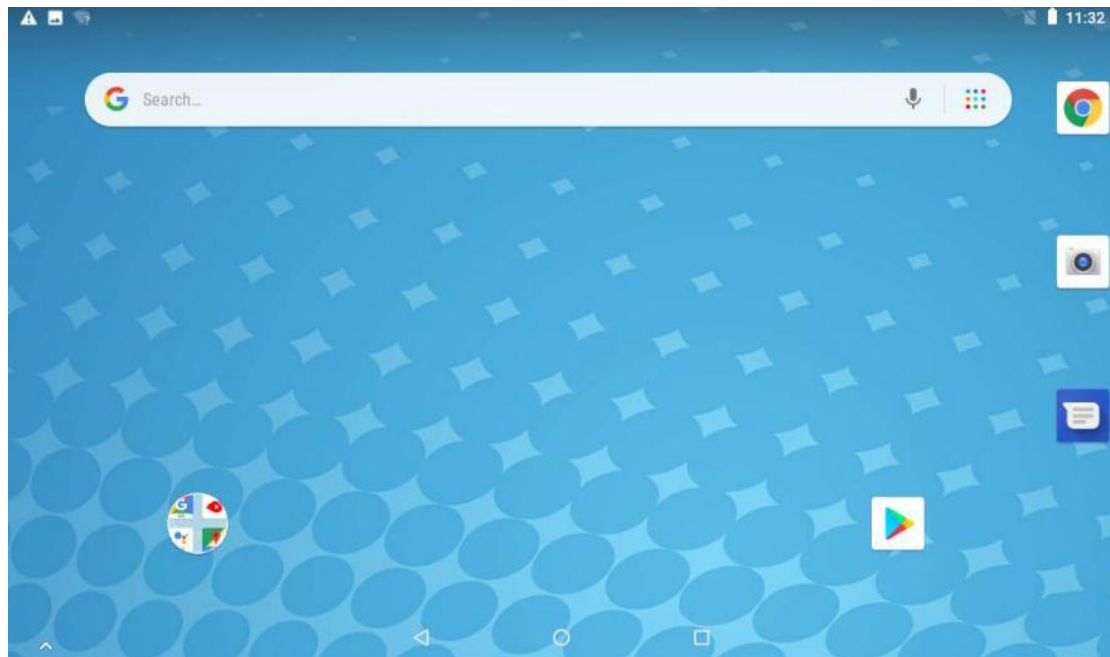

Remove the icons in desktop

1. Long press the icons need to be remove, then on the middle above of the screen, it

will appear  icons.

2. Drag the icon to the above of the remove icon, till the icon become red, then move your finger to delete the icon.

Change the wallpaper of desktop

1. In home page, long press any blank space in main screen, it will popup a window to change the wallpaper.
2. Click the gallery or wallpaper gallery to select the wallpaper

4 Basic Setting

4.1 Wireless and Internet


1. Connect Wi-Fi

 
- 1) In the main menu or interface, choose setting application procedure.
- 2) Click WLAN, open wifi, MID will automatically search the available Wifi wireless internet. As Picture below
- 3) Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect

2. Network Notice

If you open Network Notice, when WIFI signal appears, the right bottom will remind you available WLAN network, as Picture 4.1

3. Keep Wi-Fi on during sleep..


1. Click  icon in right top of Picture 4.3, select advanced.
2. Click Keep Wi-Fi on during sleep, as below picture showing:

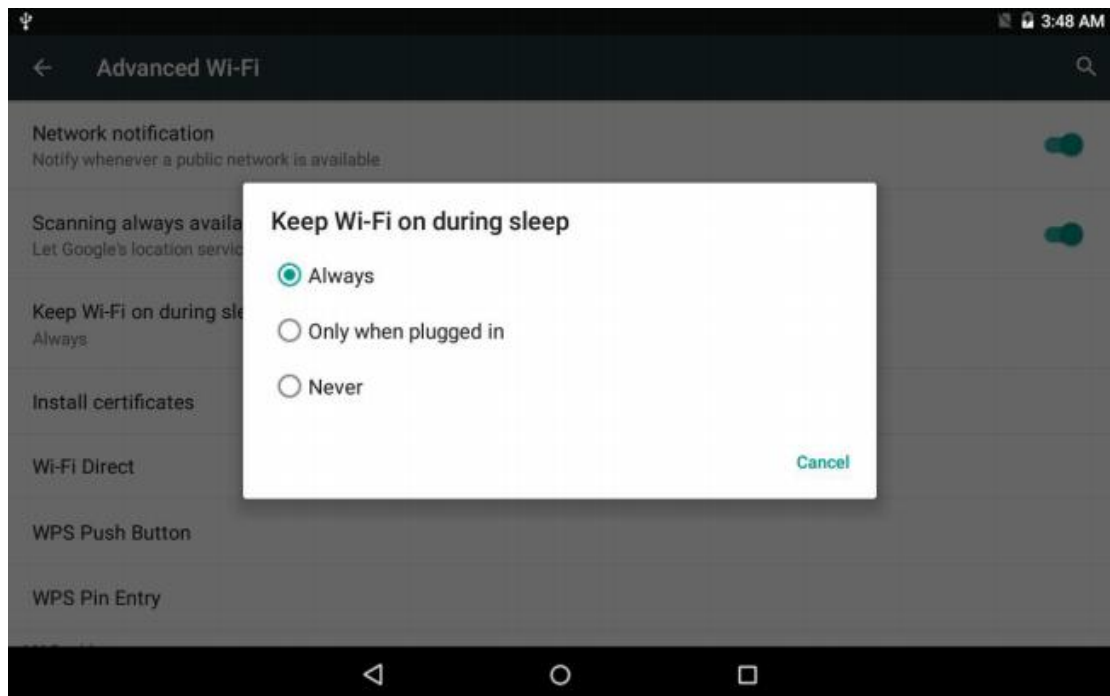


3 Bluetooth


Bluetooth function operation

 1. Click setting application in main menu interface
2. Click bluetooth and open it.
3. If somebody open bluetooth in your surroundings, click search device in right abthen MID will automatically search the bluetooth device nearby. As picture below:

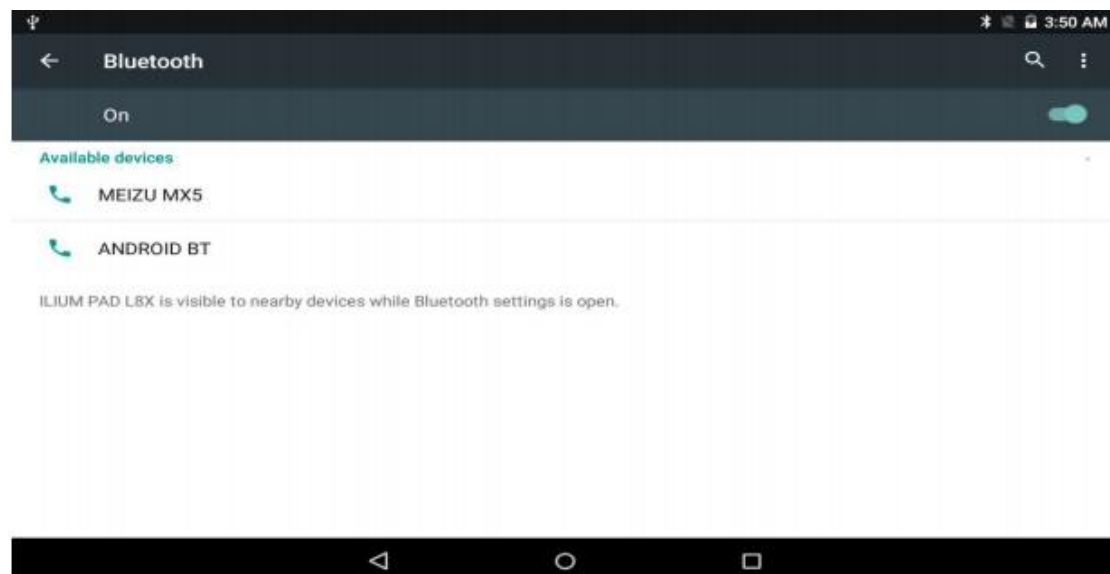

4. Click the available Bluetooth device, it will pop up request window, enter into related password, and match the device to connect.

 
5. After match successfully, choose the operation you want to, click  to enter into
Picture below:

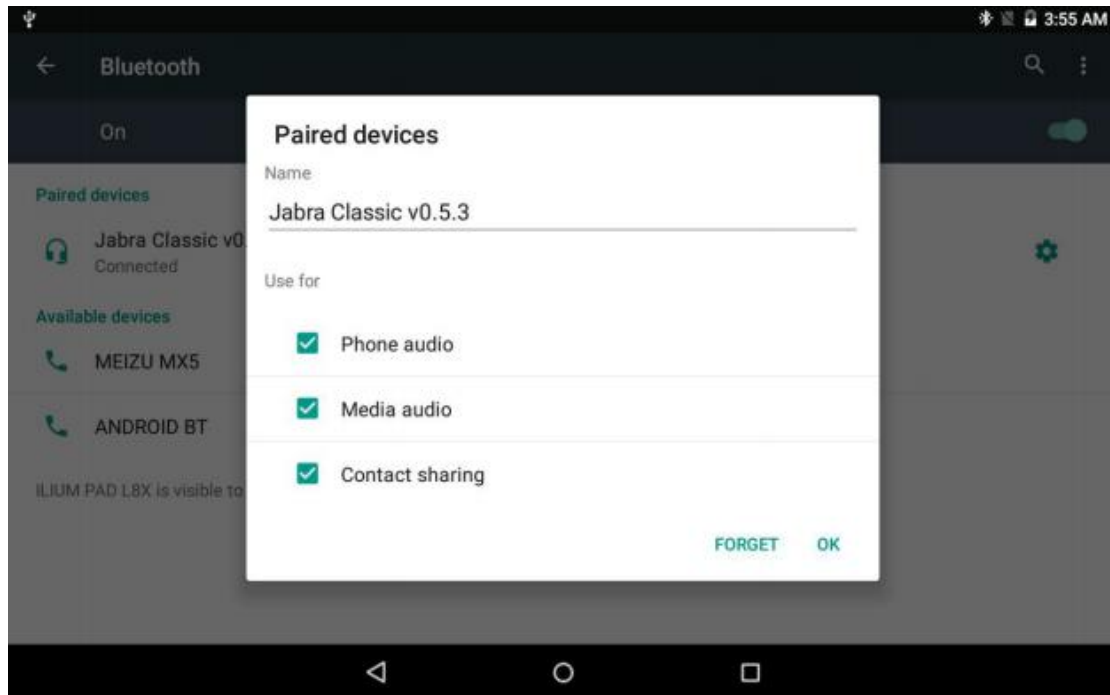

4.4 Display

4.7-1 Adjust the screen brightness

 
1. Click Setting application procedure.
2. Click display, choose brightness,
3. Drag the portlito to adjust the brightness volume.

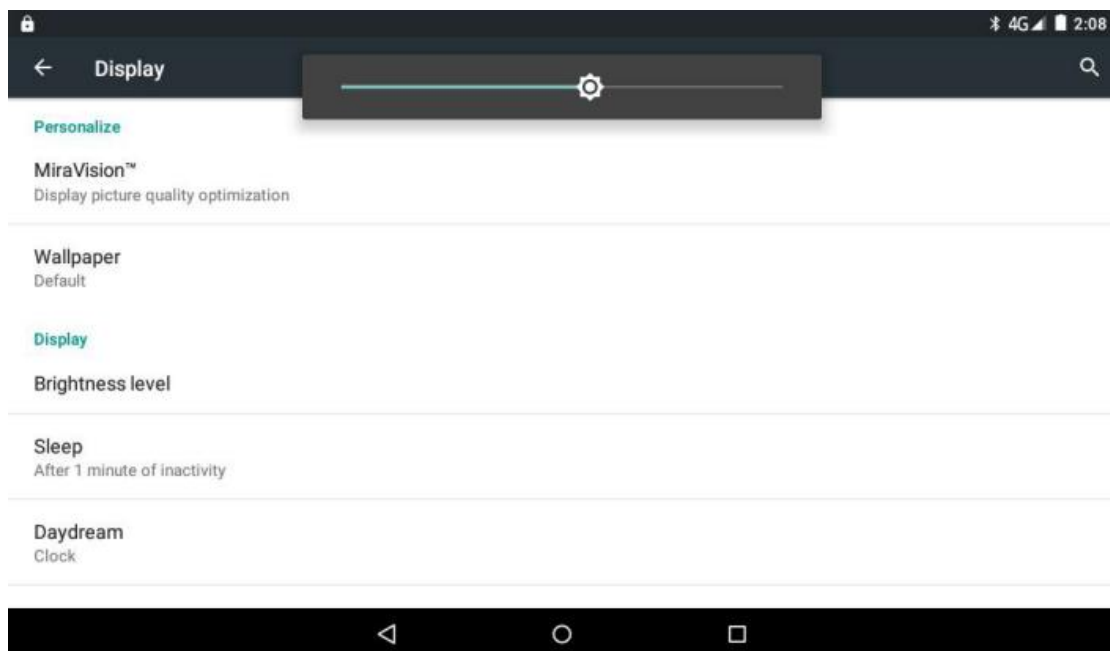

5.1 Music



 Enter into music player: in menu or desktop click music icon to enter into music player, click the music you want to play,

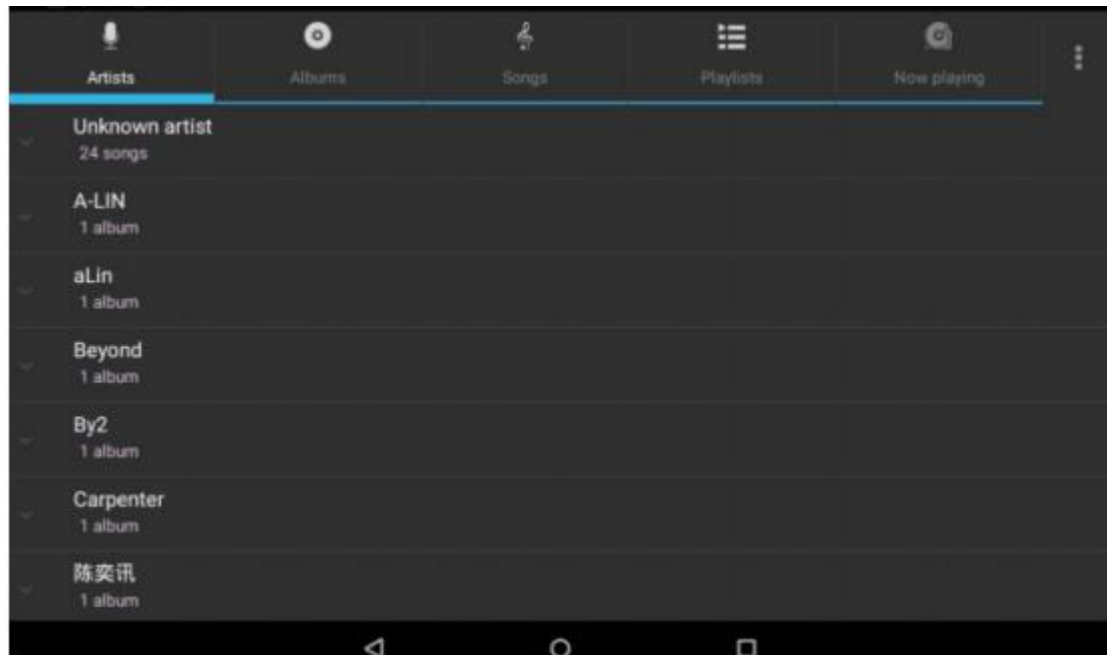

5.2 Photo Gallery

Photo gallery application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

View pictures

1. Click gallery application in main interface.
2. Enter into gallery, click the folder you want to view.
3. Click the picture you want to view, the system will play it in full screen mode automatically.
4. The pictures can be zoom in and zoom out, put two fingers on the screen, the Seperate the fingers(gather up the fingers, the picture will be zoom in) or double click the screen.

Note: when you browse the pictures, slide left or right to view more pictures

Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

Slide Show

1. Open a picture, use virtual key to click menu key, display menu selection.
2. Click slide show, it will auto loop play

Crop

1. Click menu key to display menu selection.

2. Then click crop, click and drag related area to adjust the cropper.
3. Click cropper and drag it inside and outside to adjust the image.
4. After adjust the size you want, click crop.
5. If you wish to give up to crop, click cancel to return to picture browser

Edit

1. Click menu key, display the menu selection.
2. Click edit.
3. Adjust the brightness, style, color
4. Click save.
5. If you want to give up edit, click return key, click not to return to picture

Browser

7.1 Browser

 
In case of Wi-Fi or mobile internet is connected well (Please refer to Chapter 4.1 for wireless and



internet setting), click IE browser in the main menu or desktop to enter the IE interface,

Click address bar to input the website, click start, enter into related webpage, then you can browse

the website information, as Picture and you can click the menu you can refresh ,save to bookmarks,,share page,bookmarks,,history and setting the webpage

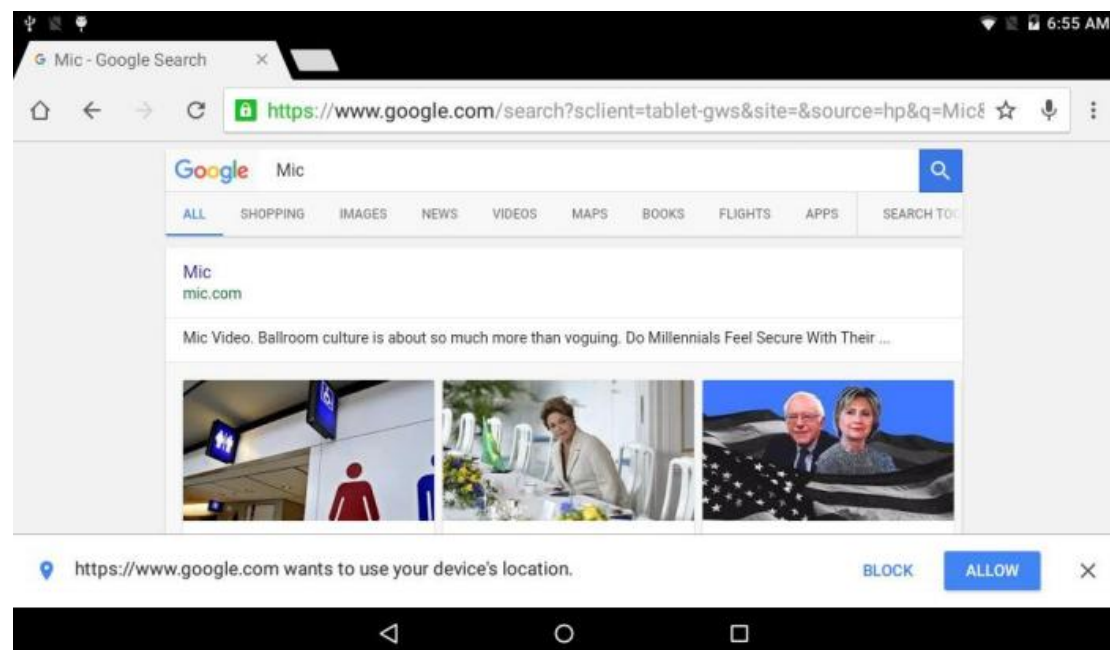

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.