

POWERBANK

PORTABLE CHARGING FOR MOBILE DEVICES

Package contains

- Power Bank
- Charging Cable
- User Manual

Parameters

5000mAh Power Bank
FCC ID: 2A3ZO-EPB1967
Wireless Charger Output: 15W/10W/7.5W/5W
Micro Input: 5V-2A, 9V-2A
Type-C Input: 5V-3A, 9V-2A, 12V-1.5A
Type-C Output: 5V-3A, 9V-2.2A, 12V-1.67A
USB-A Output: 5V-3A, 9V-2A, 12V-1.5A

Charging the Power Bank

Connect the included charging cable to your Power Bank input port and plug it into a power source (charger). The indicator light will notify you when your Power Bank is fully charged.

Charging your device using the power bank

Connect your device's charging cable (not included) to the output port(s) on the Power Bank. Connect the other end of the cable to your device. Unplug when your device is fully charged.

Warning

Please read all instructions and warnings carefully before using your Power Bank. Improper use of this product may result in product damage, excess heat, toxic fumes, fire or explosion, for which damages you ("Purchaser") and not Premier Accessory Group ("Manufacturer") are responsible.

- The power bank should be operated only in open-air conditions. It should not be operated in an enclosed, unventilated space such as a carrying bag, pocket, or purse. Failure to follow these instructions may cause, damage to the power bank by overheating.
- Do not store power bank in high temperature environments, including intense sunlight.
- Do not place power bank in fire or other excessively hot environments. Be cautious of excessive drops, bumps, abrasions and other impacts to this battery. If there is any damage to the power bank such as dents, punctures or corrosion, due to any cause, discontinue use and contact manufacturer or dispose of it in an appropriate manner at your local battery recycling center.
- Do not disassemble this power bank or attempt to repurpose or modify it in any manner.
- Do not expose this power bank to moisture or submerge it in liquid. Keep power bank dry at all times.
- Do not attempt to charge power bank using any method, apparatus or connection other than the device's connector. For questions or instructions for the various ways to charge the power bank refer to this manual's "charging your device using the power bank" section.

- Do not attempt to replace any part of this battery. If this battery is intended by Purchaser to be used by a minor, purchasing adult agrees to provide detailed instructions and warnings to any minor prior to use. Failure to do so is sole responsibility of purchaser, who agrees to indemnify Manufacturer for any unintended use/misuse by a minor.
- All batteries have gone through a thorough quality assurance inspection. If you find that your battery is excessively hot, is emitting odor, is deformed, abraded, cut or is experiencing or demonstrating an abnormal phenomenon, immediately stop all battery use and contact Manufacturer.
- For extended storage, first charge your battery for one hour.
- Never dispose of batteries in the garbage. Disposal of batteries in garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center.

Legal

This battery is meant for use only in conjunction with the appropriate mobile device. Please consult your device packaging to determine whether this battery is compatible with your particular mobile device. Manufacturer is not responsible for any damage to any mobile device incurred through the use of this product.

Manufacturer shall not in any way be liable to you or to any third party for any damages you or any third party may suffer as a result of use, intended or unintended, or misuse of this battery in conjunction with any device or accessory other than the appropriate mobile device for which this battery is designed. Manufacturer will not be responsible for any damages you or any third party may suffer as a result of misuse of this battery as outlined above. If you are responsible for battery use with an unintended mobile device and damages result from such use, you agree to indemnify Manufacturer for any resulting injuries to any third party(ies).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.