


注：黑白印刷

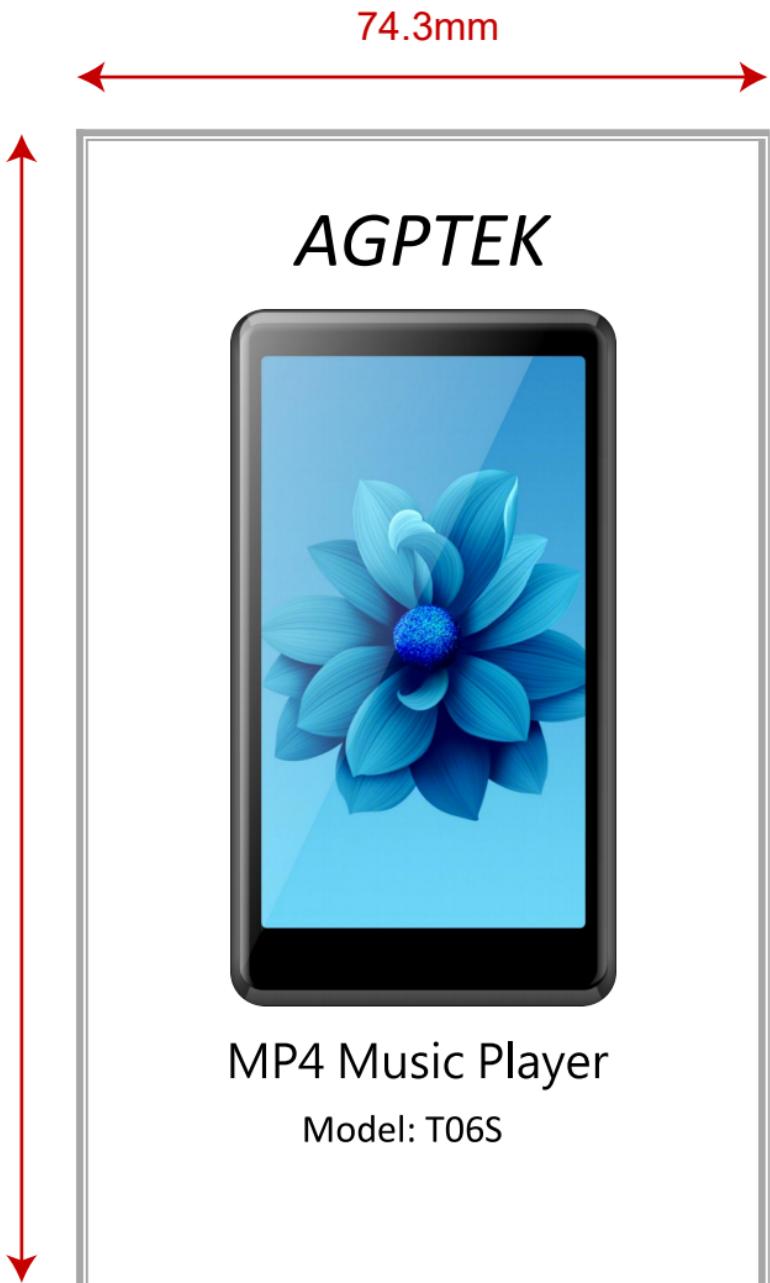

# Contents

<b>Use this Manual.....</b>	1
Notes on Battery Charging.....	1
Warm Tips.....	1
<b>Open the Package.....</b>	3
Appearance & Buttons Introduction.....	3
Basic Operation.....	3
<b>Configuration of New Device.....</b>	4
Connect to Wi-Fi Network.....	4
Connect to Bluetooth.....	5
<b>Screen and Display.....</b>	5
Home Screen.....	5
Basic Operation of Screen.....	5
Lock & Unlock Screen.....	6
<b>Notification &amp; Status.....</b>	6
Recognize the Status bar.....	6
Open Notification Bar.....	6
<b>System Functions and Settings.....</b>	6
Settings.....	6
Video.....	8
FM Radio.....	8
Music.....	8
Sound Recorder.....	9
Gallery.....	9
Camera.....	9
Calendar.....	10
Clock.....	10
File Management.....	10
TF Card Instructions.....	10
<b>FAQ.....</b>	11
<b>Specifications.....</b>	12

## Use this Manual

Please read this manual carefully before using. All illustrations in this manual are for reference only, please refer to the actual product.

## Notes on Battery Charging

1. Please use PC USB port or 5V/1A power adapter to charge.

Note: Different PCs have different current output capabilities of the USB interface, and the charging time will also be slightly different. It is recommended that when using the PC USB interface to charge, try to charge in the off state to speed up the charging speed. When charging, it is a normal phenomenon that the charger and the player have a certain temperature rise.

2. New battery needs to charge and discharge for several times to achieve optimum performance.

3. The player can be fully charged in about 3 hours normally. It is recommended to unplug it from the USB interface after charging, and please do not connect to the power supply for a long time.

4. The polymer lithium battery coming with can be recharged repeatedly.

5. The polymer lithium battery must be replaced by professionals, do not replace it by yourself. Note: if the battery is improperly replaced, there is a danger of explosion, and it can only be replaced with the same type or equivalent type of battery. In order to protect the environment, give the waste battery to a professional organization for recycling.

6. Battery life may vary with usage conditions and production time.

7. Do not expose the battery to overheated environment such as sunlight or fire.

## Warm Tips


1. It is recommended to turn down the volume of the unit before using headphones, and gradually increase the volume after you start listening until it is suitable. Don't turn up the volume too high to protect your hearing. (Doctors point out that listening at high volume for extended periods of time will damage the listener's hearing). When tinnitus occurs, turn down the volume or stop using it.

2. It is recommended to back up the personal data stored in the player before formatting.

3. Make sure that the product is in a safe place to avoid accidents and falls.
4. Over-voltage, power cable strain, bending or squeezing by heavy objects is not allowed to avoid overheating or fire disaster.
5. Please keep the product away from the electromagnetic environment, excessive humidity, smoke and other harsh environments.
6. Do not immerse the product in water, and do not use any corrosive or abrasive cleaners to clean.
7. Do not expose the product to moisture or rain. It may cause equipment failure or even hard to repair because of water and moisture penetration.
8. Please do not press the product with excessive force.
9. Please do not vibrate or hit the product violently.
10. Do not use headphones while driving, riding, operating machinery, or doing work that requires attention to outside sounds.
11. Please do not repair or disassemble the product by yourself, otherwise we will not provide you with normal after-sales service.
12. If the actual setting and using method of this product are inconsistent with this manual due to firmware upgrade, please contact us.

# Open the Package

## Appearance & Buttons Introduction

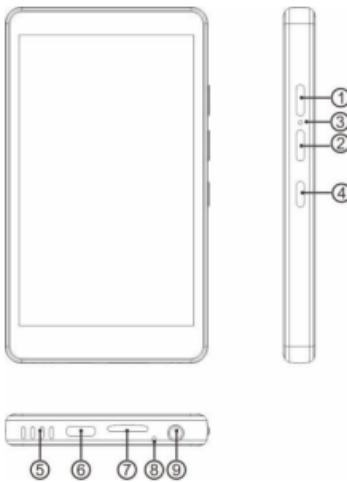

1. Volume+

2. Volume-

3. Reset Hole

4. Power on/off

Screen on/off

5. Speaker

6. USB Charging Port

7. TF Card Slot

8. Recording Hole

9. Headset Hole

# Basic Operation

## 1. Power on/off:

Hold the power button ④ to turn on/off the player. Short press button ④ to turn on/off the screen.

## 2. Main Interface Introduction:

a. Status Bar: When entering the specific function menu, the top column of the interface is the status bar, which displays these information: time, battery power, Bluetooth, WiFi.

b. Function Icons: In the main interface, the system comes with 13 icons. Directly click the icon to enter various functions or related settings for this equipment.

## 3. Volume Adjustment

- a. Press button ① to increase volume.
- b. Press button ② to decrease volume.
- c. Touch: When the volume bar pops up, you can adjust the volume by dragging the slider.

4. Reset: If the player crashes, please press the "RESET" button to reset the system and force restart. If it still cannot be turned on, check whether the product is out of power.

5. Return: Swipe from right to left or tap the upper right button "返".

6. Screenshot:

Hold button ④ and button ② at the same time to take a full-screen screenshot.

7. Virtual Function Keys Operation:

At the bottom of the screen, display the navigation bar.



- Display background hidden files interfaces.
- Return to main interface.
- Return to previous menu.

## Notes

1. After the device is operated for a long time, especially in a high temperature environment, it is a normal phenomenon that the surface might be hot. When you feel it is hot, please stop using or charging, turn off some functions as well as moving the device to a cool place. Avoid prolonged contact with hot surface.
2. If you do not use the device for a long time, please charge and discharge it at least once a month to prevent damage caused by excessive battery consumption.

**[Recommendation]:** In order to ensure the long-term use of this product, it is recommended that you buy a special charger for digital products.

## Configuration of New Device

### Connect to Wi-Fi Network

1. Swipe down from the status bar to open the notifications bar or find "Wi-Fi" in settings.
2. Turn on "Wi-Fi" switch and the system will list all detected WiFi networks.
3. Tap the Wi-Fi network you want to connect to. If you choose an encrypted network, you will need to enter a password for access connection.

## Connect to Bluetooth

1. Swipe down from the status bar to open the notifications panel or find "Bluetooth" in settings.
2. Turn on "Bluetooth" switch. Enter the Bluetooth settings interface and click to search new device.
3. Tap the name of the Bluetooth address you want to connect to and perform a pairing connection.

## Screen and Display

### Home Screen

Recognize the home screen



### Basic Operation of Screen



Tap: Touch the target once. Eg: tap to confirm selection or open the APP.



Long Press: Touch the target for more than 2 seconds. Eg: long press the blank area on home screen to enter the editing state of home screen.



**Swipe:** Swipe your finger on screen. Eg: swiping up and down or left and right on the screen, allows you to scroll through files, navigate to other home pages, or perform other actions.



**Drag:** Long press the target and move it to another location on the screen. Eg: on the home screen, drag a window widget or icon to any location.

## Lock & Unlock Screen

Set screen lock pattern and password. You can set the screen lock password for your device to protect your private information.

If you forget your password, you need to reset your device and clean up the data before use it again. Please keep your screen lock password safe.

1. Open the settings.
2. Click “Security” >Screen Lock.
3. You can choose to swipe, set pattern, PIN code or password to unlock screen.

## Notification & Status

### Recognize the Status Bar

According to the status bar, you can know the notification information and running status of the device in real time. When there are notifications, light up the device screen and swipe down from the status bar to view various messages.

### Open Notification Bar

Notification bar icon

When the notification bar is turned on, you can quickly set the screen brightness, WiFi, Bluetooth, auto-rotate mode.

## System Functions and Settings

### ❖ Settings

Find the Setting icon  on the main screen and click it to enter the setting function:

1. WLAN: After the Wi-Fi is turned on, the device will automatically search for connectable wireless network.