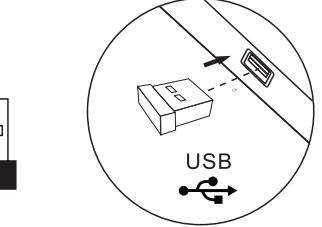


<p>FCC Warning</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,</p>	<p>which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. <p>NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p>	<p>Enjoy the mouse, enjoy your life!</p> <p>Join Community</p> <p>f i p t</p>	<p>WIRELESS MOUSE</p> <p>User Manual</p>
<p>Features</p> <ol style="list-style-type: none"> ① Operating system: Windows 7/8/10, Windows Vista, Windows XP, Mac OS or up. ② Adjustable DPI enables you to freely switch between work and gaming. ③ When you browse web pages, you can click the side (forward/backward) buttons to go to the next or previous page. ④ If the mouse you purchase is with LED light-up feature, and there is on/off switch (at the bottom of the mouse) for the LED light, you can turn it off to save power. ⑤ Special soundless design for the right and left buttons, help you build a quiet atmosphere without disturbing others. (The feature is subject to the description) <p>Charging Instruction</p> <ol style="list-style-type: none"> ① The blue light beside the scroll wheel will be on while charging and then goes off once fully charged, it takes 1-2 hours. 	<p>② It is recommended to use computer USB interface to charge the wireless mouse.</p> <p>[The charging current of the mobile phone charger or other chargers is large, which may burn the charging IC and reduce the battery lifetime and the mouse lifetime.]</p> <p></p> <p>Nano Receiver (at the bottom of the mouse) Plug and Play (at the bottom of the mouse)</p> <p>How to Use</p> <ol style="list-style-type: none"> ① Please charge the mouse for about 2 hours before using it for the first time. ② Take out the USB nano receiver (at the bottom of the mouse), insert it into the USB port of your PC. 	<p>③ Keep the mouse and receiver close, then turn on the mouse, the switch is at the bottom of the mouse.</p> <p>④ Allow a few seconds for installing automatically. Then the mouse is ready to use. If the cursor is not moving, please pull and plug the receiver again.</p> <p>Note</p> <ol style="list-style-type: none"> ① If the installation of the wireless mouse fails, take out the receiver and insert it into another USB port or device to check. ② Please make sure the battery has enough power, and the mouse is turned on. ③ If the wireless mouse does not work, try to re-pair it with your PC. Refer to the "How to Use" above. <p>Troubleshooting</p> <ol style="list-style-type: none"> ① Please fully charge it for about 2 hours before using it. DO NOT over charge the mouse, in case it shortens the battery lifetime. 	<p>② It's out of power if the mouse cursor moves slowly or stop moving. Simply charge the mouse.</p> <p>③ The USB receiver is stored at the bottom of the mouse, or packed with charging cable together.</p> <p>④ If the mouse is not used for a long time, it will automatically go to sleep, please press any mouse button or move the mouse to make it active again.</p> <p>⑤ If you are not using the mouse for a long time, please turn off the power switch manually to save power.</p> <p>We provide 1 year warranty. If you still cannot solve the problem, please feel free to contact our Customer Service Team. We'll assist you to solve any problems.</p> <p>Note: If the one you purchase is not rechargeable mouse, please prepare AAA or AA battery (not included), and install the mouse according to the "How to Use" section above.</p>