


WARNING! SKIING IS INHERENTLY DANGEROUS AND REKKIE IS NOT RESPONSIBLE FOR ANY INJURIES OR DEATHS THAT OCCUR WHILE SKIING WITH REKKIE GOGGLES. DEVICE IS ONLY INTENDED FOR ALPINE SKIING USE BY EXPERIENCED SKIERS. DO NOT USE WITH GLASSES. ALWAYS USE WITH A HELMET & BE AWARE OF YOUR SURROUNDINGS.

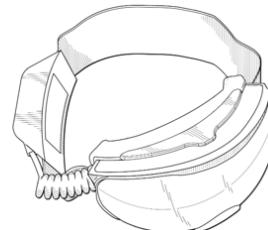

REKKIE Ski Goggles | Model: REKKIE SKI-1





Quick Start Guide

What's Included:

- REKKIE Goggles
- USB-C Charging Cable
- Goggle Pouch (doubles as a lens cleaning cloth)

First Use Setup:

1. Download the REKKIE iOS APP from the App Store | QR CODE →
2. Charge goggles with included USB-C (or any other USB-C) cable until indicator light switches from red to green
3. Turn goggles to the ON position
4. Launch the REKKIE APP, follow the signup process, then use the “Goggles” tab on the app to pair your goggles with your phone
5. Check for firmware update: after pairing with your goggles you may be prompted on the app to update, or go to the “Goggles” tab in the app and select “Advanced” settings and scroll to the bottom to see if an update is available
6. Create a group and invite your friends or ask your friends to send you a link to join their group
7. Have a blast on the slopes!

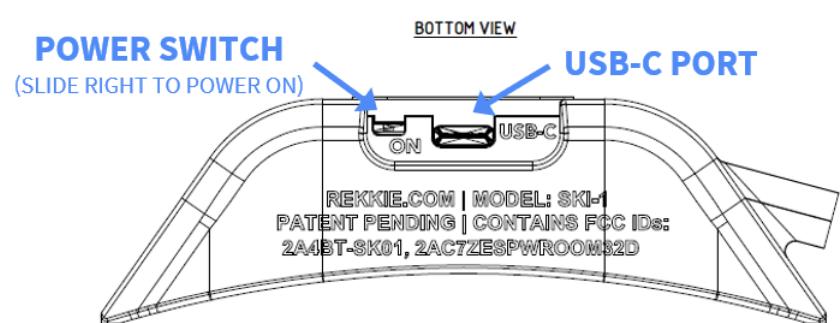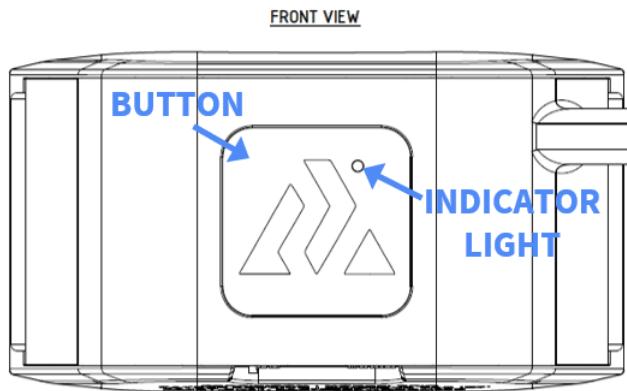

WARNING: The Federal Communications Commission warns that changes or modifications of the radio module within this device not expressly approved by Heads Up Goggles LLC (REKKIE) could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1. Reorient or relocate the receiving antenna. 2. Increase the separation between the equipment and receiver. 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. 4. Consult the dealer or an experienced radio/TV technician for help.

Full User Manual + FAQ & Troubleshooting | <https://rekkie.com/pages/user-manual>