

# AMZANE PRO

## K8

### USER MANUAL

#### Wireless Earbuds

**Welcome**  
Thank you for purchasing of our AMZANE true wireless Earbuds.  
Please read over our user manual carefully and retain it for future reference.

#### Specification:

1. Bluetooth Version: BT5.3+EDR
2. Support: HSP/HFP/A2DP/AVRCP
3. Transmission Range: 33 feet (If there are no obstructions)
4. Distortion: <1%
5. Earbuds Playback Time: Approximately 7-10 hours

(High quality music and high volume may accelerate battery consumption);  
50% volume:10 hours playtime  
60% volume:9 hours playtime  
80% volume:8 hours playtime  
100% volume:7 hours playtime)

6. Earbud Charging Time: Approximately 1.5 hours;
7. Charging Case Charging Time: - 1 -

8. Earbuds Battery Voltage/Capacity:(Li-Pol battery inside) 3.7V/40mAh
9. Charging Case Battery Voltage /Capacity: 3.7V/500mAh

Remove the protective film from the charging case before using the earbuds for the first time. Charge the earbuds fully before first use.

#### How to Charge Correctly

With USB-C cable: Connect the USB C cable to a power source in order to charge both the earbuds and charging case together.

- **Charging Case:**  
**Charging in Progress:** The digital display number increases from 1-100  
**Fully Charged:** The digital display number reads 100 all the time.
- **Earbuds:**  
**Charging in Progress:** The earbud indicator light is red and the charging case's digital display bars increase the

first to the fourth  
**Fully Charged:** The red indicator light on the earbuds will disappear and the charging case's digital display columns will disappear.

Without USB C cable : A charged case with charge the earbuds even without connection to a power source

- **Charging Case:**  
**Charging in Progress:** Digital display number from 100 to decrease  
**Charging Complete:** Digital display number disappears
- **Earbuds:**  
**Charging in Progress:** The earbud indicator light is red and the charging case's digital display bars increase the first to the fourth  
**Fully Charged:** The red indicator light on the earbuds will disappear and the charging case's digital display columns will disappear.

- ❖ If you use the earbuds with the large ear tips and the battery runs out, please note that the size of the large ear tip can prevent the earbuds from fitting well into the charging case. Press down on the earbuds when returning them to the charging case. This pressure will allow the earbuds to connect completely with the charging case pin.
- ❖ The indicator lights will turn red to show that the earbuds are charging normally. Alternatively, you can take off the large ear tips to charge.

(If you don't see a red indicator light on the earbuds, use alcohol to wipe both earbuds'charging ports, as well as the charging case's charging pins. Ensure the pins between the earbuds and the charging case are connected securely.)  
**The earbuds have a playtime of 7 - 10 hours on a single charge. The charging case can recharge the earbuds 2.5 times, so you can**

get 35 hours total playtime from a fully charged charging case.

Note: If the earbuds are charged fully by the charging case, when you plug in the USB C cable, the red indicator lights on the earbuds will not display - only the charging case's digital number will flash. Even if you take the earbuds out of the charging case, and put them down, the red indicator lights will not display. This is normal, because the earbuds aren't consuming any battery power. This design saves the battery of both the earbuds and the charging case. You can use the two earbuds to listen to music as normal.

#### Power on :

- Method 1:** Remove the two earbuds from the charging case, they will turn on and connect with each other automatically
- Method 2:** When the earbuds are powered off, touch both earbud buttons for 3 seconds.

(The indicator lights on both earbuds will turn blue for 1 second).

#### Power off:

- Method 1:** Put the two earbuds back into the charging case.(The earbuds' indicator lights will turn red)
- Method 2:**When the 2 earbuds are powered on, touch both earbud buttons for 5 seconds.(The indicator lights on both earbuds will turn red for 1 second).

Functions	Operations
Play/Pause a song	<b>Quick Double Touch</b> (of any Earbud)
Next Track	<b>Long Touch 1s</b> R Earbud
Previous Track	<b>Long Touch 1s</b> L Earbud
Answer/End a Call	<b>Quick Double Touch</b> (of any Earbud)
Reject an Incoming call	<b>Long Touch 1s</b> (of any Earbud)

Activate Siri	<b>Quick Triple Touch</b> (of any Earbud)
Volume+	<b>Touch Once</b> R Earbud
Volume-	<b>Touch Once</b> L Earbud



The touchpad area on the earbuds is indicated in the photo below .

- ◆ Q: How do i Adjust the Volume ? the volume is a little low ?  
**A: After you pair the 2 earbuds with your phone.**  
**First, If your phone is IOS SYSTEM, Please Touch Once R Earbud.**  
**Second, If your phone is Android SYSTEM, Please Firstly Touch Once R Earbud, then Add up the Volume by Your phone.**  
Because iPhone and Android are different system protocol, so the operation is different.

- ❖ If some functions of the Bluetooth earbuds are not available with your phone app, check to see if the phone's operating system is compatible with the app. Also, you can:  
- update your app version  
-download a different app

-update your phone's operating system

- ❖ Due to signal disruptions present in different environments, the earbuds might not work properly. For example, you might hear abnormalities from the earbuds (such as arbitrary noises). Please put the earbuds into the charging case for 10 secs, then remove and reconnect them with your device again.the problem will be solved.

- ❖ When you have an incoming call, please Double Touch the earbud button to receive the call, If you use your phone to receive the call, the audio will go through the phone, not the earbuds.

#### Pairing

1. Remove earbuds from the charging case.
2. Wait for 5 seconds, Once one of

earbud's indicator light flashes red and blue, and the other earbud's indicator light flashes blue, then the earbuds are paired successfully.

3. Open the bluetooth of your device, search and click the model "AMZANE PRO". the Earbuds will pair successfully with your device.

- ❖ Because the earbuds have a primary/secondary designation, the batteries are different. The battery of the primary earbud dies faster than that of the secondary earbud. This is normal.

#### Note:

1. If you have purchased 2 or more sets of earbuds from our company. Please pair each set separately. When you want to use them, pair the two earbuds from one set with your phone first, then next pair the earbuds of the other set.

2. Please do not pair one earbud from one set with an earbud from a different set. This will affect normal use. (For example, 1. If you want to use one earbud, your spouse wants to use the other one ,please ensure that these two earbuds come from the same set. 2. If you want to use one set of earbuds for yourself for one device, after you have paired the matching earbuds together, then your spouse can open the second pair.

Notice:When you are listening to music and you receive a call suddenly,after you finish the call,you might have trouble restarting the music, Just replace the earbuds into the charging case. Once the earbuds' indicator lights are red,then remove the earbuds from the case. The problem will be solved.

#### Questions&Answers

- ◆ Q:The Earbuds can't be charged by the

#### charging case?

A: **Firstly:Confirm that the charging case has power**

If the power level of the charging case is low or empty, the charging case cannot recognize the earbuds when you insert them,Therefore, the earbuds cannot be charged.. If the charging case can't be charged normally, Please **try different USB C cable to charge.**

**Secondly:**Ensure that you have removed the plastic film used to protect the earbuds during shipping from the charging case.

**Thirdly:** Use alcohol to wipe the charging ports of both earbuds as well as the charging pin of the charging case. Allow to dry before replacing the earbuds into the case.

**Fourthly:**Ensure that the charging pins in the charging case don't go down.

Only the earbuds are being successfully charged when the earbud indicator light is red and the charging case's digital display

bars move up and down.

- ◆ Q:Why can I pair the earbuds with my phone, but not with my PC?

A: Once you have paired the earbuds with a device, they will connect automatically with that device the next time you use them. You must end that connection before making a new one.

Before you attempt to pair the earbuds with your PC or other new device, make sure you have turned off or "forgotten" the Bluetooth model "AMZANE PRO" from your phone or original device.

- ◆ Q:Why is sound coming from only one earbud? I can't pair the earbuds with each other.

A. Forget the original "AMZANE PRO " bluetooth model from your phone, and **close your device's bluetooth.**

B. Put earbuds into the charging case, **once the earbuds indicator light are red for 3secs,**

then remove the earbuds from the charging case. the 2 earbuds will pair with each other successfully

(one of the earbud's indicator light flashes red and blue, and the other earbud's indicator light flashes blue, then the earbuds are paired successfully.)

C.Open the bluetooth of your device, search and click the model "AMZANE PRO", it will connect with your device.

Note: If your device can't find the bluetooth model of"AMZANE PRO", close,then reopen the Bluetooth option and search again.

- ◆ Q:How can i use only one earbud with my phone?

A:Forget the original pairing model "AMZANE PRO " from your phone.  
B. Put both earbuds in the charging case,press then down. The indicator lights will turn red. This shows that the earbuds are being charged. Charge them fully to use.

C. Remove only one earbud from the charging case.Its indicator light will flash red and blue  
D.Open the bluetooth of your phone , search and click the model "AMZANE PRO", then single earbud will connect with your phone successfully.

Please Try the above tips one by one.They will help you connect only one earbud. If you want to connect with just one earbud, remove only one earbud from the charging case.

#### Safety Precautions:

The earbuds and charging case are of excellent quality. To extend the life of this product, follow these instructions:  
1.Keep this product away from extreme heat,or corrosive environments.  
2.Prevent this product from being struck or dropped,warping,etc.  
3.Don't dismantle the Earbuds or Charging

Case.  
4.Don't overcharge this product for a long time, as this will decrease the battery service life.  
5.Stop using this product immediately if it causes discomfort or pain.  
6.Use DC-5V 1A chargers/adapters certified by a regulated manufacturer.Recharging and discharging the headphones repeatedly will lead to decrease in battery performance over time,which is normal for all rechargeable batteries.(Don't press the elastic pin contact point, which can cause the product to function incorrectly.)

#### Note:

Please charge the 2 Earbuds and the charging box at least once every 3 months, if you will not be using the earbuds for an extended period of time, fully charge the charging case and then disconnect it from the power source.  
Find us to get any helps,warranty and surprise prize  
Web: amzane.shop  
Email:AMZANEaftersale@gmail.com  
After you contact us, If you do not receive a timely response from us, check to see if our email is in your spam mailbox.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the

equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2A4PCK8