 


HOUSBAY

RS6 User Manual

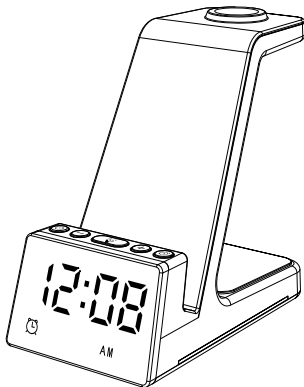

1 Year Warranty

If a faulty product is found when setting up
please Email us at **Support@housbaytech.com**

TIPS: Battery backup is for saving TIME and ALARM settings only. It cannot be used to charge your device. Please keep plugged in!

Please read all the instructions carefully and keep this in a safe place for future reference.

Instructional Video

Please scan the QR code here to access the instructional video of this product.



Power Specifications

AC, 100-240V, 50-60Hz 0.5A Max

DC, 5V-3A/9V-2A/12V-1.5A

 
Features

- Wireless Charging (Phone/Watch/Headphone)
- 9 Minutes Snooze
- 1-3 Levels Adjustable Volume
- 5 Levels of the Display Dimmer
- 12/24H Mode
- Battery Backup (Only Memory Function)
- LED indicator light


Package Include

- 1* 4 in 1 Wireless Charging Station
- 1* 1.5m USB-C Charging Cord
- 1* Adapter
- 1* User manual
- 1* CR2025 Battery


Front View

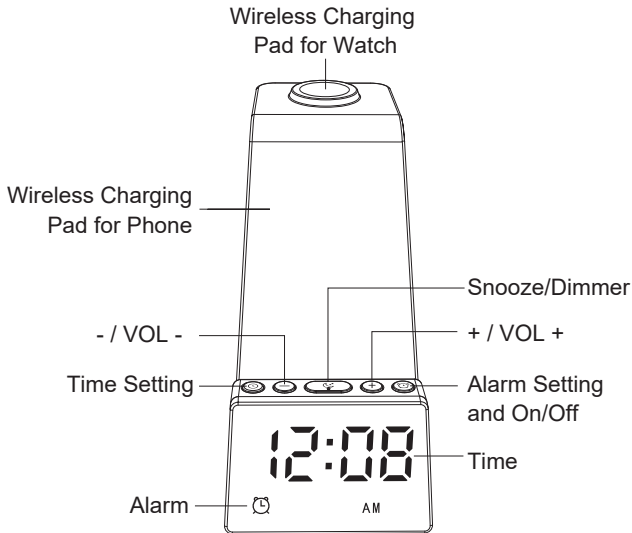

Back View

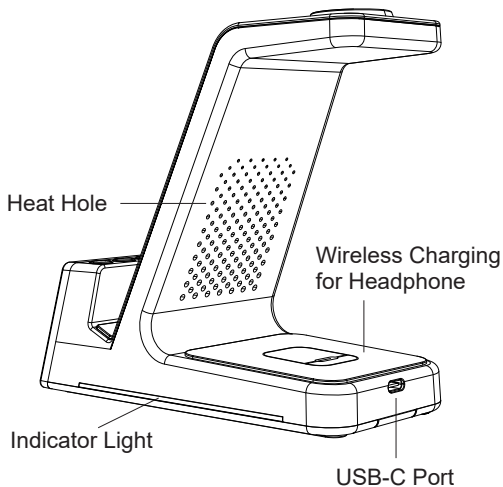 


Bottom View

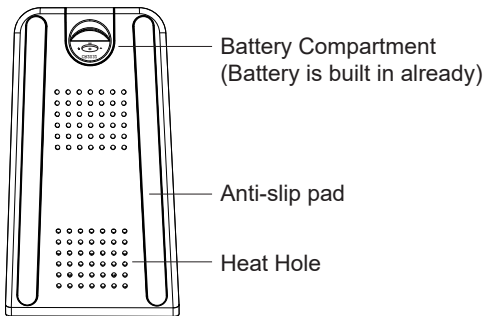 




Getting Started

1. Plug the adaptor into a standard household outlet, you will see 12:00 on the display and the clock is ready to be set.
2. Please remove the battery tab before use.

 
Notice:




1. If the display is “blank” after plugging in, please press repeatedly the “” button to check whether the display dimmer is at bright position.
2. Under the battery power, the display will go blank and preset alarm will not go off.
3. Once the battery is removed and with an interruption of power, the time and alarm need to be reset when the power comes back.


Time Setting

1. Press the “” TIME button to enter HOUR setting. The HOUR digits will flash on the display. Press “” or “” button to advance to the correct hour.

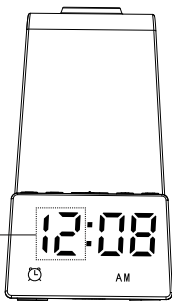HOUR Flashes



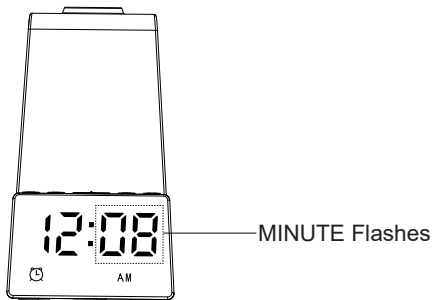 


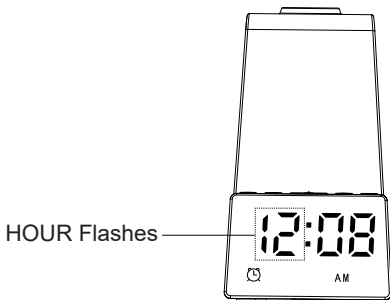 
2. Press the “  ” TIME button to confirm and enter MINUTE setting. When the MINUTE digits flash, press “  ” or “  ” button to advance to the correct minute.






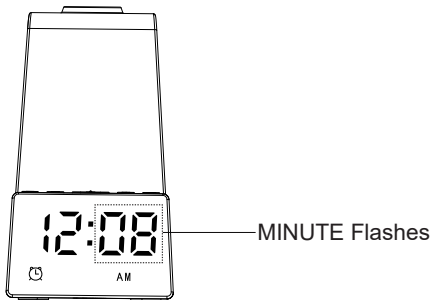 
3. Press the “ ⌚ ” TIME button to confirm and enter time format (12/24H) setting. Press “ — ” or “ + ” button to select time format. When using the 12-hour time format, AM/PM icon will appear on the display to suggest morning/afternoon time.
4. Press the “ ⌚ ” TIME button to confirm and exit the time setting mode.


Alarm Setting

1. Press the “  ” button to enter ALARM HOUR setting. The HOUR digits will flash on the display. Press the “  ” or “  ” button to advance to the desired hour.



 
2. Press the “  ” button to enter ALARM MINUTE setting. The MINUTE digits will flash on the display. Press the “  ” or “  ” button to advance to the desired minute.



3. Press the “  ” button to confirm and exit the alarm setting mode.




Alarm Volume Setting

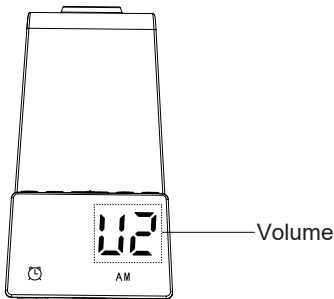When you exit the time/alarm setting, press the “ — ” or “ + ” button to select the volume from 1-3 levels and a number will be shown on the display.






Alarm Pause & Snooze


When the alarm goes off, you have two options:

1. Press “” button to stop the alarm when it's ringing. Alarm will go off on the next day.
2. Press “” button to snooze, the indicator “” will flash on the display. The alarm will go off again 9 minutes later.

Alarm On/Off

 
Press the “” button to turn on alarm. Press and hold the “” button for 2 seconds to completely turn off alarm and the indicator “” will disappear on the display. The alarm will NOT go off on the next day.

Brightness Control

Press repeatedly the “” button to choose the display brightness of the alarm clock. (It can be adjusted to 0-4 levels)

Wireless Charging Function

Place your device in the correct position, the indicator light on both sides will light up for 5 seconds and then turn off.

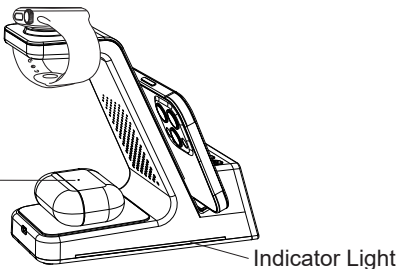

Notice:

1. The indicator light on both sides will alert you by flashing if there is a foreign object on the wireless charging pad.
2. Please remove any protective cases containing magnets, metal, or materials thicker than 0.19'(5mm).
3. Please make sure that your headphone's indicator light is facing upwards when charging.

Wireless Charging Compatible Models

1. Compatible phones : iPhone 13/13 Mini/13 Pro/13 Pro Max/12/12 Mini/12 Pro/12 Pro Max/11/11 Pro/11 Pro Max/XS/Max/XS/ XR/ X/8/ 8 Plus, Samsung Galaxy Note 9/Note8 /S8/ S8 Plus/ S7/ S7 Edge/ S6 Edge Plus/ S9/S10/ S10 Plus/S10E, LG V30,Nexus 7/6/5, and other enabled wireless charging phones.
2. Compatible watches : iWatch SE/ 6/5/4/3/2, and more.
3. Compatible headphone : Galaxy Buds, Wireless Apple AirPods and more.

Battery Operated Setting

Install 1* CR2025 battery into Battery Compartment.
(Battery is built in already)

Notice:

Battery backup is for saving TIME and ALARM settings only. It cannot be used to charge your device.

Support

The 4-in-1 wireless charging station comes with one year warranty. If you have any issue with this wireless charger station, please contact us at **Support@housbaytech.com**. We will address your issue within 24 hours.

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement : This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.