


LAN TURTLE HUB

- 1 Plug the LAN Turtle Hub's USB-C cable into your computer.
- 2 Once the LAN Turtle Hub blinks magenta, browse to <http://172.16.84.1:1471>
- 3 Follow the setup wizard to configure the device from your web browser.

To the target computer, the LAN Turtle Hub looks just like a regular USB hub with Ethernet adapter — but it also gives you remote access to the network over a pre-configured VPN, SSH or Cloud C² server.

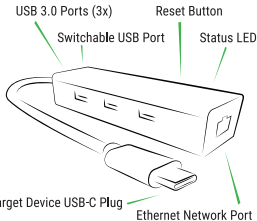

Access from anywhere online.
Free download at c2.hak5.org

STATEMENT OF CONDITIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning (Part 15.21) Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. RF Exposure (FCC Part 15.105) To comply with FCC RF exposure requirements for mobile transmitting devices, this transmitter should only be used or installed at locations where there is at least 20cm separation distance between the antenna and all persons. Information to the User - Part 15.105 (b) Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: * Reorient or relocate the receiving antenna. * Increase the separation between the equipment and receiver. * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. * Consult the dealer or an experienced radio/TV technician for help.

LAN Turtle is a trademark of Hak5 LLC. This product is packaged with a limited warranty, the acceptance of which is a condition of sale. See Hak5.org for additional warranty details and limitations. Availability and performance of certain features, services and applications are device and network dependent and may not be available in all areas; additional terms, conditions and/or changes may apply. All features, functionality and other product specifications are subject to change without notice or obligation. Hak5 LLC reserves the right to make changes to the product(s) described herein. Made in China. Designed in San Francisco by Hak5 LLC, 750 N Saint Pauli St STE 250 #39371 Dallas, TX, 75201



GETTING STARTED

 [Full documentation at docs.hak5.org](https://docs.hak5.org)

To set up the LAN Turtle Hub, connect it to a computer using the USB-C cable. The first boot will take several minutes as unique keys are generated. Once the LED is blinking magenta, it's ready to be configured.

Navigate to <http://172.16.84.1:1471> to access the web interface and follow the prompts to set up and configure the device. Full documentation at <https://docs.hak5.org>



LED STATUS INDICATIONS

BLINKING GREEN		Booting
SOLID RED		Error
BLINKING MAGENTA		Setup Mode



SAFETY INFORMATION AND WARNINGS

Your device may get hot to the touch; this is normal. Unplug the device and let it cool before removing it. This device complies with applicable surface temperature standards and limits defined by the International Standard for Safety (IEC 60950-1). Still, sustained contact with warm surfaces for long periods of time may cause discomfort or injury. Keep the device in a well-ventilated area when in use. Allow for adequate air circulation under and around the device. Do not expose the device to water or extreme conditions (moisture, heat, cold, dust), as the device may malfunction or cease to work when exposed to such elements. Do not attempt to disassemble or repair the device yourself. Doing so voids the limited warranty and could harm you or the device. This device is not designed, manufactured or intended for use in hazardous environments requiring fail-safe performance in which the failure of the device could lead directly to death, personal injury, or severe physical or environmental damage.

LAN Turtle is a network administration and pentesting tool for authorized auditing and security analysis purposes only where permitted subject to local and international laws where applicable. Users are solely responsible for compliance with all laws of their locality. Hak5 LLC and affiliates claim no responsibility for unauthorized or unlawful use. © Hak5 LLC.

SPECIFICATIONS

INTERFACE: ETHERNET, WI-FI, USB
STANDARDS: USB 2.0, 802.11b/g/n
FREQUENCY RANGE: 2.412 ~ 2.4835 GHz
POWER: 5W (USB 5V 1A)
STORAGE TEMPERATURE: -20°C ~ 50°C
RELATIVE HUMIDITY: 0% to 90% (noncondensing)



[Full documentation at docs.hak5.org](https://docs.hak5.org)