- 1. 按住主体按键(<sup>0</sup>) 3 秒启动产品, 10 种震动模式 可 以选择,长按关闭。
- 2.按住遥控器按键( )3秒开启遥控器,长按关闭。
- 3.按住遥控器按键( ) 1 秒启动大马达震动功能,10 种震动模式可以选择,长按关闭。
- 4.按住遥控器按键(波浪)1秒启动小马达震动功能,10种震动模式。
- 5.LED 状态指示灯说明:开启状态:白灯长亮
- 6.低电量(充电提醒):全部白灯闪烁充电中:白灯循环闪烁充电完成:全部白灯长亮。
- 1. Press and hold the main button ( ) for 3 seconds to activate the product, 10 vibration modes can be selected, press and hold to switch off.
- 2. Press and hold the remote control button ( ) for 3 seconds to turn on the remote control, press and hold to turn off.
- 3. Press and hold the remote control button ( ) for 1 second to activate the large motor vibration function, 10 vibration modes can be selected, press and hold to switch off.
- 4. Press and hold the remote control button (Wave) for 1 second to activate the small motor vibration function, 10 vibration modes are available.
- 5. LED status indicator: on status: white light on
- 6. Low battery (charging reminder): all white lights flashing Charging in progress: white lights cycling flashing Charging complete: all white lights on.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.