


AiMoonsa®

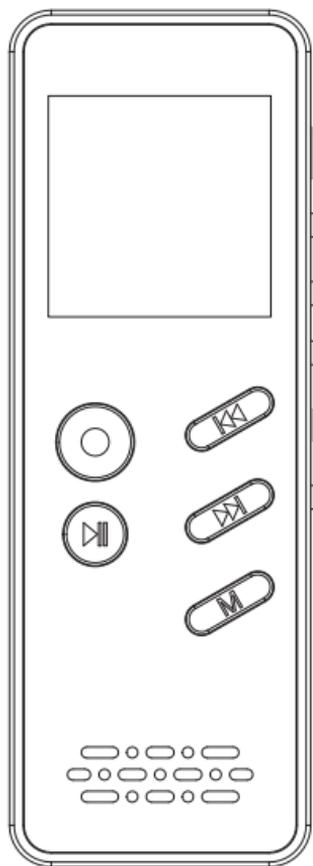

User Manual

Digital Voice Recorder

EN DE FR IT ES

About Aimoonsa

Thank you for buying **Aimoonsa** product. For better user experience, please read this [Manual] carefully before using it.

PS: Hope this [Manual] is helpful for you to use the Digital Voice Recorder in a proper way.


Contact & Warranty

All **Aimoonsa** products come with a limited warranty of 12 months since purchase date. And we have professional service team for your support as soon as we can. If you have any questions about our product or the Warranty, please feel free to contact us:

Aimoonsa@hotmail.com

We will do our best to help you solve the problem until you are satisfied.

Parts and Controls

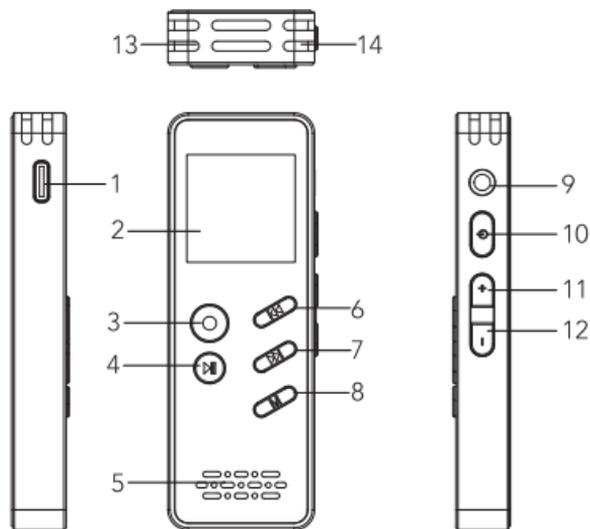

1. USB Port
2. Display Screen
3. Record key
4. Play key/Confirm key
5. Speaker
6. Previous key
7. Next key
8. Back key/Menu key
9. Headphone Jack
10. Power key/Lock Screen key
11. Volume + key
12. Volume – key
- 13&14. MIC

Function Description

Power on & off: Press and hold the side “power” key to turn on or off, and then press the “power” key to lock or unlock the display when the power is on.

Note: This machine has a power-saving function. If it is not operated in the time corresponding to the "Backlight Timer" setting, the display will be locked automatically.

Volume adjustment: Press the side volume “+/-” keys to adjust the volume.

Pause/Play: Press the “play” key to pause/resume recording playback/music.

Delete function: in the folder view directory, select music or recording files, and long-press the “play” key to delete.

Note: This feature is only available in Folder Options.

Previous/Next: During the playback of voice, music or recording, press the “Previous/Next” key to switch between “Previous/Next”.

Fast forward/rewind: During the playback of voice, music or recording, long press the "next/previous" key for "fast forward/rewind" function.

Back/open submenu function: short press the “M” key to return to the function (the main interface has no response); in the process of music playback or recording playback, long press the “M” key to enter the submenu.

Submenu

Back to the main page: Back to the main page after selection.

Variable Speed Playback: Adjusts the playback speed of the song (-9/9) rating.

Repeat Playback: Including loop all, shuffle, loop single.

Bookmark:

There are 5 bookmark options each for music and recording playback; Press the “play” key to select the blank bookmark option to save the current music/recording time point;

Press the “play” key to select the saved bookmark, enter the save time point to play music/recording;

Long press the “play” key to select the saved bookmark and select “Yes/No” to delete the bookmark record.

Add to playlist: Add the currently playing music/recording to "Music" – "Favorites".

Equalizer: set Normal, Pop, Rock, Jazz, Classical, Dance, Country, etc.

A–B repeat setting: During the playback of voice, music or recording, long press the “play” key, the “A–B” icon in the interface will turn blue, which means the content to be repeated starts, long press the “play” key again, and the “A–B” icon will change to Green, start repeating the selected content, long press the “play” key again to exit the A–B repeat mode.

Main Page

The main page has 5 applications: Music, Folder, Recorder, Bluetooth, and Settings.

MUSIC

Under “Music” there are options: Last Played, All Songs, Artists, Albums, Favorites, etc.

Recording

One–key recording: Press the “record” key in the power–on state to start recording, and press the “record” key again during the recording process to save the recording.

Recordings library: Select the recording file to be played, and press the “play” key to play the current recording.

Recording bit rate: WAV format (PCM linear recording) has the following three bit rates: 512kbps/1536kbps/3072kbps.

Note: Noise reduction is not supported for 1536kbps and 3072kbps.

Recording scene: including "closeure, meeting, interview, teaching, station", choose according to your own scene.

Recording segment: It can be set to be off or on, including 30 minutes, 60 minutes, and 120 minutes are optional, and the recording file is automatically saved according to the set time length during the recording process.

Voice–activated recording: The voice control function can be set to off or on.

Note: After "Open Voice Control" is turned on, in the recording state, the machine will automatically sense the surrounding sound. When the surrounding sound reaches a certain standard (about 60–65db), the machine will automatically record. If it is lower than the standard, it will automatically pause the recording. In important environments, it is recommended not to use this function.

Recording monitor: After turning it on, you can hear the sound being recorded in real time by plugging in the headphones during recording.

The recording monitoring function and the voice-activated recording cannot be effective at the same time; After recording monitoring is turned on, headphones must be plugged in when recording.

Timing recording: You can set the timing recording, turn on/off the “Timing recording”, “start time”, “finish time”, and “timing cycle” 4 options.

Note: To enable this function, the time must be set to your time

BLUETOOTH

Switch between music mode and phone mode:

In the mode options, short press the “play” key to switch between music mode and phone mode.

Note: Bluetooth must be turned off when switching, otherwise the mode cannot be switched.

1. music mode: Use a Bluetooth headset/speaker to connect to the machine to listen to music playback and recording playback.

Select the “Bluetooth” option in the music Bluetooth mode, short press the “play” key to turn on the Bluetooth;

Select “Available Devices” – “Search Devices”, search for the name of the Bluetooth device to be connected, and short press the “play” key to connect to Bluetooth.

“Paired Devices”: Switch connected Bluetooth devices.

2.phone mode: After using the mobile phone to connect to the recorder, you can use the recorder to answer/hang up calls, calls and call recordings.

a. Select the “Bluetooth” option in the call mode, and short press the “play” key to turn on the Bluetooth;

b. When the bluetooth is on, use the bluetooth of the mobile phone to search for the device;

c. After the connection is successful, the machine automatically accesses the audio of the call, and when the mobile phone caller ID is displayed, the machine interface synchronizes the phone caller ID display;

d. Short press the “play” key to connect the call or long press the “play” key to hang up the call;

e. After connecting the phone, the machine will automatically record the call, short press the “record” key to end or start recording;

(Note: You can switch to other audio in the phone call interface)

The first line of the call recording interface is the call duration, and the second line is the recording time.

The call recording is in "Recorder" – "Recording Library" or in "Folder → record", the file name has "phone".

Note:

In order to ensure the quality of the call, please ensure that the distance between the recorder and the mobile phone does not exceed 3 meters, and the distance between the recorder and you does not exceed 0.5 meters;

Temporarily support the call recording function of all Apple series and some Android phones;

If the bluetooth cannot be connected, please restart the phone and reconnect the bluetooth.

Folder

In the folder option, you can browse/play all music and recording files; after selecting a file, long press the "play" key to delete it.

Settings

1. Language: Set the language such as "English, 中文, Français, Deutsch, Italiano, Español".

2. Date & time: Set the Date and Time. During the setting process, short press the "up" and "down" to adjust the number, short press the "play" key to confirm and move the option, and short press the "M" key to exit.

3. Brightness: Set the display brightness.

4. Backlight Timer: Set the on/off switch of the display screen; set the screen saver switch; set the screen-off time; set the time for the screen saver to display continuously.

5. Idle Shutdown: set the switch of idle shutdown, and set the idle shutdown time.

6. Information: software version information. Check the total storage capacity and remaining capacity of the unit.

7. Factory Settings: restore the factory setting option.

8. Update Playlist: Force update playlist, bookmarks and favorites will be reset after this option update playlist.

9. Update the firmware from native storage: After copying the firmware to the machine, select this option to update the firmware.

10. Power-on Password: Password switch, you need to enter the password when you turn it on; modify the password, modify the power-on password. The universal password is "9999". If you forget the password, enter "9999" to confirm and directly enter the main interface.

Connect with PC

In the power-on state, connect the PC and the recorder with a USB cable. When the main interface of the machine appears: transfer files and charging only interface, short press the "play" key to confirm the "transfer files" option.

If a green arrow appears in the lower right corner of the computer interface, it means that the player has been successfully connected to the computer.

If you select "Charge only", it will only charge and not connect to the computer.

How to deal with common problems

1. The player cannot be turned on.

Please check if the battery is exhausted, connect it to a computer or a charger to charge it and try to turn it on again.

2. No sound can be heard in the headset.

Please check if the volume is set to zero.

Please check that the earphones are properly inserted into the earphone jack.

3. Serious noise.

Please check that the plug of the headset is clean, dirt can cause noise.

Please check whether the music file is damaged, you can try to play other music files to confirm;

If the file is corrupted it may cause severe noise or skipping.

4. Can't connect with Bluetooth.

Please confirm that the Bluetooth device is paired;

Delete all connected devices, turn off the Bluetooth of the machine or restart the machine and try again;

Or restart the bluetooth speaker, bluetooth headset, mobile phone and try again.

5. Can't download files.

Please confirm whether the connection between the computer and the player is correct.

Please confirm whether the storage space of the internal memory is full.

Check if the USB cable is damaged.



Made in China
AiMoonsa 1.0



RoHs



UK
CA



@Valmaster Consulting GmbH
Bettmass, 30
60329 Frankfurt am Main, Germany
contact@valmaster.com



EVATOST CONSULTING LTD
Suite 11, First Floor, May Road Business
Centre, Telford, Shropshire, UK, CF15 7QR
contact@valmaster.com

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.