

材质：128g双铜

 
 
单页尺寸：70×120mm

展开尺寸：432×120mm

装订方式：风琴折页，


● C:0 M:100 Y:60 K:0

● C:100 M:100 Y:100 K:100

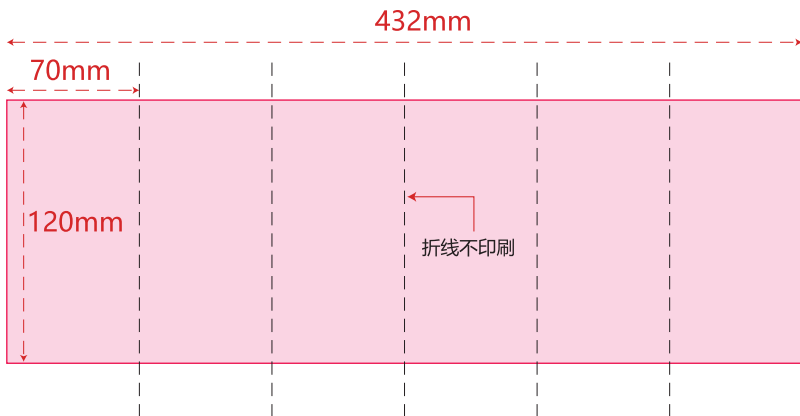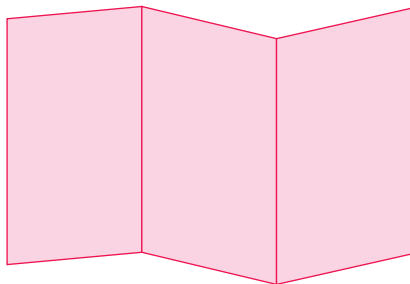

*此页不印刷

 User Manual

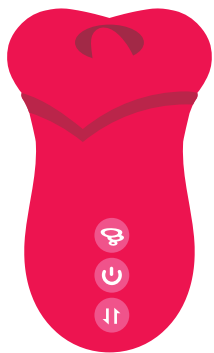

Note: Colors may differ from the image

Name:Lips

US/CA Official Support:

✉ service@sovokn.com

☎ **+1(888) 519-8831**

[Mon-Fri, 09:00 - 22:00 hrs EST]

Discover JOYHUB APP

 
- Enjoy remote control, custom vibration patterns, and more.
- Disfruta del control remoto, patrones de vibración personalizados y mucho más.



support@joyhub.net

- Download now by scanning the QR code or find us on:
Apple App Store / Android APK
- Descárgala ahora escaneando el código QR o encuéntranos en:
Apple App Store / APK para Android

Connect with JOYHUB APP

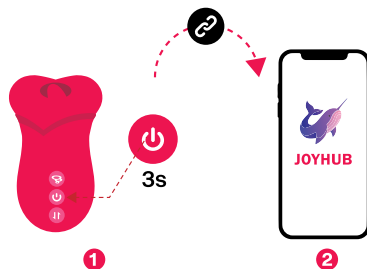

Turn on the toy

Press and hold the power button for 3 seconds until the light turns on.

Enciende el juguete

Presiona y mantén presionado el botón de encendido durante 3 segundos hasta que la luz se encienda.

Open the JOYHUB APP

Ensure Bluetooth is enabled on your phone.

 
Abrela APP de JOYHUB

Asegúrate de que el Bluetooth esté activado en tu teléfono.

Tips for a successeul connection

- Fully charge the device before pairing
- Keep the toy powered ON during pairing
- Close and reopen the app if Bluetooth fails to connect
- Restart your phone if needed

Connect with JOYHUB APP

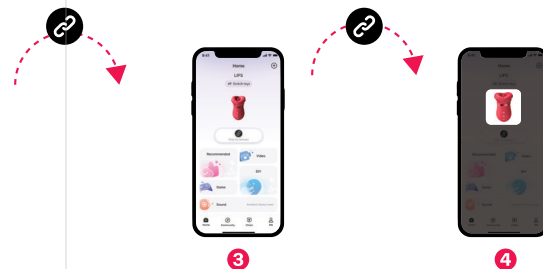

Connection refresh

The app will automatically detect the toy. If it doesn't, try restarting the toy or refreshing the connection in the app.

Actualización de conexión

La app detectará automáticamente el juguete. Si no lo hace, intenta reiniciar el juguete o actualizar la conexión desde la app.

Connection successful

Once connected, you can now explore multiple vibration modes, patterns, and remote control options.

Conexión exitosa

 
Una vez conectado, ahora puedes explorar múltiples modos de vibración, patrones y opciones de control remoto.

Consejos para una conexión exitosa

- Carga completamente el dispositivo antes de emparejar
- Mantén el juguete ENCENDIDO durante el emparejamiento
- Cierra y vuelve a abrir la app si el Bluetooth no se conecta
- Reinicia tu teléfono si es necesario

APP Features & Fun

Unlocks a new world of pleasure for you!
¡Desbloquea un nuevo mundo de placer para ti!

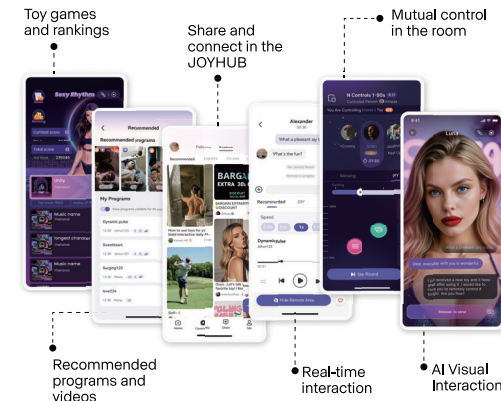

With JOYHUB, interact with AI companions and experience mutual control in both solo and multiplayer rooms. Enjoy recommended modes and videos, freely customize your toy's vibration patterns, play exciting games, and explore boundless fun.

Con JOYHUB, interactúa con compañeros de IA y experimenta el control mutuo en salas individuales y multijugador. Disfruta de modos y videos recomendados, personaliza libremente los patrones de vibración de tu juguete, juega a emocionantes juegos y explora una diversión sin límites.

TIP

Explore these features in a private space with full control. Use them to relieve stress, discover joy, and Feel The Kissable Desire.

Explora estas funciones en un espacio privado con control total. Usalas para aliviar el estrés, descubrir el placer y Sentir El Deseo Besable.



 
US/CA Official Support:

✉ service@sovokn.com

☎ **+1(888) 519-8831**

[Mon-Fri, 09:00 - 22:00 hrs EST]

How to Use

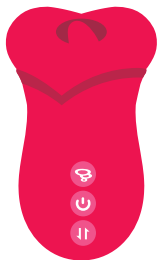

Power Button Functions:

Turn On/Off: Press and hold for 3 seconds
Switch Modes [Vibration/Licking/Biting]: Short press to cycle through modes

Funciones del botón de encendido:

Encender/Apagar: Mantén presionado durante 3 segundos
Cambiar modos (Vibración/Lamer/Morder): Presiona brevemente para cambiar de modo

Stop Current Mode: Press and hold to stop

Automatic Sucking Modes: Short press to switch between modes

 
Detener modo actual: Mantén presionado para detener

Modos automáticos de succión: Presiona brevemente para cambiar entre modos

Manual Sucking Mode: Long press to activate

Modo manual de succión: Mantén presionado para activar


Charging Instructions

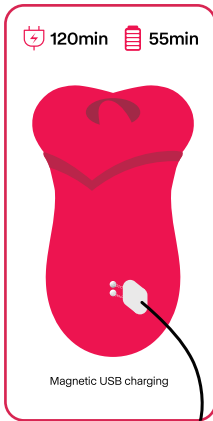

- In case of a product malfunction, it is advised to power off the device and perform a full recharge before resuming use.
 - Do not use the product while charging.
 - Recharge the device at least once every six months to maintain battery health.
 - **Please note: Use only with a recommended 5V power supply, and the included charging cable.**
-
- En caso de mal funcionamiento del producto, se recomienda apagar el dispositivo y realizar una carga completa antes de volver a usarlo.
 - No utilices el producto mientras se esté cargando.
 - Recarga el dispositivo al menos una vez cada seis meses para mantener la salud de la batería.
 - **Ten en cuenta: Usa únicamente con una fuente de alimentación recomendada de 5V.**

Cleaning Precautions

 Cleaning under the running water

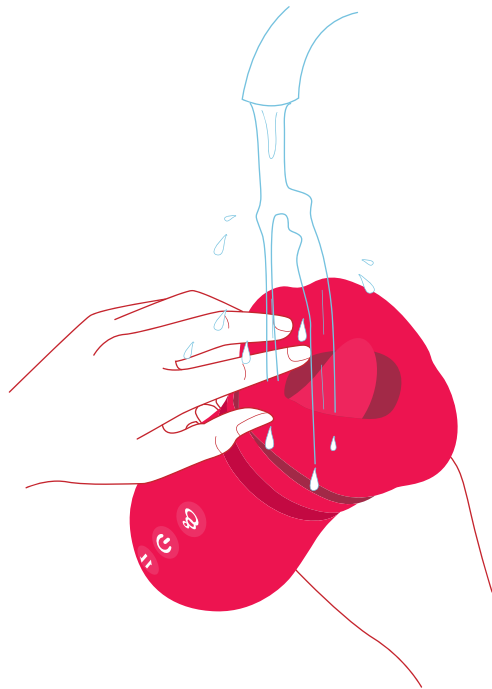

Wash before and after use
Lava antes y después de usar



Wipe dry after washing
Sécalo con un paño después de lavar



Clean only with mild soap or neutral detergent
Límpialo solo con jabón suave o detergente neutro



Use water-based lubricants
Usa lubricantes a base de agua



Don't use silicone-based lubricants
No uses lubricantes a base de silicona



Store separately from other toys
Guárdalo separado de otros juguetes



Avoid cleaning with alcohol, petroleum, or acetone
Evita limpiarlo con alcohol, petróleo o acetona



Keep away from heat and open flames
Mantén alejado del calor y las llamas abiertas

Warning

This device is not intended for use by children or persons with reduced physical, sensory, or mental capabilities. To prevent electric shock, never use the charger near water. Do not use on swollen or inflamed skin area. Discontinue use if discomfort occurs. Do not use on the neck area.

Advertencia

Este dispositivo no está destinado para su uso por niños o personas con capacidades físicas, sensoriales o mentales reducidas. Para prevenir descargas eléctricas, nunca uses el cargador cerca del agua. No lo uses sobre áreas de piel inflamada o hinchada. Suspense su uso si se presenta alguna molestia. No lo uses en la zona del cuello.

Troubleshooting

Toy won't turn on

Ensure the device is fully charged. If the issue persists, contact support.

Can not connect to the app

Verify that Bluetooth is enabled and the toy is powered on. If the connection fails, restart the app. Uninstalling and reinstalling the app if needed.

Weak vibration or tongue not working

Switch to a different mode or increase the intensity setting. If there's still no response, may indicate a defective product. Contact us for assistance.
Telephone: [US/CA] +1 (888) 519-8831

Solución de problemas

El juguete no enciende

Asegúrate de que el dispositivo esté completamente cargado. Si el problema persiste, contacta al soporte.

No se puede conectar a la app

Verifica que el Bluetooth esté activado y que el juguete esté encendido. Si la conexión falla, reinicia la app. Desinstala y vuelve a instalar la app si es necesario.

Vibración débil o lengua no funciona

Cambia a un modo diferente o aumenta la intensidad. Si aún no responde, podría indicar un producto defectuoso. Contáctanos para asistencia.
Teléfono: [US/CA] +1 (888) 519-8831

Warranty

1Year warranty

Contact us to extend your warranty

Due to Amazon's policy, adult toys are non-returnable for buyer protection. If you:

Need assistance with return requests.

Experience any product issues

Please contact us through the following channels:

Contáctanos para extender tu garantía

Debido a la política de Amazon, los juguetes para adultos no son retornables para la protección del comprador. Si:

Necesitas ayuda con solicitudes de devolución

Tienes algún problema con el producto

Por favor contáctanos a través de los siguientes canales:

US/CA Official Support:

service@sovokn.com

+1 (888) 519-8831

[Mon-Fri, 09:00 - 22:00 hrs EST]

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.