У 20Max快速使用说明书】 120Max

一产品概览



重要提醒:

耳机安装前,请按快速手册指引连接手机,试听音效和音量。 如安装到头盔后, 音效和音量有较大的差异, 请调整喇叭在头盔内的位置。

开机/关机

▶ 开机/关机

双击切换中英文语音播报







LED灯快闪

蓝牙配对







蓝牙连接成功 LED灯慢闪

灯光开启与关闭









电话功能

(未连接蓝牙时)



自动(©10秒后)

长按2秒

双击

充电模式



(来电中)









接听





结束通话

取消去电





(音乐播放时)

→ (音乐播放时)

暂停

长按音量减小

(音乐播放时)

长按音量加大

对讲配对

音乐功能



短按进入对讲模式,

(音乐暂停时)

→ (音乐播放时)

(音乐播放时)



再次短按退出对讲模式;

短按上一曲

短按下一曲



长按切换 对讲发射和接收模式;

对讲连接条件:需一台机器处于对讲接收模式,一台机器处于对讲发射模式,才能进行配对。

对讲模式灯光:绿色指示灯快闪,进入发射模式,并有语音提示;绿色指示灯慢闪,进入接收模式,并有语 音提示;此时两台对连,连接成功后,栅格内指示灯已18间隔闪烁一次,并伴有对讲连接成功提示音,此

首次连接:两台机器开机后,短按对讲键,进入对讲模式,此时两台机器处于同一个模式对讲接收模式, 此时需长按其中一台对讲键,使其进入对讲发射模式,进行对讲配对。

语音助手







唤醒语音助手

物品清单

Y20Max主机*1 喇叭麦克风*1





使用说明书*1





注意事项

- 1、请勿将产品投入明火中,避免发生爆炸; 2、请勿拆卸产品,避免产品电子器件损坏;
- 3、请勿靠近尖锐器,物对产品造成损坏;4、长时间不用,请放置干燥处。

双击切换手动/自动接听









拒绝接听

末码重播

充电时长亮

 
























(开机状态下,插入充电器,机器自动关机)

720 Max QUICK INSTRUCTION MANUAL

| Product overview



Important Notice:

Before installing the headphones, follow the Quick Manual instructions to connect your phone installing it on the helmet, please adjust the position of the speaker in the helmet

Phone features

Double-click to toggle manual auto answering



Press and hold

for 2 seconds

Double-click

(Incoming call)



Answer

Refusal to answer

Last-code replay



Manually answer

"short press"

"Short press"

while on a call

Short press



(On a call)





End the call

Cancel outgoing calls

Answer

Intercom pairing







Intercom key

Short press to enter the intercom mode Short press again to exit the intercom mode;

Long-press toggle Intercom transmit and receive mode:

Intercom connection conditions: One machine needs to be in intercom receiving mode and one machine needs to be in intercom transmitting mode before pairing can be performed.

Intercom mode light: the green indicator blinks quickly and enters the emission mode with a voice prompt. When the green indicator blinks slowly, it enters the receiving mode, and a voice prompt is displayed. At this time, the two pairs are connected. After the connection is successful, the grid indicator blinks once at a 1S interval and the intercom connection is successful. At this time, the intercom

First connection: After the two machines are powered on, short press the intercom key to enter the intercom mode. At this time, the two machines are in the same mode of intercom receiving mode. At this time, long press one of the intercom keys to make it enter the intercom transmitting mode for intercom

List of items





Speaker microphone*1

Clip-on base*1

Velcro installation package*1

Type-C charging cable*1

Instruction manual*1



and listen to the sound and volume. If there is a large difference in sound effect and volume after

Charging mode



(When the machine is on, plug in the Charger and the machine will shut down automatically)

Power on/off

Power on/off

Double-click to toggle the Chinese and English voice broadcast







LED lights flash

Match



 




LED flash







Short Press Reduce volume key

Music features

Pause/play music





 \rightarrow

(music playing)



Play



 \rightarrow

(music playing)

(music playing)



Press long to reduce the volume

Pause



Turn up the volume on the long press

voice assistant





Short press a tune



Wake up the voice assistant

Notes

- 1. Do not put the product into the open flame to avoid explosion;
- 2. Do not disassemble the product. Avoid damage to product electronics;
- 3. Do not approach the sharp object, the object will cause damage to the product;
- 4. Do not use for a long time, please place in a dry place.

instruction warning

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmfulinterference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmfulinterference to radio communications. However, there is no quarantee that interference wil not occur in a particular installation. ifthis equipment does cause harmful interference to radio or television reception. whichcan be determined by turning the equipment offand on, the user is encouraged totry to correct the interference by one or more of the following measures.

- -Reorient or relocate the receiving antenna
- -Increase the separation between the equipment and rereiver.
- -Connect the equipment into an outlet on a circuit different from that to which thereceiver is
- -Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FcC Rules. Operation is subject to the following two conditions.

- (1) this device may not cause harmful interference. and
- (2) this device must accept any interference received, including interference that may cause undesired operation.