

160 mm

91.52 mm

ROYALE ALUMINUM 5000MAH 20W POWER BANK  
INSTRUCTION MANUAL  
EPB-R025

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THIS MANUAL.


IN THE BOX

- EPB-R025 Royale Aluminum 5000mAh 20W Power Bank (x1)
- Charging Cable (x1)

SAFETY PRECAUTIONS

- This product is NOT a toy, keep away from children and pets.
- Only use the product according to the instructions in this manual. Never use the product for anything other than its intended purpose.
- Do not open this product or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the product should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose product or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the product or charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if the product or charging cable is damaged. If the product or charging cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- Do not over charge battery.
- This product contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this product.
- Attachments on the back of your device can impede effectiveness of the wireless charger, and lead to overheating. Remove attachments from your device before charging on this wireless charger.
- The strong magnetic fields of neodymium magnets can damage items, such as television, computers, computer monitors, credit cards, bank cards, diskettes and other data carriers, video tapes, mechanical watches, hearing aids, loud speakers and VCRs. Pace-makers may be damaged or switched to "test mode" in the presence of a strong magnetic force, if pace-maker or other electrical body implant is in use. Keep a minimum of 3 feet distance.

PRODUCT DIAGRAMS

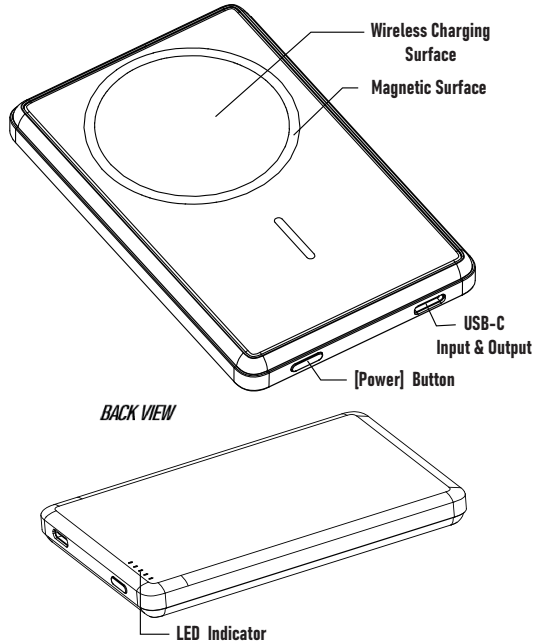

INSTRUCTIONS

Charge the power bank fully before using for the first time.

CHARGING THE POWER BANK

- Plug the small connector of the included charging cable into the USB-C port on the power bank.
- Plug the other end of the cable into a USB power source, such as the USB port on a computer or into a certified USB adapter (not included), and plug into a wall socket.
- The LED indicator will flash WHITE while power bank is in charging and stop flashing when the power bank is fully charged.

CHARGING ELECTRONIC DEVICES WITH THE POWER BANK

- Using the cable of the device you wish to charge, connect the charging cable to your device with the appropriate connector.

- Connect the other end of the cable to the USB-C port of the power bank.
- The power bank will begin to charge automatically.
- The LED indicator will illuminate WHITE when charging.
- Remove the cable from your mobile device when it is fully charged.

USING WIRELESS CHARGING

- Press the [Power] button. The LED indicator will light up to indicate the wireless charging is in standby mode.
- Place a wireless charging enabled mobile device on the wireless charging surface, the mobile device will begin to charge automatically. The first LED indicator will illuminate GREEN to indicate that your device is charging properly.
- If your device does not begin to charge, try repositioning your device on the wireless charging surface. You may need to remove the case of your device to charge properly.
- When your device is fully charged, the LED indicator will turn OFF. Remove your device from the wireless charging surface when it is fully charged.

Note:

- If the first LED indicator is flashing when the wireless charger is in use, either the device is NOT wireless charging enabled, or there is an object between the device and charging pad interfering with the charging process.

WIRELESS CHARGING WITH MAGNETIC ATTACHMENT

- If the charged device supports MagSafe Charger, simply place the device against the magnetic surface of the power bank, the device will begin to charge automatically. The perfectly aligned magnets in the wireless charging surface will attach to the charged device and provide more secure wireless charging.
- The first LED indicator will illuminate GREEN to indicate that your device is charging properly.
- Remove your device from the wireless charging surface when it is fully charged.

NOTE ON SAFETY FEATURES:

The wireless charging will automatically power OFF when the wireless charging surface is overheated or when a metal object, such as a coin, is placed on the wireless charging surface. The first LED indicator will flash GREEN to warn of automatic shutoff.

TECH SPECIFICATIONS

- Battery Capacity: 5000mAh/3.85V/19.25Wh
- USB -C Input: DC 5V/3A, 9V/2A, 12V/1.5A

- USB-C Output: DC 5V/3A, 9V/2.22A, 12V/1.67A
- Wireless Charging Output: 5W/7.5W/10W/15W
- Working Temperature: 14°F ~ 122°F (-10°C ~ 50°C)

FCC Warning Statement

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

