

W300

Portable Speaker with microphone

Manual



Welcome to use W300 Portable Speaker with microphone , Please read manual carefully before use, in order to better play the superior performance of products. The speaker can be used alone or with wireless microphone.

Matters needing attention

- Please use and place the speaker in a room temperature environment.
- Please turn the switch to OFF state to turn off the power when you do not use it.
- Do not throw it avoid speaker damage due to falling.
- Please do not open the speaker box for maintenance if you are not professional.

Packing List

- Bluetooth speaker * 1
- USB DC 5V charging cable * 1
- Circular interface recording cable * 1
- Circular interface audio cable * 1
- Remote * 1



Features

- The Speaker Supports Bluetooth function.
- 3.5 audio input and output interface.
- The Speaker supports USB disk / TF card.
- Karaoke box with sound field / sound changing function.
- Remote control is available.

Specifications

Model: W300
Product name: Portable speaker with microphone
Size : 4" x 4.3" x 8.6"
Bluetooth Version: Bluetooth 5.0
Rated impedance: 4Ω
Speaker Unit: 3"x3, 1.5"x1
Output power: 20W
Built in lithium battery: 4400mAh
Input power: DC 5V 2A

Product function diagram

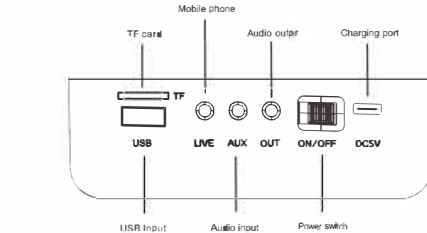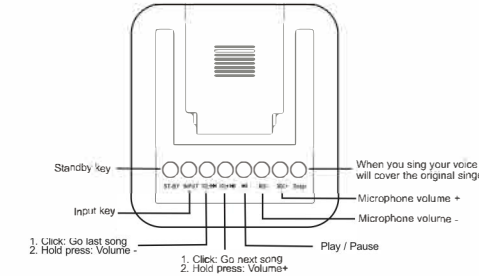

Remote control key function discription



INPUT: Audio input switch
MUTE: MUTE
Repeat: Repeat the song (suitable for TF card)
VOL+: Volume+
VOL-: Volume-
Last song
Play / Pause
Next song
Treb+: Treble+
Treb-: Treble -
Bass+: Bass+
Bass-: Bass-
MIC+: Microphone volume +
MIC-: Microphone volume -
Dodge: When you sing, your voice will cover the original singer
C-sound: Change of sound
S-field: Sound field
EQ: Transformation of sound field

Operation instruction

Turn the audio power switch to ON. The display screen shows the corresponding status, after successful boot enter the corresponding source mode.

【Bluetooth mode】

Switch to Blue (Bluetooth mode) by pressing INPUT on remote or speaker box. The Bluetooth ready when displays BLUE, and keeps blinking. Then turn on your Bluetooth function on your player, to search and connect W300. When BLUE no blinking, it is connected. You can enjoy music now by Bluetooth.

【LIVE Input】

Connect the Speaker with the phone with the attached audio cable. Press the INPUT key on the remote control or panel to select LIVE input. At this time, the Nixie tube displays LINE and you can enjoy Karaoke. This mode is the high-quality recording mode and Live mode.

【LINE Input】

Please connect the speaker to a player unit by audio cable. The speaker supports the AUX audio input. you can select by pressing "Input" on both remote control or panel. It is "AUX" when display "LINE".

【U disk, TF card】

In this mode, backward insertion is preferred, Regardless of the current status, insert the U disk to play the U disk music immediately, and insert the TF card to play TF card music immediately, You can control the previous song, the next song and play pause through the corresponding key or remote control.

Note: to switch to this mode, you must insert the U disk or TF card to effective.

Charging method

Bluetooth Speaker charging: Plug one end of the provided USB charging cable into the charging port on the back of the speaker, and the other end into USB port of the power adapter, and the charging can be done.

Note: when it is found that the battery cannot be charged, please turn the power switch to the OFF state to recharge.

【Use scenario 1】

Karaoke mode of mobile phone in Bluetooth state

Turn on the power switch of the audio and switch to Bluetooth status. The phone searches and matches the Bluetooth audio. Karaoke will be available.

The microphone, mobile phone and speaker are all wireless connections.

You can hold the microphone and mobile phone in your hand and walk around freely to enjoy the karaoke.

Sketch Map:



【Use scenario 2】

High quality recording Karaoke mode

Turn on the audio power switch and switch to "LINE" input mode, connect one end of the attached recording cable to the LIVE port of the speaker, and the other end to the headset interface of the phone. Open the corresponding Karaoke app on the mobile phone, so that the Karaoke can be recorded, and the works can be saved after the Karaoke is completed.

NOTE: The function of the recording cable is to transmit sound and make the recorded sound clearer. The speaker itself cannot record, and the corresponding recording software needs to be used.

Question & Answer:

Question1: The Digital tube doesn't show?

Answer: Check whether the battery power is too low. Please charge. Turn the power switch to the OFF position before charging.

Question2: Invalid remote operation?

Answer: Please install suitable AAA batteries for the remote, and align the remote control with the display position.

Question3: The LINE voice input is silent?

Answer: 1) Check that the audio cable is connected correctly.
2) Switch to the corresponding audio input mode.

Question4: Bluetooth silent or broken/ Bluetooth not connected?

Answer: 1) The Bluetooth device is running and do not press remote mute.
2) Whether the connection of Bluetooth device exceeds the effective connection distance or there is an obstacle between audio and Bluetooth device.
3) Check the mode if it is BLUE. If it is LINE, please press INPUT to make it to be BLUE.
4) If there are too many Bluetooth devices connected, delete some Bluetooth devices.

Question5: There is strong-scream in speaker?

Answer: Please ensure that the power is sufficient and keep the speaker away from other electronic devices, to be not interfered by other devices' signals.

Question6: The battery is not last long?

Answer: The lower right corner of the display will show the power, and the three grids are the Max. Making sure the battery is fully charged. When the battery is fully charged, the red indicator will go out.

ATTENTION:

Due to the continuous updating of the product, there will be some inconsistencies between the manual and the product. Please refer to the product you have purchased.

Any issues about our product, please email to us by the platform, or Wengeaudio@163.com

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.