




User Manual

DESCRIPTION OF REMOTE CONTROL

- 1. STANDBY:** To switch the speaker system to Stand-by and Operation mode.
- 2. INPUT:** To switch between "USB", "MicroSD", "AUX", "FM" and bluetooth mode
- 3. RESET:** Restore the speaker volume to default level
- 4. MUTE:** To turn On/Off the volume of the speaker system
- 5. NUMERIC KEYS (0-9):** Press these buttons or combination of these buttons to jump to respective song or FM frequency. (USB, MicroSD, FM mode only)
- 6. 10+:** Press this button to jump songs in the interval of 10
- 7. SCAN:** To auto scan and save available FM channels
- 8. VOLUME +/-:** For volume adjustment
- 9. ▶/II (Play/Pause):** To Play/Pause the speaker system (USB, MicroSD, bluetooth mode only)
- 10. ▶◀/▶▶:** To select Previous/Next track (only in USB, MicroSD, bluetooth mode)
- 11. FOLDER +/-:** Press to jump directly to the Next/Previous folder (USB/MicroSD mode only)
- 12. TUNER +/-:** Single press to get Next/Previous FM frequency; Long press to get Next/Previous available FM channel
- 13. PRESET +/-:** To select Next/Previous saved FM channels

Note: Default mode will be AUX mode

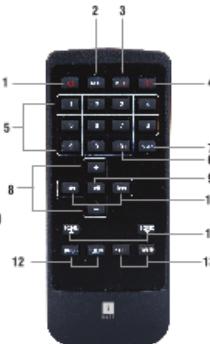


LED Indications:

- Standby: Red Blinking
- AUX: Red Constant
- USB/ MSD: Blue Blinking
- Bluetooth pairing mode - Blue blinking fast
- Bluetooth paired mode - Blue Constant
- FM: Red and Blue glowing
- Mute: Red and Blue blinking simultaneously
- Pause: Blue Constant

INSTRUCTIONS

- 1. Read Instructions:** All the instruction should be read carefully before operation and follow the instruction.
- 2. Environment:** The speaker should be situated away from heat sources such as radiators, with proper ventilation, and not expose to moist air or water.
- 3. Positioning:** Place the speaker on a stable surface and out of reach of children.
- 4. Power sources:** The speakers should be connected to a power supply only of the type described in the operating instructions or as marked on the speaker, using the accessories enclosed.
- 5. Electric shock:** To avoid shock hazard, do not remove the cover or dismantle the unit, do not insert anything into the unit.
- 6. Mending:** The user should not attempt to repair the speaker. Servicing should be referred to qualified service personnel or returned to the dealer or contact nearest iBall Service Center for assistance.
- 7. Cleaning:** Disconnect the main plugs from the outlet before cleaning the unit. Only use soft cloth, no harsh abrasives or chemicals to clean, as it will damage the surface finishing.
- 8. Non-use periods:** The power cord of the speaker should be unplugged from the outlet when left unused for a long period of time.

PACKING LIST

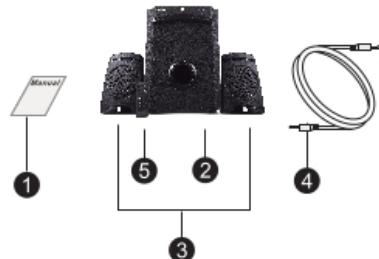

- | | |
|--------------------------------------|------|
| 1. User Manual | 1pc. |
| 2. Subwoofer Speaker | 1pc. |
| 3. Satellite Speaker | 2pc. |
| 4. Signal Input Cable (Stereo Cable) | 1pc. |
| 5. Remote Control | 1pc. |

2

FM & BLUETOOTH

FM

Press Input button to get into FM mode.

a. AUTO SCAN:

- In FM mode press SCAN button to Auto scan and save all the available FM channels.

b. MANUAL SCAN:

- Single press Tuner +/- button to select next/previous FM Frequency; Long press Tuner +/- button to get next/previous available FM channel.
- Direct Frequency select – Press the numeric keys combination to select desired existing FM frequency.

Note:

- Please adjust provided FM antenna to get clear FM reception.
- Once you have saved all the FM channels you can navigate through them by Preset +/- button.
- The quality of FM radio depends on FM reception in your area.


BLUETOOTH®

Press Input button to get into Bluetooth mode.

- Once the speaker is in Bluetooth mode, it will indicate with voice prompt and will automatically get into pairing mode.
- Now switch on the Bluetooth in your mobile and search for "Tarang BT25", once the device is found connect it and you can play music wirelessly.

Note: There is no need to connect the mobile every time you switch on the speaker in Bluetooth mode, the speaker will search for the previously paired device and pairing will take effect on its own. (If in case the connection fails, please restart the speaker and mobile's bluetooth and try the above steps once again)

DESCRIPTION OF THE REAR PANEL OF THE SUBWOOFER

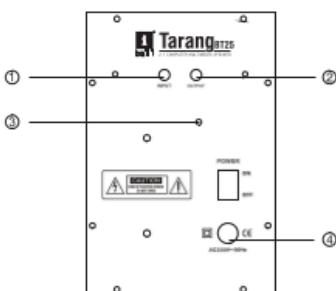

1. **Audio Input:** To Connect the Signal from PC/ Notebook/ VCD/ DVD/ Music system etc.

2. **Audio Output:** Left/Right channel output connectors of the system.


3. **FM Antenna:** To get clear FM reception.

4. **AC IN:** AC Power cord


Connection illustration

To prevent malfunction and / or damage to speakers or other devices, always turn down the volume, and turn off all the power devices before making any connections.

Connecting the satellite Speakers

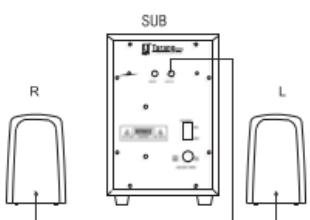


Connecting the Subwoofer & Audio Source

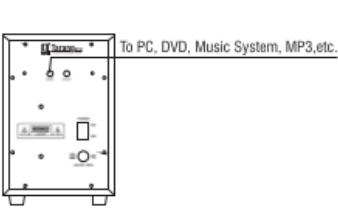

5

DESCRIPTION OF FRONT PANEL OF SUBWOOFER

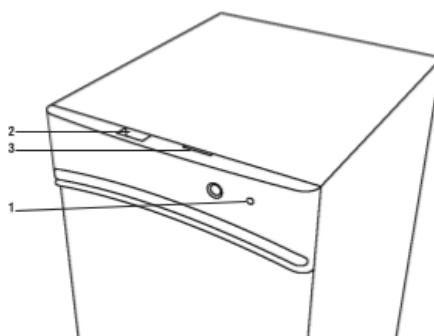


1. LED indication

2. USB input

3. Micro SD Input

CONNECTION OF MICRO SD CARD / USB PEN DRIVE

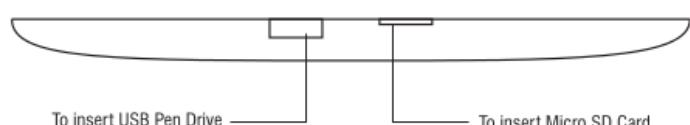

FEATURES & SPECIFICATIONS

Features:

- Entry-Level 2.1 Speaker with clear & detailed sound
- Play Music from Bluetooth® enabled devices, USB Pen drive, MicroSD Card and AUX input
- Deep bass with down-firing subwoofer
- Tune to any favorite FM channels with its Built in FM Radio

Specification:

- Bluetooth® Version : Ver.3.0+EDR
- Total Peak Output: 18W
- Driver unit: 4" (Woofer), 3" (Satellite)
- Frequency response: 35Hz - 20kHz
- Impedance: 6 Ohms (Woofer) 4 Ohms (Satellite)
- Distortion: ≤0.1% 1W 1kHz
- Output RMS*: Woofer - 5W, Satellites - 2W (each)
- Separation: ≥55dB(1KHz)
- S/N Ratio: ≥65dB

Dimensions:

- Woofer: 16(W) x 23(H) x 18.2(D) cm
- Satellites: 8(W) x 13.4(H) x 8.15(D) cm

Input:

- AUX(3.5mm), USB, Micro SD

Package Content:

- Sub-Woofe
- 2 Satellite Speakers
- Remote Control (Battery Included)
- 3.5mm Audio Cable
- User Manual

Note: For any technical help on iBall products write to support@iball.co.in

* Measured per channel

Product specification are subject to change without notice.

* All trademarks, logos, brands & products names are properties of their respective owners. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by iBall is under license. Other trademarks and trade names are those of their respective owners, logos, brands & product names are properties of their respective owners.

*Warranty: All iBall products are governed by iBall warranty terms. Refer: www.iball.co.in



Your eyeball view.
Our technology new.