


ESKY005437 Transimtter User Manual

1. Transimtter

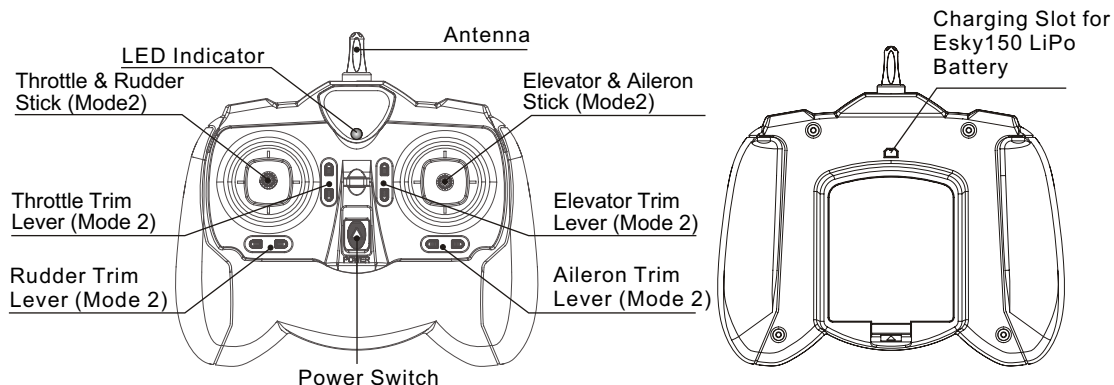

2. Binding

- 1) Switch on the helicopter powersupply (switch toward to the helicoptertail), the status indicator on helicopter flashes rapidly.
- 2) Press and hold the right button of the rudder trim lever, and switch on the transimtter simultaneously.
- 3) When the status indicator is off on the helicopter, release the right button of the rudder trim lever. Then the status indicator is solid light on the helicopter again which indicates the binding successfully.

3. How to charge Esky150


- 1) Place four AA batteries inside the transmitter correctly.
- 2) For safety, switch off the helicopter and transmitter.
- 3) Plug the charging cable into the charging port under the helicopter battery and plug the other end into the charging slot behind the transmitter. Then, there is a solid green light on the transmitter's LED indicator.
- 4) When the LiPo battery inside the helicopter is fully charged, the green light will go out.

Diagram for the charging process




ESKY005437 Transimttter User Manual


4. Transimttter Control

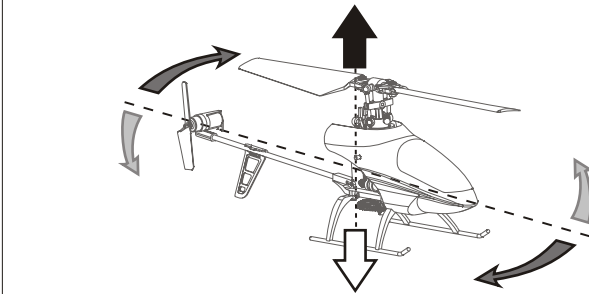


Mode 1

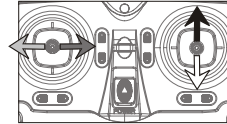


Mode 2

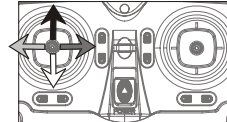


When pushing the THROTTLE stick up or down, the helicopter lifts up or descends accordingly.
When moving the AILERON stick left or right, the helicopter slides left or right accordingly.

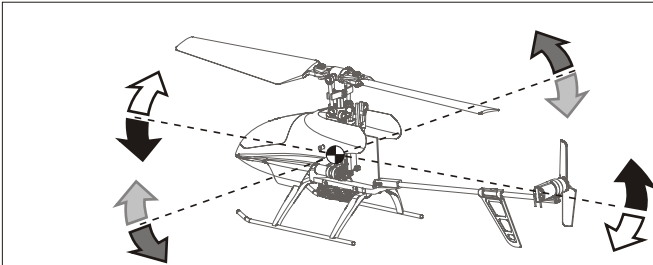

Mode 1

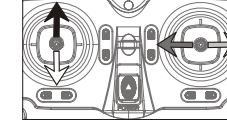

Mode 2

 

When pushing the ELEVATOR stick up or down, the helicopter moves forward or backward accordingly.
When moving the RUDDER stick left or right, the head of the helicopter moves left or right accordingly.

FCC ID: 2AAB6-HK0002

Item Number: ESKY005437

Zonda Hobby Technologies Electronic Ltd

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with FCC's RF radiation exposure limits for general population/uncontrolled exposure, this device must be operated only in hands with a separation distance of at least 20 cm from its antenna to the body. In addition it must not be collocated or operating in conjunction with any other antenna or transmitter.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

CAUTION

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS**

Hereby, ZONDA HOBBY TECHNOLOGIES ELECTRONIC LIMITED, declares that this ESKY005437 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC