 
 


Model: U35GT/S7904

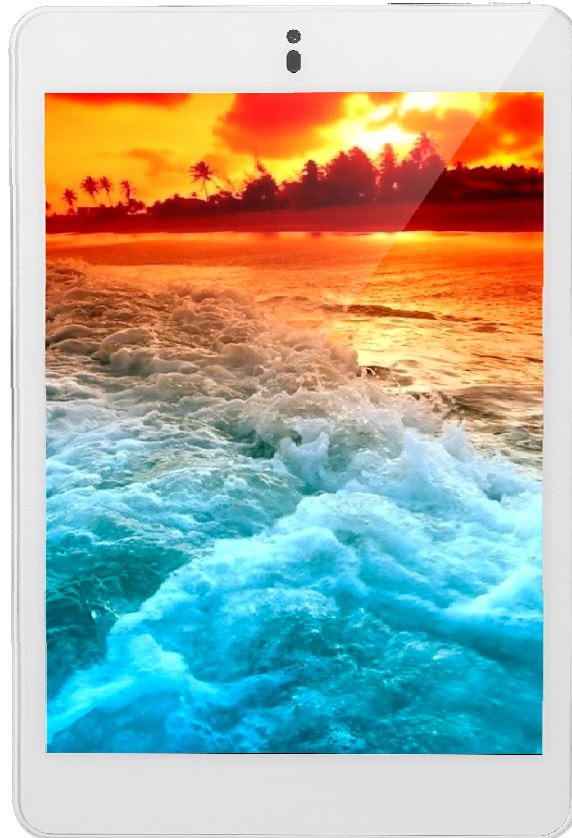

USER'S MANUAL

Products Features

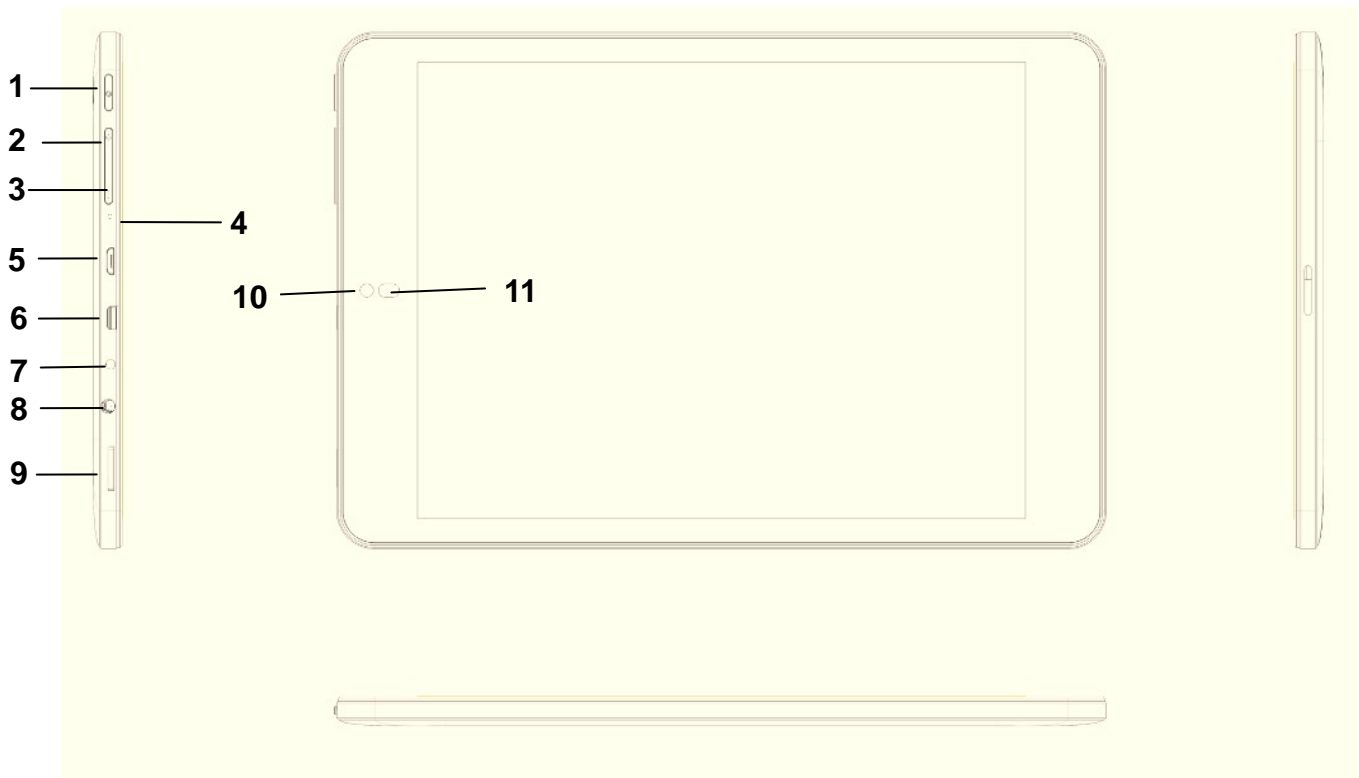

Button Introduce

● Button Introduce

1.Power on/off : Long press for 3 seconds to turn on/off, and short press the key to enter the screen saver and wake up the screen under standby;Long press 12 seconds to force Power off.

2.Vol +: short/long press is volume up


3.Vol -: short/long press is volume down

4.Mic: Record built-in port

5.  USB interface/ OTG port

6.Micro HDTV:HDTV output port

7.  : 2.5 mm DC 5V charging port.

8.  Earphone: 3.5mm earphone port

9.TF card:TF expand card port

10.  camera

11. Light sensor:Automatically adjust the brightness sensor hole

—. Use preparation


● Connecting to your PC

 
Startup your PC, and connect the product to your PC with the provided USB cable for USB charge or file transmission. Turn on the USB device and you can copy/delete files through PC.

Attentions:

Do not play music or video while connected with PC. Please be aware that we claim no responsibility for damage caused by this improper operation.

● Turn on

Under power on mode, long press the button "Power button" for 3 seconds, the system will enter Android power-on status bar, and about 100s later enter the system menu, the screen is locked, hold  lock tap to drag up to the green point position, the device will unlock automatically, just as the illustrations as follow:

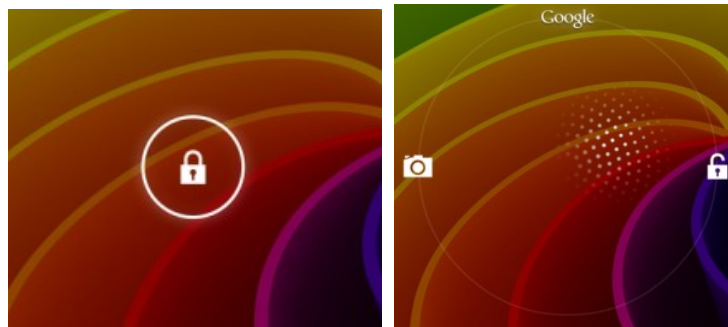

Power saving & screen-lock: turn on the device and short press "POWER" button to enter SLEEP power for saving mode, at this time, the screen become black screen, and also enter screen lock mode. Press "POWER" button again, the system resume bright screen within 1s.

Attentions:

Under power saving mode, the original operations such as music, video etc will not pause and will continuously work, it only clock the screen to be at the status of black screen.

Attentions:

When the system hangs up, press "power switch" button for 12s so that the device force to reset.

● Power off

Under the power-on status, long press "power button" for 3s, power-off menu will show, select "OK" to turn off the power.

【Notice】 When power is not enough, the device will continuously give an alarm, it will automatically power off if no charging; if don't turn it on, please check the power status, and try to turn it on after 5~10 minutes for charging if power is out of use.

- **Using TF expansion card**

1. Connect the tablet with your PC, it will appear 2 removable disks, the first one is build-in flash memory, the other one is TF card. The second removable disk will not be opened if you don't plug a TF expansion card to the tablet.

【Notice】 the tablet only supports TF typological expansion card (maximum memory:32GB).



- 2.**Plug & Unplug expansion card**

To Plug: Insert the expansion card as the indication near the card slot, and the side with the metal pins faces down when the tablet under the normal status. Once the tablet identifies the expansion card, files stored in the card memory can be played.

To Unplug: Press the expansion card slightly to remove it.

- **Charging the battery**

1. You had better take charge for the battery for about 8 hours and confirm the full power of the battery when you use it at the first time.

2. Plug the adapter into the electronic outlet, and the mini port into the DC socket of tablet pc, then the device turn on automatically, the battery capacity will read as the green scrolling icon  shows when charging, the charger should not be plugged out until power was fully charged. The indicator light becomes blue, the battery icon's green bar  will stop.

When the power exhausts out, wait for a minute and turn the device on.

- 【Attentions】**








1. if you want the special charger with 5V--2A DC2.5MM of cable, please contact the distributor in the local.

2. The screen bright than the screen dark charging time is a bit long when charging, choose what is your need to charge mode.

3. You can't take use of the charge without pur approval, if you use some other adapters for charge, which will lead to the damage of products. In this case, we will not be responsible for the loss.


- **Main user interface (menu icons definition)**




Icon	Function introduction	Icon	Function introduction
	Return button		Any interface and click it will return to main menu
	Menu of Recent operation		The system has identify new device
	To show the time of current system		Battery icon showing the remaining power
	Function module menu		

二. Operation introduction

● Wi-fi Setting

 - WIFI on setting:** click module menu icon , enter module menu list, click "setting" to enter the setting menu,click "wireless & networks" to enter,select "Wi-Fi":
- WIFI setting and network connection :** Click "Wi-Fi setting"to enter and the system will automatically find WIFI network name,there were two wi-fi networks found as the follow:

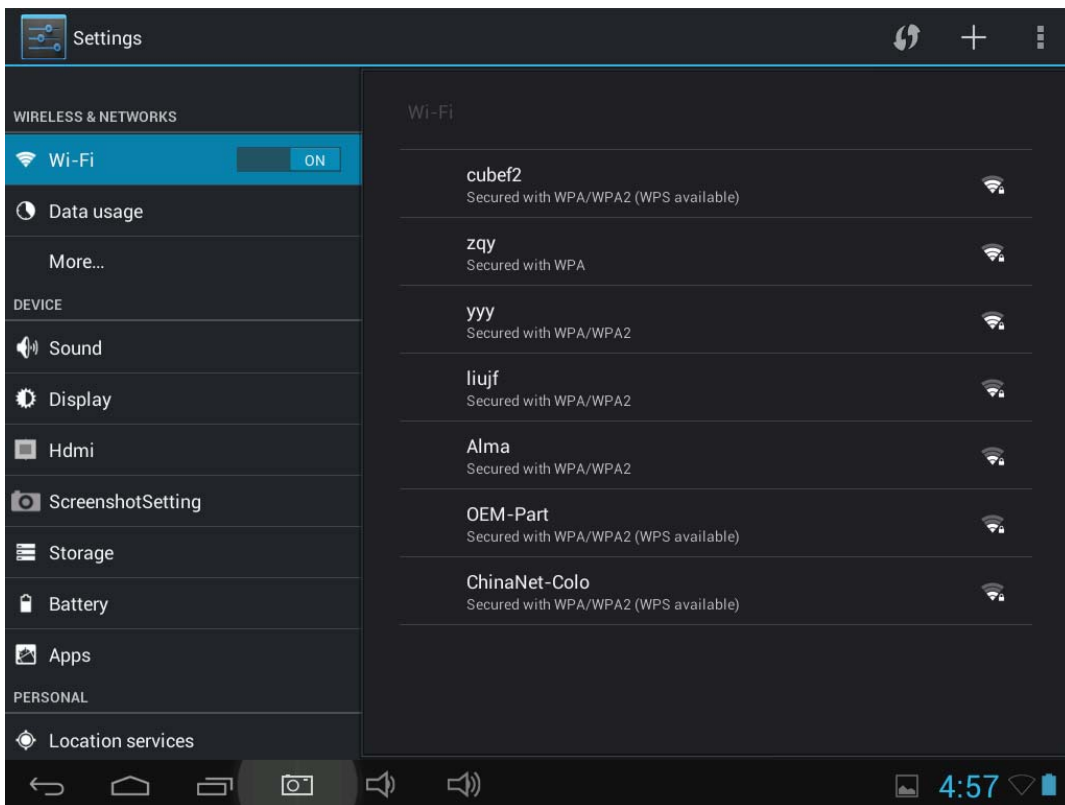

then click the network to connect, it will show the interface for you input the password, after you input the correct password and press "connect" , it will automatically connect and distribute the IP address, then it pointed out it was connected.

- **USB-Host Function**

- a. **Reading U Disk function :**

Insert U disk into HOST/OTG port,click "explorer" ,click "USB" ,enter the file list of U disk as follows:




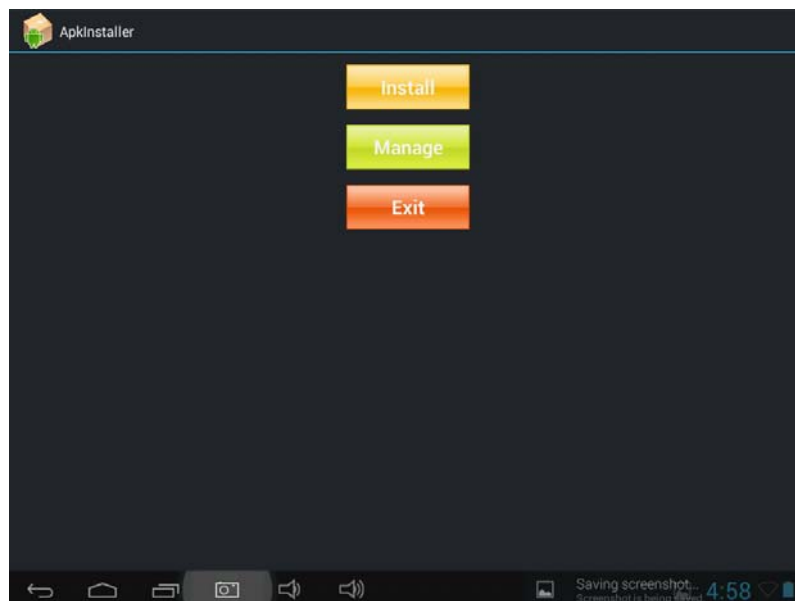 
- b.**External 3G USB Dongle:**

Insert 3G USB-DONGLE card through OTG cable, end into Dongle ,and end into USB/OTG HOST port ,and wait minutes after appear the 3G icon and could to connect the Internet.

- **APK installer**

Device supports the applications from android platform,most apps can be downloaded from the Internet,then copy Into Internal Memory or T-Flash to install.

 
- Click APK Installer,Pop-up APK installer menu: Installer, Manager, Exit.



- **Installer :** Click installer,enter Apk installer menu.
Internal Memory and **SD Card** is separately flash memory and T-Flash card memory;
Enter and choose the app you want in the right column and click "install".




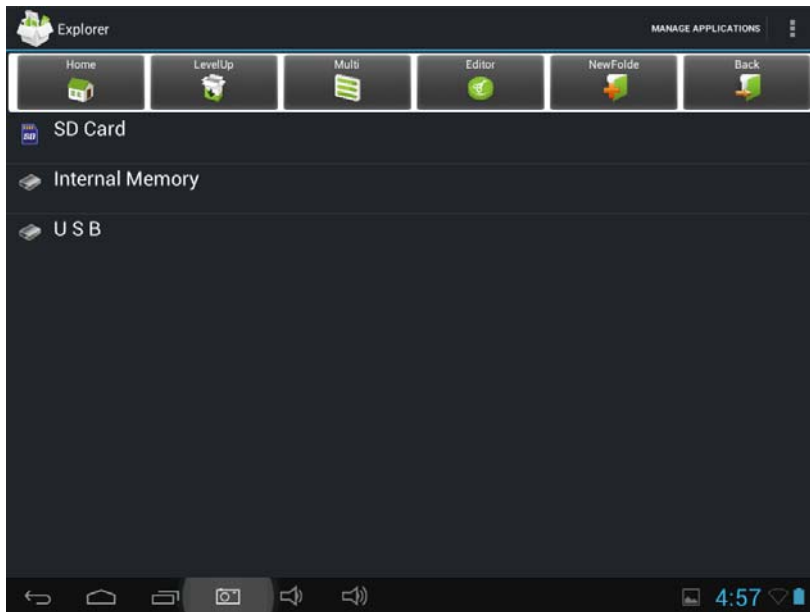 
- **Manage** : click "mange", enter the menu.

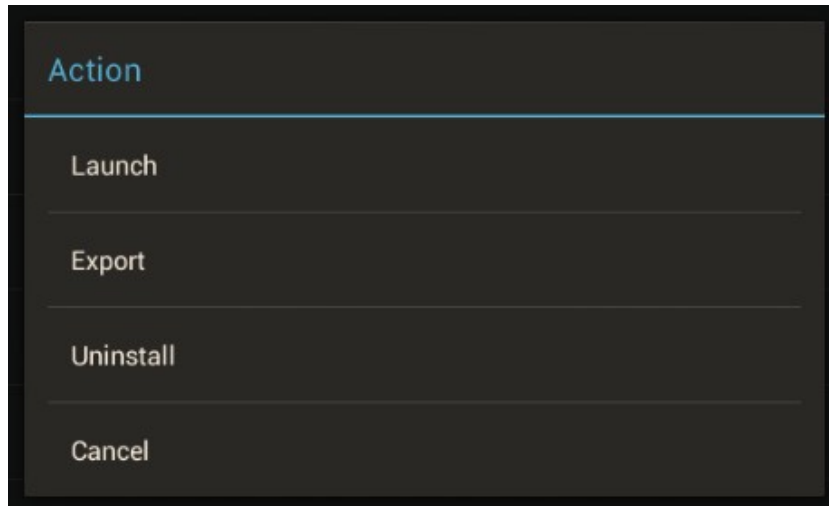

- **Launch**: launch the software
- **Export**: export the software to T-Flash card
- **Uninstall**: uninstall the software
- **Search at market**: search the software at the software market
- **Cancel**: cancel the operation

● Explorer

 
In main menu ,click the explore icon  to enter the manager interface,click "SD Card","Internal Memory" and "U Disk",enter the sub file list,you can add,copy,paste,delete. Long press the file or file folder,choose "last","next",or "last level" to find the related position and click "edit" and choose "paste" to the related position in the coming box.



- **Record**

Under the main menu,click the record icon  to enter, click record button  to start recording, click the stop button  to stop recording, and click  to play the record.The system automatically notice whether this record will be used or given up,you can choose it manually.

Play the record: select audio play button to play the record,first choose the record file in the explore,then click "play"

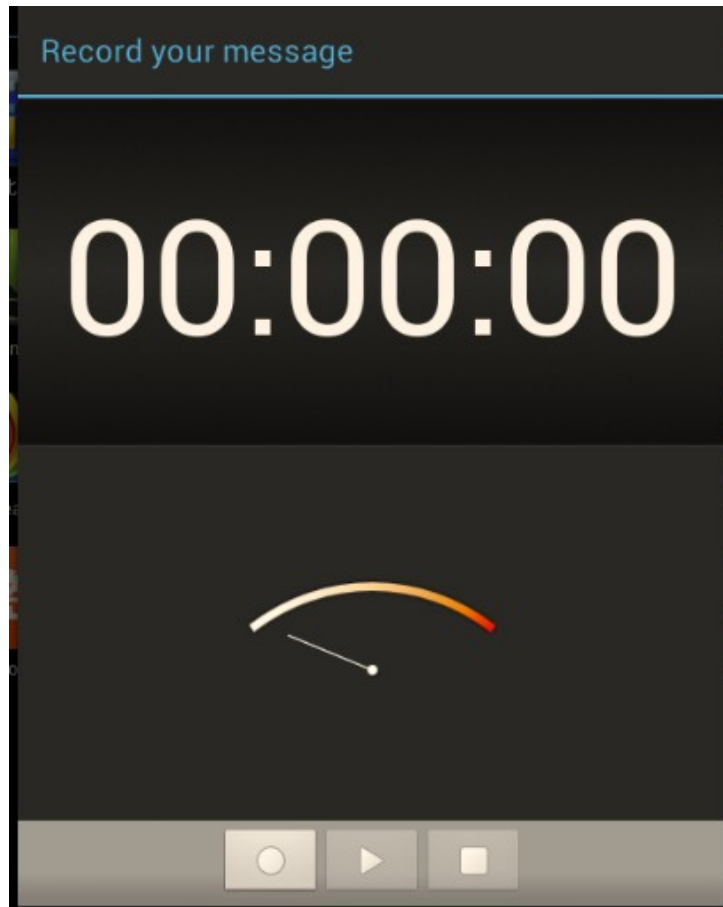


● IE explore

 


When wi-fi was connected,click IE explore in the main menu and enter to IE menu,click the website address column and input the website address to view:



● Update firmware

Turn off the tablet before upgrade the firmware. connect the tablet with your computer before upgrade,open the updating tool file“RKBatchTool.exe”on your computer, In the Pop-up window and click “” and open the Image file.After click”switch”button and click”Restore”to upgrade.Information bar will display the upgrade of the current information{successfully}.after successfully will to start to the system again,and will connect with the computer.then exit computer to start normal operation.

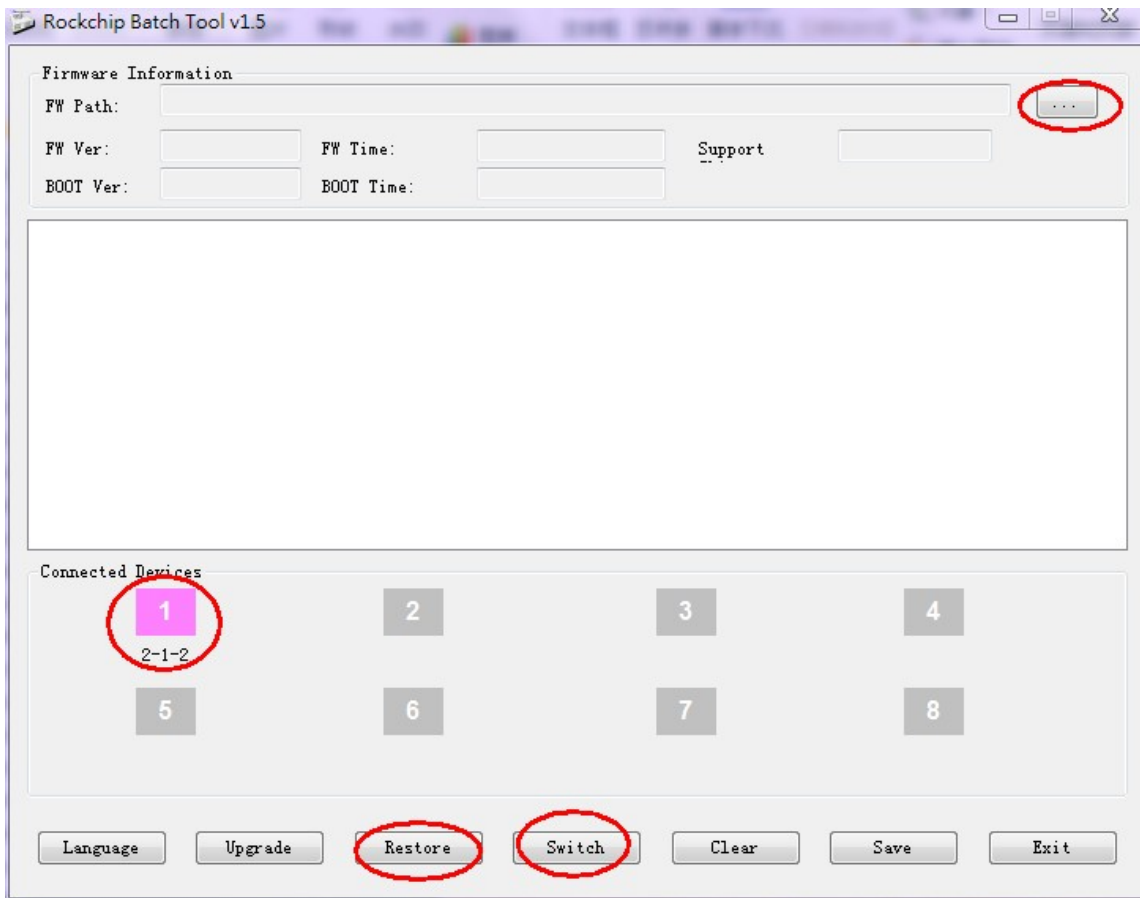

【Notice】 :

upgrade system will remove all local data, before the upgrade ,please backup important information . After the upgrade for the first time when boot disk partition, the software pre-installed on such action, will be slow, please kindly wait a moment, the second time into the system speed is normal.

三. Technology specification

Hardware configuration	
Main Frequency	Max to 1.6GHz
CPU	Cortex-A9 Quad Core 28 nm chipset
Inner memory	1GB DDR3
Screen	7.85 inch 1024*768
	Multi-touch Capacitive screen (5PIN touch)
Memory	16GB
WiFi	Wi-Fi 802.11b/g/n
Volume	Built-in speaker
Expansion card	Micro SD card, support maximum 32GB Micro SD (TF)
Battery	4000mAh/3.7V
Data port	High speed Micro USB 2.0 , support OTG function
Operation system	
Operation system	Google Android 4.1
Camera	
Front/Rear	0.3/2.0 Mega Pixels
Function feature	
Mobile memory	It can be used as movable hardware Disk
Audio	MP3、WMA、OGG、APE、FLAC、AAC、WAV
Video	Support H.264,VP8,RV,WMV,AVS,MPEG4 etc 1080P video output、
	YouTubeYouTube、720P、HTML5 、Flash10.1
Picture	Support JPG、BMP、PNG etc.
Others	Mali-400 MP4 GPU , Support OpenGL ES 2.0/1.1 and Open VG1.1
	View internet,Chat online ,E-mail,E-Book,Explore
	Clock,Alarm clock,Calculator,Record
Audio mode	Normal,Popular,Rock,Classical,Bass,Jazz,User-defined
Language	Multi-language(optional)

Repeated mode	Single song once、 single repeated、 all once、 demo
Record	Support microphone,support3GPP record format
Technology specification	
Battery usage time	Audio playing time(off WIFI,in earphone output): about 15 hours; video play time:about 5 hours
	Website view time:about 5 hours
SNR	≥95db

【Note】 :

The picture on the manual is only for reference. There is no notice if the specification, button operation and appearance are exchanged. Hope you can understand.

Declaration

Please backup the own data when you operate it. The company is not responsible for the loss and damage of data caused by wrongly operating hardware, software, product repair, battery replacement or other unforeseen circumstances. Meanwhile, we can not control the user's misunderstanding of using the manual, so the company is not responsible for the accidental damage, and not responsible for the third part claims caused by using the products.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.