



RAMOS

X10 Mini Pad

Ramos Mini Android Pad

Main functions

- 7.85"1024*768 capacitive touch screen .
- Support MP3/ AAC/OGG /WAV music format.
- Support video of AVI/ 3GP/MP4/ MKV/ MOV /TS/ FLV format ,up to 1080P.
- Support TF card.
- Support picture auto browse in JPG/BMP/JPEG /GIF format
- Support multi languages.
- Support APK program installation.
- OTG function.
- Support firmware upgrade.
- Support HDMI video output.
- Support multi-point touch function
- Support WIFI Wireless Connection
- Support external 3G.

Precautions

- During the formatting or uploading/downloading, do not disconnect the tablet from the PC. Disconnection during updating or data transfer may damage files or the tablet.
- Disassembling the tablet will void the warranty. Please check the trouble shooting section of this manual if experiencing problems.
- Our company reserves the right to improve the product. Different software and hardware versions might affect the product performance and functions, therefore the product shall be subject to change without further notice.

※ All warranty information, product features and specifications are subject to change without notice.

Buttons overview

Item	Name	Item	Name
1	Reset button	2	Volume
3	Power	4	Mic hole
5	HDMI port	6	OTG/USB port
7	TF card slot	8	Charging port
9	Earphone port	10	Front Camera
11	Back Camera	12	Speaker

Basic Operations

- Touch & type**
Use your fingers to manipulate icons, buttons, menus, the onscreen keyboard, and other items on the touch screen. You can also change the screen's orientation.
To select or activate something, touch it.
To type something, such as a name, password, or search terms, just touch where you want to type.
A keyboard pops up that lets you type into the field.
Other common gestures include:
 - Touch & hold:** Touch & hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, touching an icon on home screen and hold it, when the Remove icon is shown on the screen, dragging the selected icon to this icon can remove it from the home screen.
 - Drag:** Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reaches the target position. For example, you can drag to reposition shortcuts on the Home screen.
 - Swipe or slide:** Quickly move your finger across the surface of the screen, without pausing when you first touch (so you don't drag something instead). For example, you can slide a Home screen left or right to view the other Home screens.
- How to reset the tablet?**
If your tablet cannot response to any function key, please use pin to press the reset button in the reset hole at least 3s to reset the tablet.
- How to save power?**
The battery icon on the screen shows the rest volume of electricity. To save the power, in system setting interface, please set Brightness and Sleep to a reasonable level.
- How to charge the tablet?**
Please charge the tablet timely before the battery icon shows blank. The tablet can be charged via the commanded DC charger. It is normal to find that the machine surface is warm under charging state.

Connect to Computer and File Transfer

When the tablet is connecting the tablet using the supplied USB cable to the computer, then you can operate the data on PC.

Home screen

Press power key and hold for 3s to power on the tablet, then the default home screen is shown as the below:

Back: Open the previous screen you were working, even if it was in a different application you back up to the Home screen, you can't go back any further in your history.

Home: Open Home. If you're viewing a left or right Home screen, opens the central Home screen.

Recent apps: Opens a list of thumbnail images of apps you've worked with recently. To open an app, touch it. To remove a thumbnail from the list, swipe it left or right. Note: After a short time without using these buttons may shrink to dots or fade away, depending on the current app. To bring them back, touch their location.

Status icon: It is used to show the current status of network connection, battery volume and system time.

All Apps: Touch it to see all apps and widgets. If you want to open, touch the icon an app, folder or widget.

1

2

3

4

5

6