

http://en.mumumusic.com

Copyright © 2012 Shenzhen Ramos Digital Technology Co.,Ltd.

## Settings

From a Home or All Apps screen, touch the Settings icon


 to enter the system setting interface, on which user can do settings shown below:

- a) Wi-Fi: turn on or turn off the Wi-Fi connection. The tablet can scan all available Wi-Fi network by itself. Choosing the target Wi-Fi and typing the correct password, then you can use the Wi-Fi.
- b) Mobile networks: when user want external connect 3G dongle, please do settings- Wireless & networks-more- Mobile networks-Data enabled.
- c) Sound: touch to setting "volume, Default notification, Touch sounds, screen lock sounds"
- d) Display: touch to setting "Brightness, Wallpaper, HDMI settings, Sleep, Font size"
- e) Storage: touch to view SD card & device storage setting.
- f) Battery: touch to scan the situation of the battery.
- g) Apps: touch to scan the APPS.
- h) Location & services: Location settings.
- i) Security: user can do screen security here.
- j) Backup & reset: touch to enter "Factory data reset" interface.
- k) Language & input: touch to set system language and text inputting method.
- l) Accessibility: accessibility setting
- m) Date & time: touch to set system time and date.
- n) About tablet: touch to view basic information about your tablet.

Note: it is important to do system setting, please enter the setting interface of your tablet to view each setting items carefully before using your tablet.

## HDMI setting


With the HDMI line (optional) connect the machine to the other equipment support HDMI output. On the main screen or application program interface touch: settings-display-HDMI, pop-up dialog.

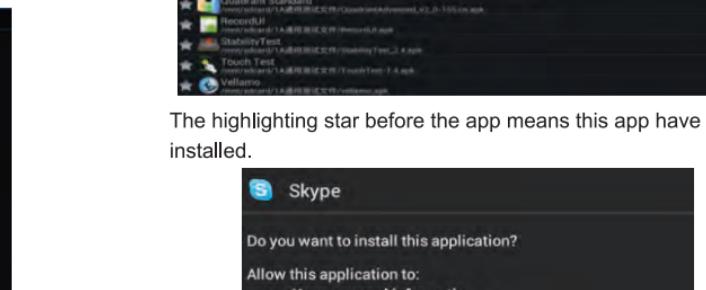

The output of HDMI, touch screen with touch mouse functions. HDMI exit, HDMI output, enter "HDMI", "Disconnect" touch options, you can exit the HDMI output.


## Appinstaller

From a Home or All Apps screen, touch the Appinstaller icon. Enter the corresponding interface, on which user can choose device to scan apks

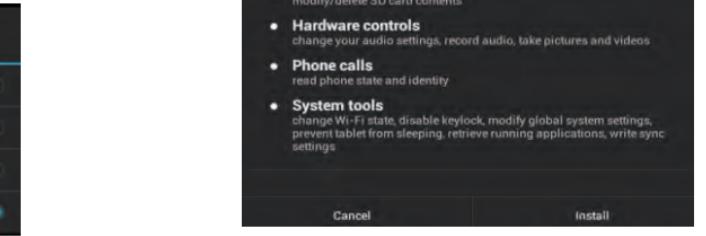


7


Choose the device, touch to enter into the APP list.

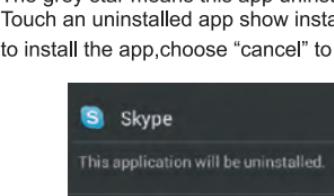

The grey star means this app uninstalled. Touch an uninstalled app show install window. Choose "install" to install the app, choose "cancel" to return.

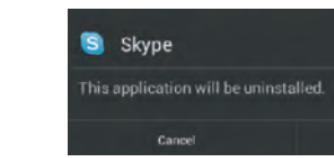


The highlighting star before the app means this app have already installed.

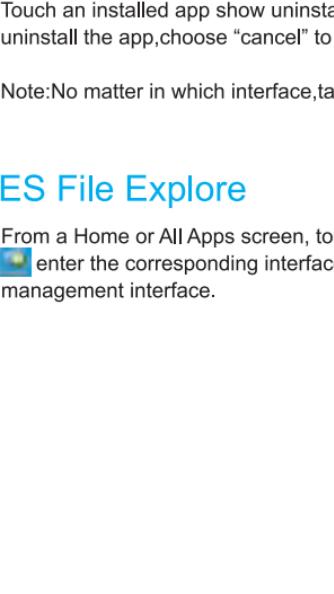

Touch an installed app show uninstall window. Choose "OK" to uninstall the app, choose "cancel" to return.

Note: No matter in which interface, tap  icon, can show submenu.

Select: turn on or turn off of the select function. When select "off", user can open the file directly; When Select "on", user can edit all files in this table. When Select "on", touch and hold target files, an option submenu will appear.

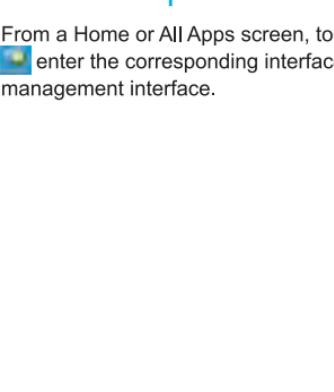



8

## ES File Explore

From a Home or All Apps screen, touch the ES File Explore icon, enter the corresponding interface, on which user can enter file management interface.



9

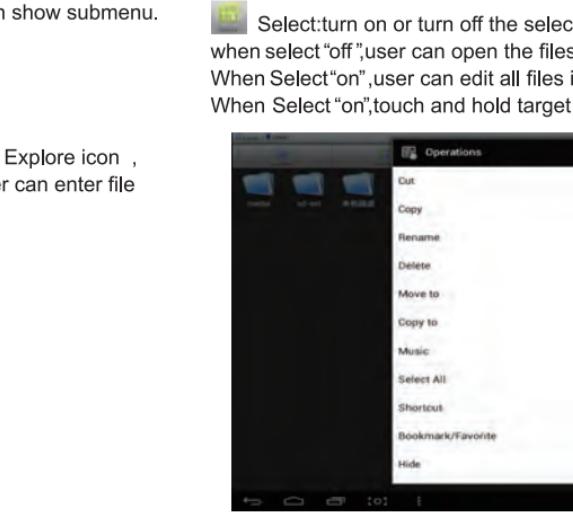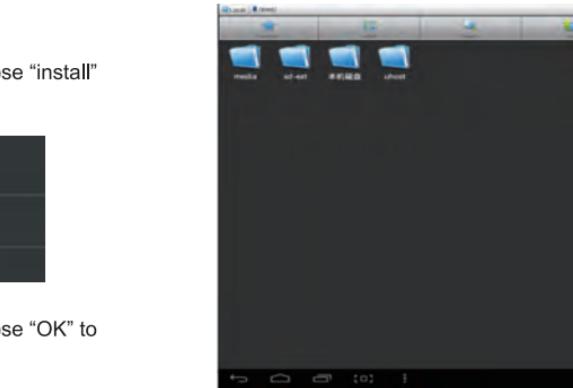

10

## Troubleshooting

### • The tablet cannot be turned on.

Please charge it via the DC charger to check if the battery is low. If not, then please reset the tablet.

### • Incorrect language displayed.

Please make sure that you have selected the correct language. Set language in (Settings) => (personal) => (Language & input)

### • Files cannot be downloaded.

1. Make sure the proper connection between computer and tablet.
2. Check if the memory is full.
3. Check if the USB cable is damaged and replace if necessary.



### • Audio files not playable.

This tablet cannot play audio files that are copy protected. Please ensure that only files that contain no copy protection are transferred to the tablet.

### • Failed to open the webpage.

Please check whether successfully create the Wi-Fi connection.

11

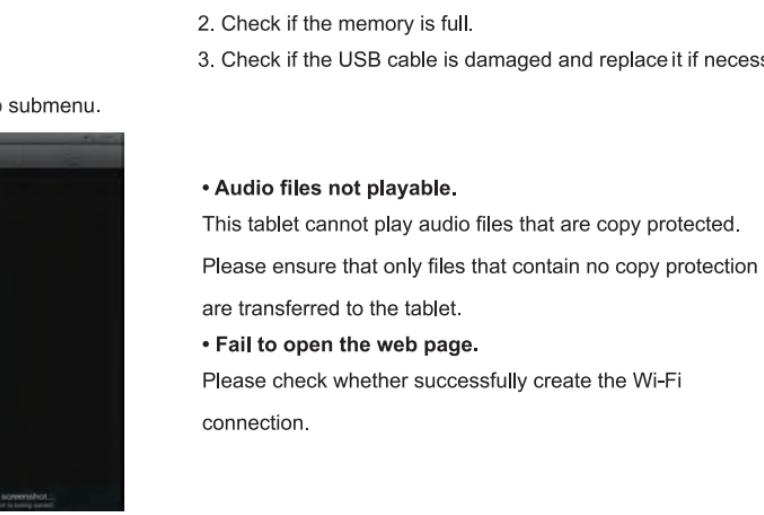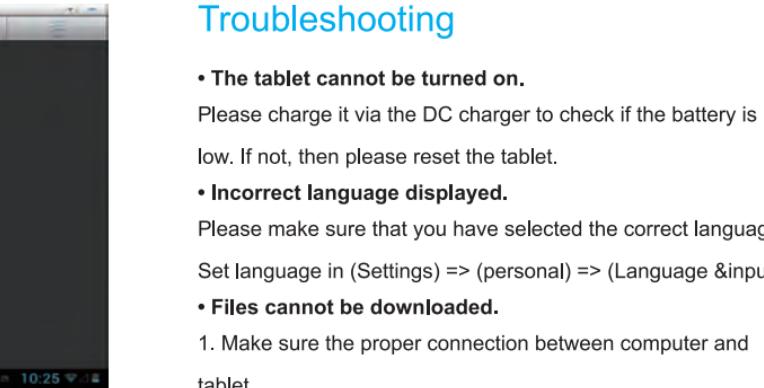

12

## FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.