



**983104**  
**Wireless Weather Station**



**Instruction Manual**

Please read all instructions carefully and retain for future use

## Welcome!

Thank you for purchasing our Journey's Edge Wireless Weather Station. Please store this manual in a safe place for future reference.

## GETTING STARTED

- Remove the unit from the box.
- Remove any packaging from the product.
- Please read all instructions and retain all packaging until you have checked and counted all of the parts.

## PACKAGE CONTENTS

- Wireless Weather Station
- Outdoor Temperature Sensor
- Instruction Manual

## FEATURES


- Indoor / Outdoor Temperature
- Humidity
- Time and Calendar
- Blue LED Backlight
- Alarm and Snooze
- Moon Phase

## BATTERY INSTALLATION

- Battery for Wireless Weather Station: 3 x AAA (not included)
- Battery for Outdoor Temperature Sensor: 2 x AAA (not included)
- Remove the cover of compartment and insert 3 x AAA in the Receiver AND 2 x AAA in the Sensor as per indicated polarity.
- Put the battery cover back on to the compartment.

## SAFETY PRECAUTIONS

- This unit is intended for indoor or outdoor use. If used outdoor, place it in a safe area sheltered from extreme weather, heat or moisture.
- This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge. They should be given supervision and instruction in the use of the unit by a person responsible for their safety.
- Close supervision is required when using this unit near small children.
- Never leave unit unattended within reach of young children.
- Ensure the unit is not close to any heat sources.
- To reduce the risk of the unit overheating, ensure the surrounding area is clear and well ventilated.
- Keep the unit clean and free of dust, lint, hair, etc.
- Repairs of electrical appliances must only be performed by qualified personnel; improper repairs may put user, people and property at risk. (Warranty stands void in case of inappropriate and / or unauthorized service of this unit or its parts.)
- Avoid liquid spills onto the unit or controllers.
- **DO NOT** immerse the unit in water or any other liquids.
- **DO NOT** use if unit has been dropped or damaged in any way.
- **DO NOT** operate unit after a malfunction.
- **DO NOT** use this unit for purposes other than its intended use.
- **DO NOT** put objects into or covers over openings on unit.
- **DO NOT** place batteries in the unit if storing or being left unused for long periods.
- **DO NOT** use with wet hands.

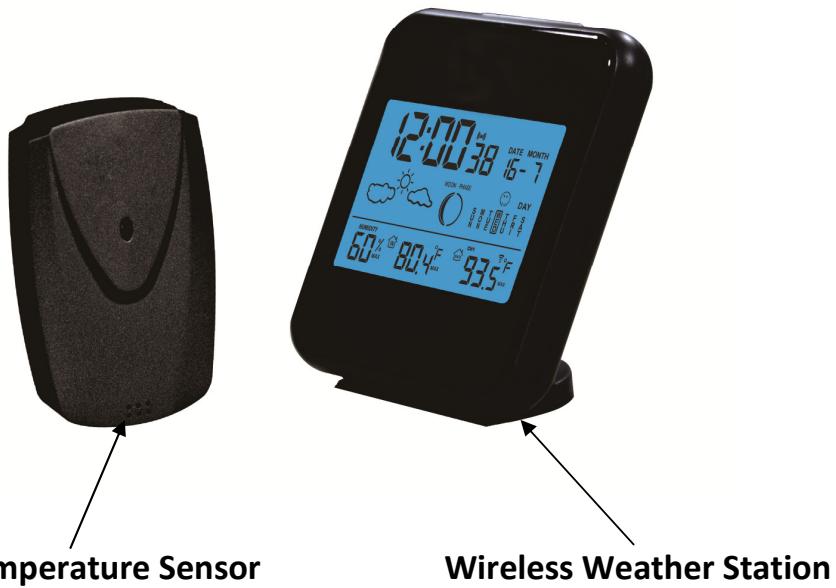

**Outdoor Temperature Sensor**

**Wireless Weather Station**

**Note:** Outdoor Temperature Sensor is to be installed on the outside of the house, office etc, so outer temperature can be scanned and transmitted to the Wireless Weather Station. Wireless Weather Station is for indoor use, and displays both indoor and outdoor temperature.

**DESCRIPTION OF PARTS (Back of Wireless Weather Station)**



MODE Button:

- Press “MODE” button once to switch between the time and alarm mode.
- Press and hold “MODE” button for seconds to enter setting mode.

UP Button:

- Press “UP” button once, to display Outdoor temperature CH1 → CH2 → CH3.
- Press and hold “UP” button for a few seconds, to refresh display of Outdoor temperature.

DOWN Button:

- Press “DOWN” button once to switch between °C/°F (Celsius & Fahrenheit) temperature display.

MAX/MIN Button:

- Press “MAX/MIN” button once to check the maximum and minimum of temperature and humidity.

SNZ Button:

- SNZ stands for Snooze. Press “SNZ” button to snooze the alarm. Default snooze duration is 5 minutes. It can be adjusted anywhere between 1 and 20 minutes.
- Pressing “SNZ” button also turns on the display backlight.
- “SNZ” and “Light/SNZ” buttons have same functions.

**A. TIME (Default time format shown 24HR)**

- Press and hold “MODE” button for seconds to enter the Time setting mode.
- Setting format: year → month → date → 12/24HR → hour → minute → exit.
- Default calendar at 0:00, January 01, 2008
- Press “MODE” button once to confirm and go to the next setting.
- Press “UP” button once to increase value slightly. Press and hold “UP” button for seconds to increase value rapidly.
- Press “DOWN” button once to decrease value slightly. Press and hold “DOWN” button for seconds to decrease value rapidly.
- Moon Phase and Week Display updates as per calendar setting.

**B. ALARM (Default alarm at 7:00)**

- Press “MODE” button once to switch between the Display & Alarm mode.
- Press “UP” button once to activate the alarm function with ((•)) icon, and press the button once again to deactivate the alarm function.
- Press and hold “MODE” button for seconds to enter the Alarm setting mode.
- Setting format: hour → minute → SNZ time. [Default SNZ time: 5 minutes] (You can select 1-20 minutes)
- Press “UP” button once to increase value slightly. Press and hold “UP” button for seconds to increase value rapidly.
- Press “DOWN” button once to decrease value slightly. Press and hold “DOWN” button for seconds to decrease value rapidly.
- Press “MODE” button once to confirm the alarm setting time.

Buzzer sound of the alarm:

- 0-10 seconds: BEEP 1 time per second
- 10-20 seconds: BEEP 2 times per second
- 20-30 seconds: BEEP 4 times per second
- After 30 seconds: serial BEEP

During BEEP, press “SNZ” or “LIGHT/SNZ” button once to repeat the alarm again in preset SNZ time later, or press any other button to off the alarm.

The preset alarm time will remain valid on the following days as well.

**C. TEMPERATURE ALERT (Default format shown °C)**

Indoor temperature range: -9.9°C to +50°C

Indoor humidity range: 20% - 95%

Scanning time: +/- 30 seconds

Temperature not display when alarm goes off.

#### **D. INDEX OF ENVIRONMENT**

- Dry : humidity below 40%
- Comfort : temperature within 20°C-28°C AND humidity within 40%-70%
- Wet : humidity above 70%
- No Display : temperature out of 20°C-28°C AND humidity out of 40%-70%

#### **E. WEATHER FORECAST (Default at Slightly cloudy)**

Weather forecast indicates the weather trend in 24 hours.

Weather forecast: Sunny, Slightly cloudy, cloudy and rainy.

Scanning time: +/- 30 seconds

Caution: weather forecast for reference only.

#### **SCANNING OUTDOOR TEMPERATURE**

- On turning on the Wireless Weather Station (indoor unit), it takes about 3 seconds for it to scan indoor temperature and humidity.
- When the Indoor unit is on, the outdoor unit automatically begins scanning the temperature and transmits the temperature to the indoor unit within 3 minutes.  icon flashes while outdoor temperature is being scanned.
- Press and hold "UP" button for 2 seconds to refresh the outdoor temperature, and rescan. It will display outdoor temperature within 3 minutes.

#### **CLEANING AND MAINTENANCE**

**DO NOT** use chemical based cleaning agents.

Use a soft, dry cloth to clean **ONLY**.

Note: As a result of continual improvements, the design and content of this product may vary from those illustrated.

#### **FCC INSTRUCTIONS**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**LIMITED WARRANTY**

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of thirty (30) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, etc. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

**WARRANTY PERFORMANCE:** During the above 30 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 30 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@mtradinggroup.com](mailto:info@mtradinggroup.com) or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.