

# BF-OG200 instruction

## Notice to the user

Government law prohibits the operation of unlicensed radio transmitters within the territories under government control.

Illegal operation is punishable by fine or imprisonment or both.

## THANK YOU

Thank you for purchasing Belfone series professional radio communication products!

Since 1989,BelFone has been always engaging in research and exploration of radio communications technologies, in order to lead intelligent technologies in the industry. We make every effort to research and design products according to modern complicated communications environment and we offer complete and customized communication solutions to clients. Our products will satisfy you because of its excellent performance and outstanding communications strength.No matter what field you are in, you will be satisfied with the radio

## **Warning!**

- ◆ In inflammable and explosive environment (gas station, gas station, textile factory and other areas with more combustible gas and dust), please turn off the power supply of the walkie-talkie.

## **Precautions**

It's important that the operator is aware of and understands hazards common to the operation of any radio. Please observe the following safety precautions to prevent radio damage or personal injury. The following precautions shall be observed during operation, service and repair of this radio.

- ◆ The recommended usage rate is 1 minute for TX and 4 minutes for RX, when the radio is used for transmission for many hours continuously, the radiator and chassis will become hot;
- ◆ Don't leave the transceiver in direct sunlight for a long time, don't place the transceiver on extremely heat, damp, dusty area, and don't put it on unstable surfaces;
- ◆ When restriction or warnings are posted regarding the use of radio devices, please obey the regulation and turn the transceiver power off;
- ◆ Use of the radio while driving may be against traffic laws, please avoid using it ;

- ◆ If you notice any problems on the radio, please turn off at first. Then contact with local dealer. Do not modify this radio unless instructed by this manual or refer service to a qualified licensed or certified technician only;
- ◆ If you want to use the machine for secondary development, please contact with BelFone's technical engineer or dealer for technical assistance;
- ◆ Please keep the surface of radio clean and dry, clean the radio using a cloth moistened with clean water and a mild dishwashing liquid.

## Supplied Accessories

**Notes:** The accessories listed below are covered by BelFone dealer, authorized BelFone agents or factories.

After carefully unpacking the transceiver, identify the items listed in the table below. If any items are missing or have been damaged during shipment please contact with dealer immediately.

### accessories



 
Strap




Belt Clip




Li-ion Battery




USB charging Cable Earphone

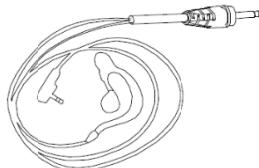

Power Adapter

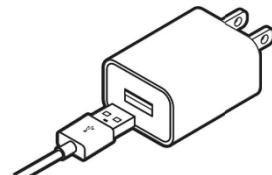


## Interphone accessories installation

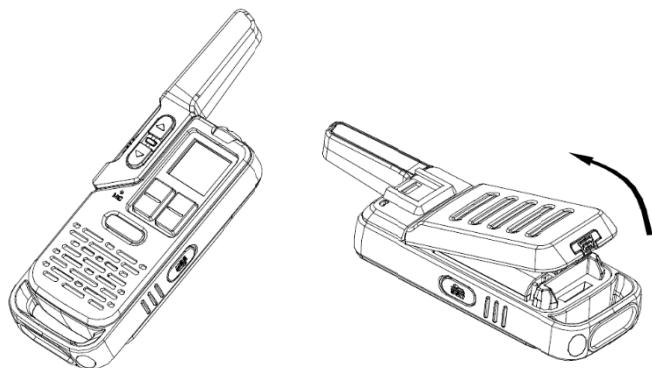


Take out the transceiver

Open the battery cover

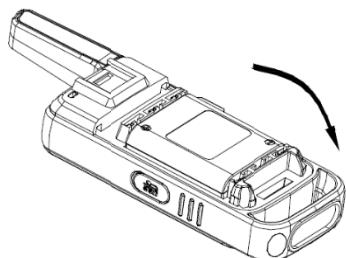

Push the battery into the battery jar,match the guides of the battery with the corresponding grooves on the back of the radio,press down the battery until a click is heard to lock it in place

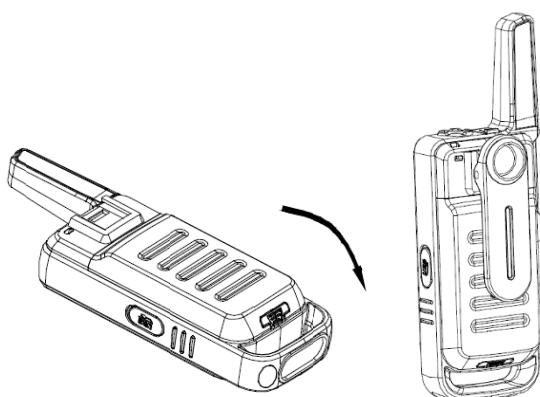


Close the battery cover

Mounting the belt clip


**Note: Don't attach/remove the battery if the radio turned on**

## Interphone battery installation

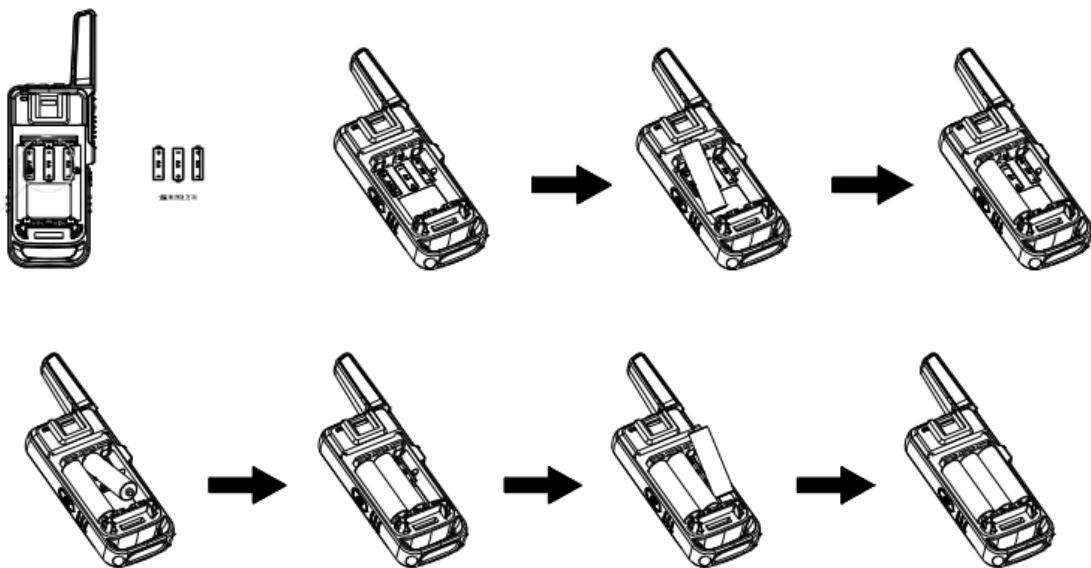


- If you are using AA battery or No. 5 battery, please install the battery strictly according to the direction on the back of the radio, so as not to reduce the life of the contact by mistake.
- Suggestion: For better user experience, please choose original Li-ion battery.

# Getting Acquainted

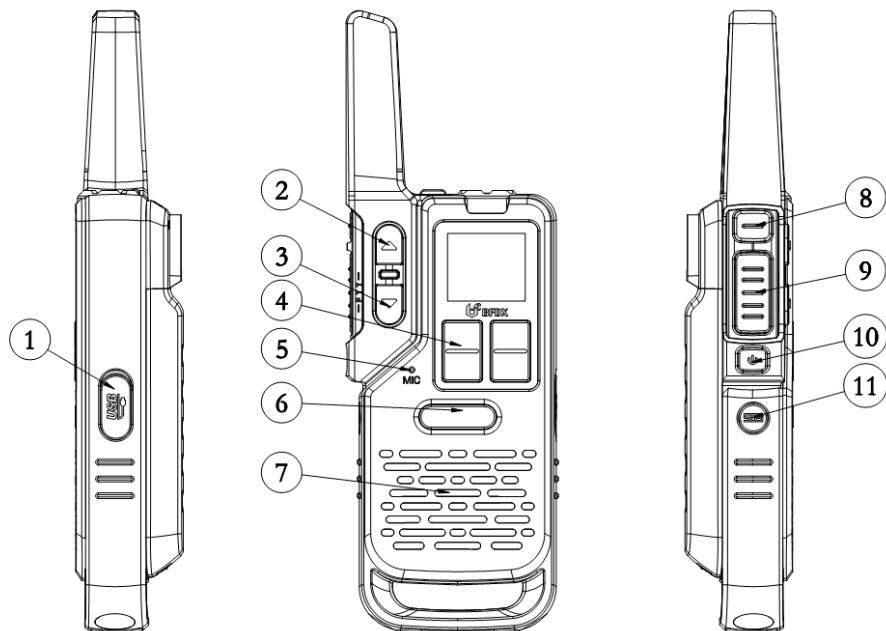

1	Micro-USB Charge Jack	7	Speaker
2	↑/Increment Button	8	Quickly Team Building
3	↓/Decrement Button	9	PPT key
4	Function Keys	10	Power On/Off Button
5	Microphone(MIC)	11	SOS Button
6	PPT key		
function keys	Including 【MENU】 【OK】 【Flashlight】 【Ringtone】		

## Icon Indicated

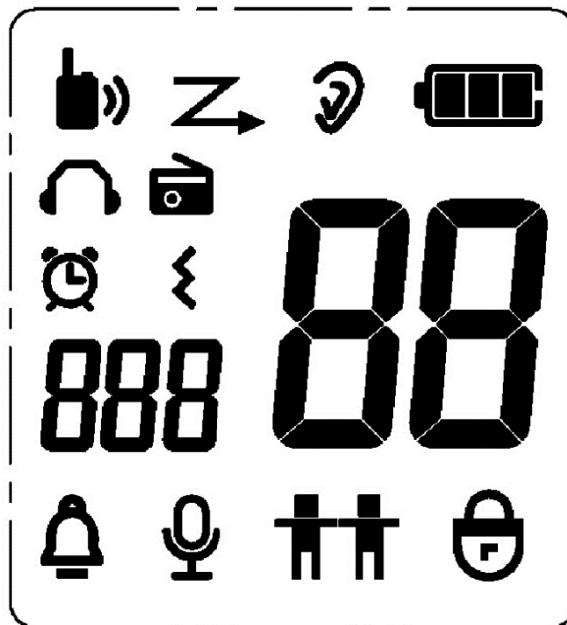

	Launching		Plug in earphone		Ringtone
	Receiving		FM Radio		VOX On
	Scanning On		Stopwatch		Quickly Team Building
	Monitoring		The Countdown		Join The Team Quickly
	Battery Capacity		Vibration Mode		Keyboard Locked

## Introduction to Functions and Operations

Press [MENU], then press [ $\uparrow/\downarrow$ ] to select the function, and the blinking function icon indicates the function that is currently in use. Press [OK] to confirm the operation, and the function icon will be blinking to always on; No function icon indicates when a function is not enabled.

## 1. Power on/off

Long press the power button, the walkie-talkie will make "Beep" sound, and the host self-check screen will show "L" after starting up.

Under the power-on state, long press the power button, the walkie-talkie will make a "beep beep" sound to close.

## 2. Transmit/receive

Press and hold down the PTT key or TALK button to launch, speak to the MIC.

Release the PTT key to receive.

## 3. Double Channels Monitoring

In conventional standby mode, the terminal monitors two waiting channels (primary channel + secondary channel), and PTT Key and TALK button key transmit to the primary channel by default.

## 4. Main channel switch

In standby mode, the large number on the screen indicates the current main channel number, and the small number indicates the current main channel subtone. In standby mode, press [OK], the channel number flashes, select the channel, press [ $\uparrow/\downarrow$ ] to lock the channel and enter the channel subtone setting, press [ $\uparrow/\downarrow$ ] to switch CTCSS/CDCSS (serial number 0 means no CTCSS/CDCSS), press [OK] to confirm.

Long press **【 ↑/↓ 】** can quickly select channel number.

## 5. Sub-channel switch

By operating menu, select the second channel operation function, the screen print display "2 ch"), the characters show the current deputy channel number, press [OK] to enter, channel number, according to **【 ↑/↓ 】** switching channels at this time, press the[OK] key lock channel, small digital display number represents the tone at the same time, press the **【 ↑/↓ 】** key to adjust the tone, press [OK] to complete the tone setting, and automatically return to the standby interface.

## 6. CTCSS and CDCSS

The small number on the screen represents the CTCSS/CDCSS (mute code number) of the current channel.38 analog CTCSS +83 forward digital CDCSS +83 reverse digital CDCSS are available (0-204 optional, 0 for no subtones).Long press ↑ or ↓ key to quickly select CTCSS/CDCSS number.

Note: it is normal for some forward digital CTCSS/CDCSS and reverse digital CTCSS/CDCSS to communicate.

## 7. Ending sound elimination

It supports endingsound elimination when subtone is on, and it supports to send 55Hz frequency to turn off the other speaker at the end of transmission.

## 8. Scanning

Through the menu operation, select the scan function (scan icon on the broken code screen ), press [OK] to enter/exit the scanning mode and scan all the configured channels. When a voice signal is scanned in a channel, the loop scan is continued after the end of receiving and after 3 seconds in the channel.

Before the scanning function is turned off, the scanning icon on the screen should always be on, and press the PTT key within 3 seconds to specify the reply to the active channel.

## 9. Monitor

Through the menu operation, select the monitor function (monitor icon is displayed on the broken code screen ), press [OK] to confirm that the monitoring function is on/off, and continue to monitor [main channel] selected by default.

## 10. Keyboard lock

In standby mode, long press [OK] keyboard lock key to open/unlock keyboard operation (lock icon on broken code screen) , SOS Key, PTT Key and TALK button are not affected by keyboard lock and can be operated at any time.

## 11. Volume control

In standby mode, directly operate the button [ $\uparrow/\downarrow$ ] to adjust the volume level of the speaker/headset. During operation, according to the current volume, the speaker/headset has "Beep" feedback of corresponding volume level, and the volume of 1-8 levels can be adjusted.

## 12. Quickly team building

initiate

In standby mode, long press the [Quickly Team Building] button on the left side of the machine for 3 seconds to start the "Initiate fast Team" icon on the screen  Lights up. At this point, send the current [main channel] and [sub-channel] channel information to the surrounding loop, and long press the [Fast Team formation] button on the left side of the fuselage again to end the initiating team formation and sending.

join

In standby mode, double-click the [Quickly Team Building] button on the left side of the machine to launch the "Join fast Team" icon on the screen  Lights up. At this point, search for whether there is a channel around "initiate fast team". If the channel is found, adjust [main channel] and [sub-channel] to the same with the other party (including subtone), and send out a "ding" sound after joining the team successfully. If no response from the loop search for 5 times, it will automatically exit the "Join fast team" and make a "beep beep"

sound.

## 13. Flashlight

Operate the [flashlight] key on the front of the fuselage to trigger the flashlight

LED light to be lit;

Short light: Press 3 seconds: follow long light, release and turn off.(Can be

used for light signal)

Constant light: Long press for 3 seconds, then make a beep to enter the long

light mode

Blinking: Press stop flashlight + SOS to enter blinking mode

Exit normal light or flicker: long press [flashlight] button for 1 second to exit

## 14. SOS

Long press the "SOS" button for 1.5 seconds to turn on the emergency mode. The intercom will send out alarm whistle and flashlight instructions, and send out alarm signals alternately to the "main channel" and the "sub-channel" with maximum efficiency.

Mode: Send a 5-second alarm whistle every 20 seconds and wait for the rescue signal. After receiving the signal, press PTT to reply to the active channel by default.

exit

When the SOS mode is on, long press the "SOS" button for 1.5 seconds to turn off the SOS mode.

## 15. VOX

Support earphone VOX or bare machine VOX

Select VOX Freehold (voice-activated icon on) from the menu  Press [OK] to enter and then select the level 1-7 (display in small print and close as "OFF"). Press [OK] to confirm and return to the main interface. Voice control level 1 is the most sensitive.

## 16. Stopwatch

Select the stopwatch feature (stopwatch icon) from the action menu  With the countdown icon , press [OK] to enter the function.(Maximum 999 seconds)  
Press [OK] to start the timer, to start reading Numbers, press [OK] again to stop and display the stroke seconds. Press the [OK] key to restart the timing. Press the [MENU] key to end the operation and return to the main MENU.

## 17. Countdown

Select the countdown function (countdown icon) from the menu  With stopwatch icon , press [OK] to enter the function.(Maximum 99 minutes)  
By operating through the screen display timing time write left key stepping down timing time, 30 seconds to step into the unit, press [OK] button to confirm

again to start the countdown, timing time to countdown to rang the bell, by manipulating the [OK] keyboard to confirm and close the bell, the countdown can be initiated in the process of PTT calls, and do not interrupt or suspend the countdown function at this time if the terminal is called call, the call is interrupted temporarily, countdown prompt the bell.

Note: Long press ↑ or ↓ button to quickly adjust the countdown time

## 18. FM radio

Through the action menu, through the menu select open (FM icon  Light) Frequency range: 76-108mhz adjustable, at this time the screen display FM frequency, through the ↑ ↓ key frequency search, 0.1mhz for stepping unit, long press the ↑ ↓ key to start the automatic channel search mode, after the channel search stop.

Turn on the radio to play at the current volume level. Please pre-adjust the appropriate volume level on the main interface.

## 17. Electric quantity display

There is a battery icon on the screen  Indicates the current power level.

## 18. Low battery reminder

When the system determines that the battery power is less than 20%, beep every five minutes. When the battery is too low, the walkie-talkie will

automatically enter the forbidden status.

## 19. \* External headphones

You need to choose the accessories of this product. After the earphone is inserted and recognized, enter the earphone working mode and the earphone icon on the screen  Light up.

## 20. Key prompt tone

Each time the key is operated, the prompt sound will be issued. The volume of the prompt sound will change with the current volume level.

## 21. \* Vibration reminder

Vibration function version of this product is required.

By long pressing the [Ringtone] function key, the vibration function is switched on and off, and the vibration icon is displayed on the screen  Light up. When the terminal is called, initiate a short vibration prompt (effective if subtone matching is required).

Note: When the electric quantity is less than 10%, the vibration function will automatically fail to save power consumption.

## 22. Launch/End beep

Supports prompt sound for both launch and end, and external prompt sound at the end.

## 23. Ringtone

Support 10 different ringing call tones optional, through the menu can be set, enter the Ringtone Settings menu  , change ring tone number by ↑ ↓ , and press [OK] to confirm the selected ring tone.

In standby mode, short press the [Ringtone] key to initiate a Ringtone to the current channel and play the Ringtone locally.

## 24. TOT

Press [MENU] to enter the MENU, press [Ringtone] button to enter TOT time setting, and then the left three-digit "707" will be displayed. Timeout forbidden time can be set by code breaking number. 15/30/45/60/75/90 seconds is optional. Default is 45 seconds.

Note: When setting "00", it means that TOS timeout is not set.

## 25. Replyhang time

After receiving the information from any channel, the terminal will press PTT to reply the channel by default within 3 seconds.

The called party should resume the call after the "beep" sound at the end of transmission.

## 26. Restore factory Settings

In standby mode, press and hold TALK button + PTT Key + [power] button to complete shutdown.Factory Settings will be restored after reboot (functions

and subtones will be reset, and channel 1 will be started up)

## 27. \* Charging instruction

To use this function, the lithium battery of this product should be selected, which supports 5V power input and charging through the Micro USB interface of the body of the intercom.

LED indicator: green means full; red means charging.

Screen icon indication: when charging power is switched on, the screen battery icon has corresponding animation indication.

Note: This product is equipped with charging protection. When in high power, it will automatically change to trickle charging mode. It is not recommended to use the walkie-talkie during charging which will reduce the battery life.

## 28. Charging identification

This walkie-talkie is designed with the function of charging identification to prevent the dangerous consequence caused by the use of the dry battery by mistake. In order to ensure your safety, this walkie-talkie is guaranteed to be effective when leaving the factory and cannot be charged for ordinary batteries (except suitable lithium batteries).

**Note: Please do not try to charge AA or No. 5 battery to avoid damage or injury. .**

## **29. Receiving and sending instructions**

Receive: The receive icon on the screen lights up, and the green LED indicator lights up.

Launch: The launch icon on the screen lights up and the red LED indicator lights up.

Note: The receiving and sending status and charging indicator share LED indicator light.

## **30. Backlight**

The screen of this product is equipped with a backlight to operate in dim conditions.

## **31. Compass**

Walkie-talkie back clamp/standard mechanical compass, for your outdoor travel guidance to provide convenience. The back clamp is easy to disassemble. In order to avoid the interference of electronic products to the environmental magnetic field, it is recommended that you disassemble the back clamp to get more accurate direction.

## **32. Strong D-shaped fastening**

The structure of the walkie-talkie is equipped with strong D-shaped fastening, which is suitable for outdoor environment such as mountaineering and hiking, and can be fixed and carried with quick fastening and other tools. Please select

the appropriate size tool for your convenience.

## CTCSS Standard Frequency Table

The tone No.	frequency Hz	The tone No.	frequency Hz	The tone No.	frequency Hz
1	67	11	97.4	29	179.9
2	71.9	12	100	30	186.2
3	74.4	13	103.5	31	192.8
4	77	14	107.2	32	203.5
5	79.7	15	110.9	33	210.7
6	82.5	16	114.8	34	218.1
7	85.4	17	118.8	35	225.7
8	88.5	18	123	36	233.6
9	91.5	19	127.3	37	241.8
10	94.8	20	131.8	38	250.3

The tone No.	coding						
39	D023N	60	D143N	81	D315N	102	D532N
40	D025N	61	D152N	82	D331N	103	D546N
41	D026N	62	D155N	83	D343N	104	D565N
42	D031N	63	D156N	84	D346N	105	D606N
43	D032N	64	D162N	85	D351N	106	D612N
44	D043N	65	D165N	86	D364N	107	D624N
45	D047N	66	D172N	87	D365N	108	D627N
46	D051N	67	D174N	88	D371N	109	D631N
47	D054N	68	D205N	89	D411N	110	D632N
48	D065N	69	D223N	90	D412N	111	D654N
49	D071N	70	D226N	91	D413N	112	D662N
50	D072N	71	D243N	92	D423N	113	D664N
51	D073N	72	D244N	93	D431N	114	D703N
52	D074N	73	D245N	94	D432N	115	D712N
53	D114N	74	D251N	95	D445N	116	D723N
54	D115N	75	D261N	96	D464N	117	D731N
55	D116N	76	D263N	97	D465N	118	D732N
56	D125N	77	D265N	98	D466N	119	D734N
57	D131N	78	D271N	99	D503N	120	D743N
58	D132N	79	D306N	100	D506N	121	D754N

59	D134N	80	D311N	101	D516N		
----	-------	----	-------	-----	-------	--	--

The tone No.	coding						
122	D023I	143	D143I	164	D315I	185	D532I
123	D025I	144	D152I	165	D331I	186	D546I
124	D026I	145	D155I	166	D343I	187	D565I
125	D031I	146	D156I	167	D346I	188	D606I
126	D032I	147	D162I	168	D351I	189	D612I
127	D043I	148	D165I	169	D364I	190	D624I
128	D047I	149	D172I	170	D365I	191	D627I
129	D051I	150	D174I	171	D371I	192	D631I
130	D054I	151	D205I	172	D411I	193	D632I
131	D065I	152	D223I	173	D412I	194	D654I
132	D071I	153	D226I	174	D413I	195	D662I
133	D072I	154	D243I	175	D423I	196	D664I
134	D073I	155	D244I	176	D431I	197	D703I
135	D074I	156	D245I	177	D432I	198	D712I
136	D114I	157	D251I	178	D445I	199	D723I
137	D115I	158	D261I	179	D464I	200	D731I
138	D116I	159	D263I	180	D465I	201	D732I

139	D125I	160	D265I	181	D466I	202	D734I
140	D131I	161	D271I	182	D503I	203	D743I
141	D132I	162	D306I	183	D506I	204	D754I
142	D134I	163	D311I	184	D516I		

## **The statement**

In the process of compiling this manual, we have made every effort to be accurate and complete. If you have any questions, please contact us in time. We will give you detailed answers in the first time. Due to the rapid development of radio communication technology, Belfone reserves the right to change the product design and specifications without prior notice.

## **FCC Warning:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **Safety Information for Radios**

Your wireless handheld portable transceiver contains a low power transmitter. When the talk button is pushed, it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless devices.

### **Important**

FCC RF Exposure Requirements: For body-worn operation, this radio has been tested and meets the FCC RF exposure guidelines when used with accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Hold the transmitter approximately 25 mm from your face and speak in a normal voice, with the antenna pointed up and away.