

## Care and Maintenance

In order to use and keep this device properly, please read carefully the suggestions below before you using it.

### Warnings:

- ✧ Avoid any violent bump or shake which may cause damage to your device;
  - ✧ Do not use acid-base or other harsh chemicals to clean your device;
- ✧ Earphone sound should not too lound, long-term under high volume will lead to ear ring, please turn it down as far as possible;
- ✧ The device is not waterproof. If caught in the rain or in a humid environment, do not turn your device on. Put it in a cool and dry place, attaching with damage introduction, and then bring your device to the maintenance center as soon as possible.
- ✧ Do not use or store the device in high temperature, high pressure, humidity, strong static or strong magnetism areas;
- ✧ Do not recharge the device in thunderstorm weather;
- ✧ Please replace the battery in time. The device may not work properly if the battery is low.
- ✧ The device has sensitive electronic components inside; do not attempt to open the device. Bring your device to the local maintenance centre if it doesn't work properly;
- ✧ This device use flash memory. It can save data permanently. However, the fire, bump or attack of electric wave may cause damage or loss of data. You are advised to create a backup of important data. We will not be liable for the loss or damage of data due to improper operation, repairs, or other unexpected situation;
- ✧ Do not put the battery near the fire or into the fire. Using the wrong type battery will be explosive, only use the same type or equivalent type to replace the batteries. Be sure to follow the instructions to dispose of waste batteries;
- ✧ If it is prohibited to use wireless equipment or using this equipment may cause interference or danger, please do not open the device. All wireless devices may be disrupted, thus influnce performance;
- ✧ Please use the device under the guide of parents if the child is under 5 years old.
- ✧ For more information please visit our website: <http://www.hwapu.com.cn>
- ✧ We are committed to continuously improve the product function, quality and update our software version. The content and pictures in this guide may be different from actual function, and the guide will not be updated in time and we do not give you advance notice, please forgive us and refer to our actual function of the device.



- ✧ Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.
- ✧
- ✧ 15.21 Changes or modifications made to this device not expressly approved by manufacturer may void the FCC authorization to operate this device.
- ✧ 15.105 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following.

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment
- ✧ and receiver.
- ✧ —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ✧ —Consult the dealer or an experienced radio/TV technician for help.
- ✧ caution: risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- ✧ Adapter shall be installed near the equipment and shall be easily accessible.

“Hereby, Shenzhen Koridy Educational Technology Co., Ltd.  
, declares that this [Kids Tablet PC i6] is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The declaration of conformity may be consult at

Import's / manufacture Name: Shenzhen Koridy Educational Technology Co., Ltd.

Import's / manufacture Address: Address: 3-4 Floor, No.1 Bldg, Zhongyuntai Industrial Area, Tangtou No.1 Rd., Shiyuan St., Bao'an District, Shenzhen, China

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.



## Chapter 1 Instructions

## 1.1 Overview



1.1 Overview

## 1.2 Buttons

- ❖ **Power button:** When the device is on Power off state, press the button it will open. When the device is open, press the button shortly can enter or exit the sleep mode; long press the button will show you the POWER OFF notice: choose OK, it will power off; choose NOT, then back to the home screen; long press this button over 10 seconds, the device will power off automatically.
- **Volume button +:** increase the voice volume and pop out the Volume Bar;
- **Volume button -:** low the voice volume and pop out the Volume Bar;
- **Menu button:** pop out Menu or shortcut function bar
- **Home button:** back to the Main screen;

## 1.3 Battery Information

The device has a built-in 3200Ah Lithium polymer battery, pay attention to the following matters:

- ❖ Reference voltage: 3.8V; Charging voltage: 4.2V
- ❖ Use original charger only.
- ❖ When battery is insufficient, please charge it in time. It can be charged whether in on or off condition. If the power is too low, the device will power off automatically.
- ❖ When charged in on condition, the battery icon will display charge condition in notification bar.
- ❖ When connecting the charger, the indicated light is red; when pull out the charger, the light turns off.
- ❖ When the device is charged, the indicated light is red; when the light is green, the device is full-charged.

**Note: If it is used in low condition for long time, the battery life will be reduced. Please charge the device in time when the battery power is low.**

# Chapter 2 Operations

## 2.1 Memory card

The device supports 32GB and below 32GB TF card. Because some applications need TF card, please equip one.

**Note: When visiting files in TF card, do not pull out the card in order to avoid damaging it. If you need to pull out TF card, please uninstall it following the steps “system setting/storage/SD card” (SD card is TF card)**


## 2.2 USB function

### 1. USB Host

USB Host can connect the device and U disk, USB, mouse and so on with OTG cable. After connecting corresponding external equipment, the equipment can be used normally.

### 2. USB Connection function

Connecting USB, the files in TF card, build-in flash can be operated. When the device is linked to PC, the taskbar will pop out this icon , and the link screen will be shown, or drag down the taskbar and click “USB connecting”. After operating “open USB storage”, you can view, edit, copy files in this screen.

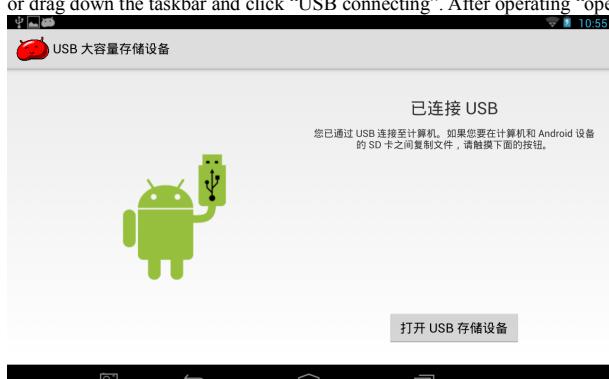

## 2.3 Download

You can enter to each application screen and click “download” button to download resource, or click the download notification bar if there is not preset data, the system will run to the download screen automatically, and correspondly match the resource to its fold. Users can also select the path to save the files or copy it to the path on the device through PC port.

## 2.4 Program update

This device can be updated free. When there is a new version program, the notification will pop out, users can update or cancel update it. You can operate this connecting internet.

## 2.5 System setting

System setting path: click menu button in children mode or parents’ mode, tap “setting”, and adjust the state according to personal habit. You can set network, sound, brightness, wallpaper, date and time both in children mode and parents’ mode. Gravity Sensor, fonts, languages, programs, system safety, backups can be set in parents mode, you can also reset and view storage information in this mode.

## 2.6 Network

Enter “setting--> wireless and network-->Wi- Fi” to set Wi-Fi. When Wi-Fi is connected, the device can visit Internet.

### ◆ Wi-Fi on/off:

Tap Wi-Fi button, slide the switch right or left to turn on or off Wi-Fi. When the device is connected to the Internet, network signal icon will appear in the notification bar. If there is Wi-Fi around, the device will automatically search, and show network information in the list below:



### ◆ Connect Wi-Fi access point:

Scan network: click “scan”, the device can refresh the surrounding Wi-Fi access points, and display the searched network ID, and the signal strength;

If searched Wi-Fi access point and find that the network is not encrypted, choosing the appropriate network, the device can automatically connect to the network;

If connected to a network before and saved the correct password, after turning on Wi-Fi, the device would automatically link to the network;

If the wireless network is encrypted, click Wi-Fi access point, entering correct password, and then the network can be connected.



**Note:** If the set Wi- Fi name doesn't display in the list, it may be the following reasons:

1. The router is not open, please check whether it works properly;
2. Wi- Fi area is beyond the coverage of the wireless router, please use it within the range;
3. Wireless router sets a function of “SSID not broadcast”, so it cannot be seen when searching. Please set the router in radio mode and refresh network list, or, try the following ways:

Tap “add network”, pop up the network window, then enter the corresponding network name (SSID). When setting up network security (NONE, WEP, WPA/WPA2 PSK/802.1X...), inputting corresponding password (if the security is NONE, password is not required), clicking “save”, the network is added and the access point will appear in the list. Select the network name and click it, the network can be automatically connected.

4. If the connected network fails to connect because of the changed password, please enter the network list, select the corresponding network name and click “don't save”, then repeat the above steps.

### ◆ IP address, network gateway setting

In normal state, users don't need to set up IP address, network gateway etc. manually, just follow above steps to connect the network. Due to special circumstances, users need to manually fix IP, Gateway, and so on. Please follow belows:

Click corresponding network, pop up linked window, and choose “Advanced Options” (“Advanced Options is” below “password”, sliding down to show). After choosing, there displays relevant detailed setting below.

WPS: The default status is “off”. This item is configured depending on whether the wireless router is encrypted or not.

Proxy settings: The default status is “none”. If not necessary, please don't change the setting.

IP setting: The default status is “DHCP” (dynamic IP). When connected to the network, IP address is automatically obtained. When the status is “static”, users can manually set up IP address, network gateway etc.. Please click certain area, input corresponding information in the pop-up window.

## 2.7 Notification bar

Notification bar only shows in parents’ mode on top of the screen. Slide down the bar to defold the hidden menu. Notification bar displays current system time, battery status, SD status, Wi-Fi, background application, USB connecting and so on.

Main icons and identification:

	new e-mail		download
	activity		upload
	playing audio		synchronously

	warn		screen capture
	USB connecting		USB adjusting
	charging		Wi-Fi connecting
	alarm		capture button
	Menu		back
	recent tasks		Home

## 2. 8 View the manual

Please view the manual to look for other operations.

Manual path: parents' mode → Manual

## Appendix 1: Troubleshooting

Problem	Possible reason	Remedy
Unable to turn on the device	Low battery	Charge in time
Charged but still unable to turn on	Low battery protection	Charged for 10 minutes, please hold Power button for 10-20 seconds to open the device.
Automatic power-off	Low battery	Charge in time
Unable to transfer data to PC	USB is not connected	Slide down notification bar to connect USB
	USB cable is not connected	Connect USB
	USB cable is damaged	Change a new USB cable
	Full disk	Delete files
Unable to open a file	Wrong file format	Make sure the file format is compatible with the machine.
Unable to play MP3 file	Low battery	Charge in time
	Wrong MP3 format	Make sure the file format is compatible with the machine
Inaccurate time	The time is not regulated.	Set the time or check the option of date and time
Slow process	Storage space is full	Delete some applications
	Disk space is full	Delete some files
Malfunction or crash	The system program is damaged.	Hold Power button for 10s to power off and restart
		Insert RESET slot to reset
		Mail to factory to repair.

## Appendix 2: Technical parameters

Specification	
Product	Kids Tablet PC I6
Screen	7 inches,1280×800 pixels, IPS full view 16 million colors
Processor	High-speed dual-core processor
System	Android 4.2
Memory	DDR3 1GB
Frequency	1.4GHz
Built-in flash memory	8GB
Camera	200W rear camera
Network	Support WI-FI and 3G netcard
Touch screen	Multi-touch capacitive screen
USB	Support battery charging, mouse, U-disk etc.
TF card expansion	Up to 32GB
Battery	3200mAh/3.7V Lithium polymer battery
Power adapter	100~240V input
Indicator	Charging LED indicator
Temperature	Operating temperature: 0 to 40 degrees Celsius; Storage temperature: -10 to 60 degrees Celsius
Host size	193mm×120mm×10.6mm
Others	Support gravity sensor Support mp3, wma and many other audio formats Support avi, flv, wmv, mp4, rmvb, mpeg, 3gp and other video format playback

### Appendix 3: Standard configuration list

After purchasing, please check the device and accessories.

Number	Name	Quantity	Unit	Remark
1	I6	1	set	
2	User guide	1	copy	
3	USB cable	1	piece	
4	Power adapter	1	piece	
5	Warranty	1	copy	
6	Quality Certificate	1	copy	
7	Hand shell	1	piece	
8	Pen	1	piece	

**Note:** Accessories are subject to change without prior notice.

Shenzhen Kordy Educational Technology Co., Ltd.  
Address: 3-4 Floor, No.1 Bldg, Zhongyuntai Industrial Area, Tangtou No.1 Rd., Shiyuan St., Bao'an District, Shenzhen, China

Tel: 0755-61885678 Fax: 0755-26620243 <http://www.hwapu.com.cn>

Hotline: 400 678 0315; non-400 area: 0755-26703955

We are committed to improve product quality, and constantly update version. The related products in this guide are subject to actual ones.

English • Version 1