

VIEWING MODE DISPLAY

Feature Functions

Press button to turn off the screen for power saving, press any key to turn on the screen, audio detection is working all the time.

Lullaby will auto stop in 40 minutes.

The monitor will display "No Signal" if transmission distance is out of range, it will beep at the same time.

Press on the monitor or behind camera to power on the night light.

Setup steps

Press to open/close/return main menu.

Press to choose the function.

Press "OK" button to enter the submenu/confirm the function.

Intercom

Press on the monitor to talk to the camera.

Loose the button to hear the sound from camera.(default state)



PAIR
Press then press "OK" button to enter this option, press "OK" button again to confirm, the led indicator will be flashing, meanwhile press the pair button behind the camera for 3s until you see the video.

Note : products have already been paired before delivery.

-4-

SPECIFICATION

System General

Operating Frequency Range	2400 MHz-2483.5 MHz
Transmitting Power	17dBm Max
Monitor Sensitivity	-8dBm
Type of Spread Spectrum TX	FHSS
Type of Modulation	GFSK
Data Rate	3Mbps
Transmission range	Outdoor: 100 m (Eye of Sight) 0°C~+40°C
Operating Temperature Range	85% RH
Operating Humidity Range	Indoor use only

Wireless Camera

Image Sensor Type	1/3" Color CMOS Image Sensor
Effective Pixel	H: 640, V: 480
Lens	EFL=3.6mm, F=2.8
Viewing Angle (Diagonal)	70 degree
IR LED Type/ Night Vision	7pcs IR LED 5m
Power Requirement	DC 5V
Other Special Feature	Built in Microphone/ Speaker

Wireless Monitor

Display Type/Size	Color TFT 2.4"
Resolution (Pixel)	960X240(RGB)
Viewing Angle	H:80 degree, V:100 degree
Power Requirement	Adapter DC 5V Battery:3.7V Li-polymer

TROUBLESHOOTING

Problem	Solution
No picture from a Camera	1. Check all connections to the camera. Make sure the adapter is plugged in 2. Make sure that the cameras and monitor are both ON. 3. Make sure that the camera is in range of the monitor. 4. Make sure the camera and monitor are paired.
The picture is or has become choppy	The picture may become choppy when experiencing a lower frame rate (i. e. 10 frames per second vs. a higher 20 frames per second). 1. Try moving the camera closer to the monitor. 2. Remove obstructions between the monitor and camera.
No sounds (even with both units turned on)	1. Make sure that the power adapter is connected to the camera. 2. The battery on the monitor may be dead, be sure to charge it using the adapter included. 3. The monitor may be out of range of the camera.
Emitting an high pitched noise/ feedback.	This sound is normal feedback which occurs if the monitor and camera are too close together. Move them further apart.

-6-

INSTALLATION

How to Install

CAUTION: If you use the system to watch a young child, do not place the camera in the child's reach.

Wireless Monitor

1. Place the monitor in a place that will have clear reception with your camera(s).
2. Adjust the stand

Wireless Camera

Before you install the camera, carefully plan where and how it will be positioned, and where you will route the cable that connects the camera to the power adapter.

Before starting permanent installation, verify its performance by observing the image on the monitor when camera is positioned in the same location/position where it will be permanently installed and the monitor is placed in the location where it will be used most of the time.

Installation Warnings

Aim the camera(s) to best optimize the viewing area: Select a location for the camera that provides a clear view of the area you want to monitor, which is free from dust, and is not in line-of-sight to a strong light source or direct sunlight.

Avoid installing the camera where there are thick walls or obstructions between the camera and the monitor.

STRANGULATION HAZARD—Keep cord out of child's reach. NEVER place camera or cords within 3 feet of crib or playpen.

Only use the AC Adapters provided

1. carefully unpack the camera.

If you are installing cameras that did not come with the system, please see the pairing camera section of this manual for details on installation.

2. Mount the camera to the wall or suitable place.

3. Adjust the viewing angle of the camera

until you see the video.

Note : products have already been paired before delivery.

-5-



Wireless Baby Monitor
2.4" TFT LCD Monitor



IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/ accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lighting storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture. does not operate normally or has been dropped.

WARNING

- STRANGULATION HAZARD-Keep cord out of child's reach. NEVER place camera or cords within 3 feet of crib or playpen.Never use extension cords with AC Adapters. Only use the AC Adapters provided.
- Some adult assembly or installation required.
- This product contains small parts that may cause choking. Keep small parts away from children
- This product is NOT intended to replace proper supervision of children. you must check your child's activity, as this product will not alert parents to silent activities of a child.
- Before using this product, read and follow all instructions contained in this booklet, and read and follow all instructions and warnings on the product.
- NEVER use the transmitter or monitor near water, including near a bathtub, sink, laundry tub, wet basement, etc. This product is intended for indoor use only.
- This product is not intended for use as a medical monitor and, its use should not replace adult supervision
- The transmitter detects normal sound levels within a range of 2 to 3 meters (6 to 10 feet) from a child. If the child moves outside of this range if may not be able to detect sounds from him or her
- It is essential that you check the operating range and condition of the transmitter monitor on initial installation, and on a regular basis after that
- Check reception regularly Test monitor before use and after changing camera location.

-1-

OVERVIEW

Wireless Camera

Front Controls



Back Controls



WHAT'S INCLUDED

Package Contents



-2-

-7-