

## Features & Operation

\*Press to shut the screen off, press any key to turn it on. the power saving mode is to extend standby time and avoid sleep interference.

\*Hold the to start 2-way talk.

\*Hold button to turn on/off the night light.

\*When display is in state of dual view, press button to switch between cameras.

\*Press button to play lullabies, hold the button to show the lullaby menu, press and button to choose the music.

\* button is used for setup details parameters.

\* button is used for switching full screen,dual view,or auto switch from camera 1 to 4.

\*Press button to enter main menu or return to monitoring state, and button to choose, button to enter submenu or confirm.

\* Button adopts cycle mode from mute to max volume, the same for brightness button.

\*DVR: insert 32GB micro SD card(or less than 32GB), the bottom left of screen will display "SD INITIALIZE" for 1 second,

press to start recording, a red dot will be shown on the bottom right of the screen. Press to stop recording.

\*Please note:DVR will not work if micro SD card is more than 32GB or card is not formatted correctly or camera is in SCAN state.

\*Support up to 4 cameras at the same time. disconnect certain camera by pressing shield certain camera by pressing .

\*Check and play video directly under REC folder, or insert the micro SD card into phone or computer.

\*REC setup:

Video file storage mode: 2 mins, 5mins, 10 mins.

Overwrite mode on: overwrite oldest files by newest files.

Overwrite mode off: stop recording until the micro SD card is full.

\*Feeding alarm is shown on top notification bar, need to setup system date and time first.

\*Temperature alarm: define temperature range, lower or higher temperature will alarm.

\*Hold button to turn on/off the night light. red and blue lights will flash slowly and simultaneously. 3 modes of night light : press button each time on the camera to get red/blue/red & blue color.

-4-

-6-

## TROUBLESHOOTING

Problem	Solution
No picture from a Camera	1. Check all connections to the camera. Make sure the adapter is plugged in 2. Make sure that the cameras and monitor are both ON. 3. Make sure that the camera is in range of the monitor. 4. Make sure the camera and monitor are paired.
The picture is or has become choppy	The picture may become choppy when experiencing a lower frame rate (i. e. 10 frames per second vs. a higher 20 frames per second). 1. Try moving the camera closer to the monitor. 2. Remove obstructions between the monitor and camera.
No sounds (even with both units turned on)	1. Make sure that the power adapter is connected to the camera. 2. The battery on the monitor may be dead, be sure to charge it using the adapter included. 3. The monitor may be out of range of the camera
Emitting an high pitched noise/ feedback.	This sound is normal feedback which occurs if the monitor and camera are too close together. Move them further apart.

## INSTALLATION

### How to Install

CAUTION: If you use the system to watch a young child, do not place the camera in the child's reach.

#### Wireless Monitor

1. Place the monitor in a place that will have clear reception with your camera(s).
2. Adjust the stand

#### Wireless Camera

Before you install the camera, carefully plan where and how it will be positioned, and where you will route the cable that connects the camera to the power adapter. Before starting permanent installation, verify its performance by observing the image on the monitor when camera is positioned in the same location/position where it will be permanently installed and the monitor is placed in the location where it will be used most of the time.


#### Installation Warnings

Aim the camera(s) to best optimize the viewing area: Select a location for the camera that provides a clear view of the area you want to monitor, which is free from dust, and is not in line-of-sight to a strong light source or direct sunlight. Avoid installing the camera where there are thick walls or obstructions between the camera and the monitor. STRANGULATION HAZARD—Keep cord out of child's reach. NEVER place camera or cords within 3 feet of crib or playpen. Only use the AC Adapters provided

1. carefully unpack the camera.  
If you are installing cameras that did not come with the system, please see the pairing camera section of this manual for details on installation.
2. Mount the camera to the wall or suitable place.
3. Adjust the viewing angle of the camera

#### PAIR

- \*.Press button to set the camera
- \*.Press to pair, and hold the pair button on the camera to finish pairing.

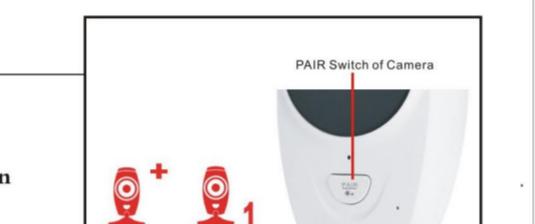

-5-

-7-



## Wireless Baby Monitor 870



## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lighting storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.

### WARNING

- STRANGULATION HAZARD—Keep cord out of child's reach. NEVER place camera or cords within 3 feet of crib or playpen. Never use extension cords with AC Adapters. Only use the AC Adapters provided.
- Some adult assembly or installation required.
- This product contains small parts that may cause choking. Keep small parts away from children.
- This product is NOT intended to replace proper supervision of children. You must check your child's activity, as this product will not alert parents to silent activities of a child.
- Before using this product, read and follow all instructions contained in this booklet, and read and follow all instructions and warnings on the product.
- NEVER use the transmitter or monitor near water, including near a bathtub, sink, laundry tub, wet basement, etc. This product is intended for indoor use only.
- This product is not intended for use as a medical monitor and, its use should not replace adult supervision.
- The transmitter detects normal sound levels within a range of 2 to 3 meters (6 to 10 feet) from a child. If the child moves outside of this range if not may not be able to detect sounds from him or her. It is essential that you check the operating range and condition of the transmitter monitor on initial installation, and on a regular basis after that.
- Check reception regularly. Test monitor before use and after changing camera location.

-1-

## OVERVIEW

### Wireless Camera

#### Front Controls



#### Back Controls



## WHAT'S INCLUDED

### Package Contents



Wireless camera



Camera Adapter

-2-

-3-