

User Guide and Important Information

BONGO Bluetooth Speaker

Model name:BONGO-001


FCC ID:2ABADBONGO

WHAT'S INSIDE

- * BONGO Bluetooth Speaker
- * Protective Hemp Satchel

- *USB to micro-USB Charging Cable
- *3.5mm to 3.5mm Auxiliary Line

BUTTON CONTROLS

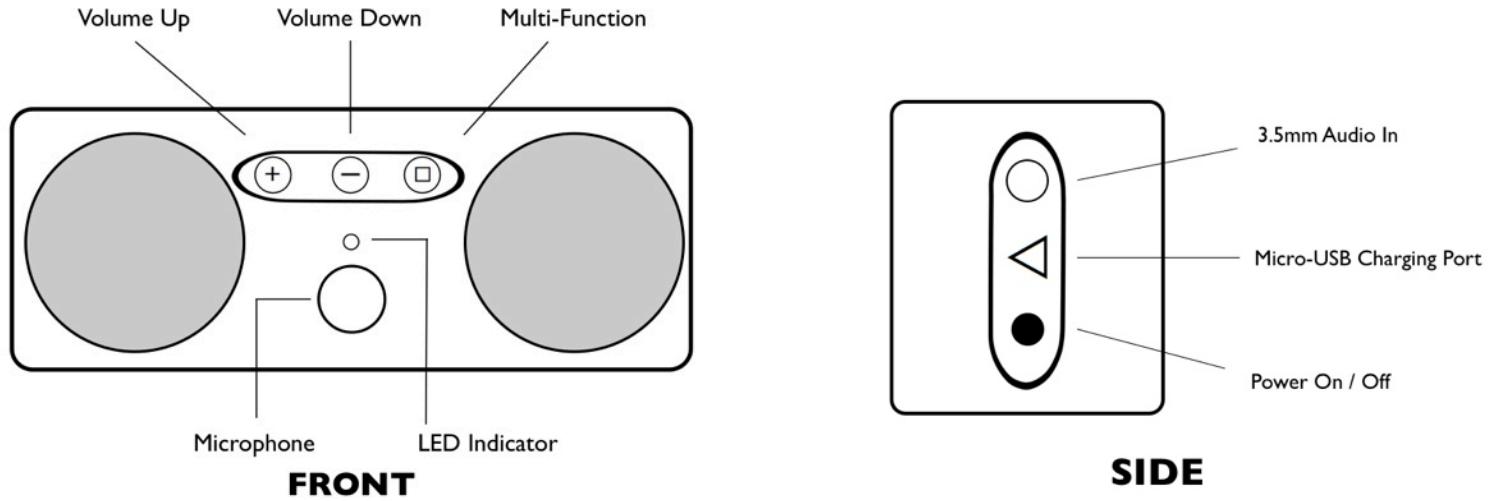

GETTING STARTED

After charging your BONGO, slide the power switch into the “ON” position. Then, there are two ways to connect:

* **Wirelessly with Bluetooth.** Connecting with Bluetooth is simple:

1. Go to your device Settings and enable Bluetooth.
2. Next, search for available bluetooth devices.
3. Then, press and hold the Multi-Function button on your BONGO for 6 seconds
4. Select “BONGO” and enjoy!

* **Using your 3.5 mm Cable:**

Insert 3.5mm plug into the BONGO, and the other end into the device you wish to use.

Tip: BONGO will automatically search for and pair with a previously paired device.

Pairing will automatically occur if the BONGO is powered on and the preset device is in range with bluetooth enabled.

LED INDICATORS

Blue:

*BONGO is on and ready for pairing.

*Once BONGO is paired, the blue light will flash once every 5 seconds

Red:

*Red flashing light means the battery is low

*Red solid light means the battery is charging

Blue & Red:

*Alternating Blue and Red flashing indicates the device is in pairing mode, and is searching for devices to pair with.

USER INTERFACE AND FUNCTION

Power On	Slide the power toggle button (located on the side) into the “ON” position
Activate Pairing Mode	Hold down the “□” Multi-Function button for 6 seconds. Speaker will chime, and LED will flash red and blue
Answer Calls	During incoming call, quickly press the “□” Multi-Function button.
End Calls	During active call, quickly press the “□” Multi-Function button.
Refuse Calls	During incoming call, hold the “□” Multi-Function button for 2 seconds.
Voice Dial / SIRI	During standby, hold the “□” Multi-Function button for 2 seconds.
Transfer Call between BONGO and Phone	During active call, hold the “□” Multi-Function button to transfer call from the BONGO to handset mode on your mobile device.
Volume Up/Down	Quickly press the “+” Volume Up button to increase volume; Quickly press the “-” Volume Down button to decrease volume.
Play/Pause Music	Quickly press the “□” Multi-Function button.
Next/Last Track	To skip to the next track, hold the “+” Volume Up button for 3 seconds. To skip to the previous track, hold the “-” Volume Down button for 3 seconds.

CHARGING

When BONGO has a low battery, the red LED will flash and an alert will sound every 30 seconds. This will last for 5-10 minutes before BONGO shuts off on its own.

Charge BONGO with any micro-USB cable. While BONGO is charging the red LED will be solid red. The charge is complete when the red light turns off. A full charge may take 2.5-3.5 hours.

Tip: BONGO may reset if connected to the charging cable while in use. If this occurs, power BONGO “OFF/ON” and reconnect. You can now use BONGO and charge simultaneously.

Tip: When the battery is full, BONGO will automatically stop charging to prevent overcharging the battery. Even so, disconnecting the charging cable once the battery is full may help preserve battery life.

FCC NOTICE: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference; and
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION:

*Any changes or modification not expressly approved by the party responsible for compliance could void the user’s authority to operate this equipment.

*This devices and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC ID: 2ABADBONGO

The FCC numbers can also be found on the BONGO.