



Bluetooth®

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER, THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.

SAFETY AND HANDLING INFORMATION

For maximum product life, do not drop, throw, or crush the speaker. Do not expose it to humidity, dust, or operating temperatures outside 32°F to 113°F(0°C to 45°C). Avoid charging it in temperatures above 113°F(45°C).

SAVE THESE INSTRUCTIONS!

DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Do not use while bathing or in a shower.
2. Do not place or store unit where it can fall or be pulled into a tub or sink.
3. Do not place in, drop or submerge in water or other liquid.
4. Do not reach for a unit that has fallen into water. Unplug it immediately.
5. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

WARNING

1. Close supervision is necessary when this appliance/ product is used by or near children or mentally disabled individuals.
2. Use this unit only for its intended use as described in this manual.
3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Never drop or insert an object into any opening.
5. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
6. Do not allow cord to touch hot surfaces. Wrap cord loosely around the unit when storing.
7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
8. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
9. Do not overload the electrical outlet. Use only the power source as indicated.
10. Do not carry this unit by its cord or use the cord as a handle.
11. Never operate this unit if it has a damaged cord or plug. If it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
12. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to people when the unit is used.
13. Do not operate in the presence of explosive and/or flammable fumes.
14. Never remove the plug from the outlet by pulling the power cord.
15. Do not use this product while driving.
16. Check the laws and regulations on the use of mobile phones and hands-free equipment in the areas where you drive. Always give full attention to driving and pull off the road and park before making or answering a call.

LITHIUM-ION BATTERY WARNINGS

This device contains a non-removable Lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


This Device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Modifications not authorized by the manufacturer may void the user's authority to operate this device.

LOCATION OF PARTS AND CONTROLS

1. Main Power Off/ On Switch
2. USB Port
3. AUXIn Port
4. Touch Fast Backward/Volume Up Button
5. Touch Fast Forward/Volume down Button
6. Pair Button
7. play/pause Button
8. Speaker Grille
9. 2 LEDs (on front side)

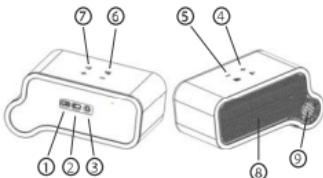

You've Get a Music
EZimas Live Sound Wireless Speaker

SET UP

CHARGING THE BATTERY

Note: Before first use, the battery must be charged for 3-4 hours.

1. Slide the MAIN POWER switch to the ON position.
2. Insert the USB Cable's mini USB connection into the speaker's USB port.
3. Plug the USB Cable into your computer's USB port or USB Adaptor.
4. The LEDs turn solid red when the battery is charged; the charging time is around 3-4 hours. The LEDs turn off when the battery is fully charged.

PAIRING BLUETOOTH DEVICES

Pair your Bluetooth device to the speaker when you turn the speaker on for the first time.

The speaker pairs with devices that use the Bluetooth Hands Free Profile (HFP) and/or the Advanced Audio Distribution Profile (A2DP). HFP enables hands-free communication and the A2DP dictates how audio is streamed from one device to another over a Bluetooth connection.

When you pair devices to the speaker, the devices operate according to their protocols. For example, when you pair a smartphone to the speaker, it handles calls and plays music since it has both the H2P and A2DP protocols. MP3 players with Bluetooth and A2DP only play music and cell phones (not smartphones) only handle calls.

PAIRING MODE

1. Slide the MAIN POWER switch to the ON position.
2. Press and hold  until the 2 LEDs flash red and blue rapidly. Now you are in pairing mode.

PAIRING

1. Prepare your Bluetooth V2.1 device (mobile phone or music player) to pair.
2. Select the Searching mode on your Bluetooth device (refer to your Bluetooth device's owner's manual for details if necessary).
3. Your Bluetooth device should find "ezimas live sound"; select it for pair.
4. Verify that you are connected to the speaker. The Bluetooth LED on the speaker will change to a solid blue when pairing is complete.

SPEAKER OPERATION

1. When you want to turn on the speaker, remember to slide the MAIN POWER switch to the ON position, there will be a tone sound.
2. Press and hold  for at least 3 seconds and there will be a "pairing sound" tone sounds.
3. The LEDs flash blue slowly while looking for Bluetooth devices. It illuminates solid blue only, when Bluetooth devices are discovered; otherwise, it keeps flashing.
4. To turn the speaker off, slide the MAIN POWER to OFF position.

LED STATE CHART

The 2 LEDs under the speaker provide visual cues to different processes. Below is a chart to check the status of the speaker.

LED COLOR	STATUS	MEANING
BLUE	SOLID ON	POWER ON
BLUE / RED	FLASHING	PAIRING MODE
BLUE	SOLID ON / FLASHING	NO PAIRING / BLUETOOTH CONNECTED
RED	SOLID ON / OFF	BATTERY IS CHARGING / BATTERY IS FULL
BLUE / RED	OFF	POWER OFF

SPECIAL FEATURES

PLAY MUSIC THROUGH A WIRED CONNECTION

You can still play music through the speaker even if your music device does not have Bluetooth capabilities and is not paired to the speaker. You can physically connect your music device to the speaker with a 3.5mm mini-jack cable.

1. Plug one end of the cable into your music device, just like you would a pair of headphones.
2. Plug the other end of the cable into the speaker's 3.5mm port labeled AUXIN.
3. Use your music device to start and control music playback and volume through the speaker.

Note: The following restrictions apply when you are playing music through a wired connection:
 - If both a Bluetooth device and wired device are connected to the speaker, the Bluetooth device will take priority over the wired device.
 - The speaker does not control the wired device; it only plays music through a wired connection.

COMPATIBILITY

Bluetooth 2.1 or above device with A2DP/AVRCP/HFP/HSP.

BASIC CELL PHONE OPERATION

When you have an incoming call, the speaker sounds an incoming call tone. Both the speaker and your cellphone may ring, depending on your cellphone settings. Below is a chart of how to handle calls.

TO...	DO THIS...
Answer an incoming call	Press the PLAY icon  and talk via speaker
Reject an incoming call	Press and hold PLAY icon  for seconds
End a call	Press and hold PLAY icon  for seconds
Switch between the speaker and your cell phone	Press and hold PLAY icon  during an active call
If, while you are listening to music, your phone rings and you answer the call, the music will fade and only your call will be audible. When you hang up the call, your music selection will then increase in volume and continue from where it had stopped.	

BASIC MUSIC OPERATION

When you pair a Bluetooth music player to the speaker, you can control operation through the speaker. Below is a chart on how to operate the speaker for audio.

TO....	DO THIS....
Play/Pause music	Press PLAY 
Forward.	Note: When you stop or pause the music, playback, the music resumes at the same Volume level after you press PLAY 
Backward.	Press +
Control the volume	Press -
	Press + to increase or - to decrease the volume

SPECIFICATIONS

- Total 6W output (3W/Channel)
- Full range (35mm) driver/Channel + Passive Radiator
- Li-Ion Battery: 1150mAh
- Playtime : Approximately 4 hours
- Recharging Time : 3-4 hours
- Range: Class 2, up to 33 ft (10m)

TROUBLESHOOTING ISSUE SOLUTION

Disconnection due to OUT of Range.

Move back into connection range and turn the Speaker off and back on to reconnect to your Bluetooth device.
Note: The speaker automatically syncs to the last device connected.
If you need to reconnect to the first device that was connected, reconnect it manually.
Sound is not clear or
There is no sound at all

Turn the speaker off and then back on.
Turn off your music device's equalizer. Check the speaker or Bluetooth device volume Level.
Music won't play on
The speaker

Make sure your Bluetooth device has A2DP. Check if both devices are connected. Turn the speaker off and then back on to auto-Connect with your Bluetooth device.
Note: The speaker automatically syncs to the last device connected.
If you need to reconnect to the first device that was connected, reconnect it manually.

ONE (1) YEAR LIMITED WARRANTY

EZimas warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, EZimas will either

- a) damage caused by failure to follow instructions relating to product's use or the installation of components;
- b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes;
- c) damage caused by service performed by anyone who is not a representative of EZimas;
- d) accessories used in conjunction with a covered product;
- e) a product or part that has been modified to alter functionality or capacity;
- f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs;
- g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or
- h) a product that is used commercially or for a commercial purpose.

Obtaining Service: To obtain warranty service, call EZimas Warranty Service at 852-2408 2584. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

"EZimas" SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, EZimas DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF EZimas CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTEND PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.