

# **User Manual**

**MOBILE PHONE**

**A35**

## **Warnings**

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

### **TURN ON SAFELY**

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

### **ROAD SAFETY**

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

### **INTERFERENCE**

All wireless phones may be sensitive to interference, which may affect performance.

### **TURN OFF IN HOSPITALS**

Follow all restrictions. Turn off the phone near medical equipment.

### **TURN OFF ON AIRCRAFTS**

Follow all restrictions. Wireless devices can cause interference on aircrafts.

## **TURN OFF WHEN REFUELING**

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

## **USE SENSIBLY**

Only qualified personnel may install or repair this product.

## **ENHANCEMENTS AND BATTERIES**

Use only appropriate enhancements and batteries. Do not connect incompatible products.

## **WATER-RESISTANCE**

Your phone is not water-resistant. Keep it dry.

## **BACKUP COPIES**

Remember to make back-up copies or keep a written record of all important information stored in your phone.

## **CONNECTING TO OTHER DEVICES**

When connecting to any external device, read its user guide for detailed safety instructions. Do not connect with incompatible products.

# Content

Keypad Descriptions.....	4
Start to Use.....	4
Charge the Battery.....	6
Use Touch Screen.....	7
Status Bar .....	7
Status icons.....	8
Make a Call .....	8
Answer a Call .....	9
Emergency Service .....	10
Input Method .....	10
Application screen .....	10
Menu description.....	10


## Keypad Descriptions

Key	Description
<b>Power Key</b>	Long press the key to turn on the phone. In the power on status, press the key to lock keypad and screen; long press the key to show phone options.
<b>Option Key</b>	Press the key to enter option menu.
<b>Home Key</b>	Press the key to return to standby mode. Long press the key to show recent list.
<b>Back Key</b>	In the menu mode, press the key to go back to upper menu.
<b>Volume Keys</b>	To adjust incoming call ringtone volume. During a call, playing music, video, or listening to radio, press the keys to adjust volume.

## Start to Use

### Install Memory Card and SIM Card


When you apply for a network, you will get a plug-in SIM card. SIM (Subscriber Identity Module) card that contains phone number, service projects and can be used to store phone numbers and personal information.

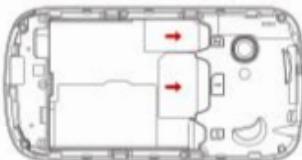

Please insert the SIM card according to the label on the phone. Make sure that the clipped corner of the SIM card and the metallic contacts are facing the correct direction. Slide the SIM card into the slot until it doesn't move up any further.

The direction in which the memory card has to be inserted into the designated slot is shown by a label on the phone.

**Tip:** For additional media storage insert a memory card.

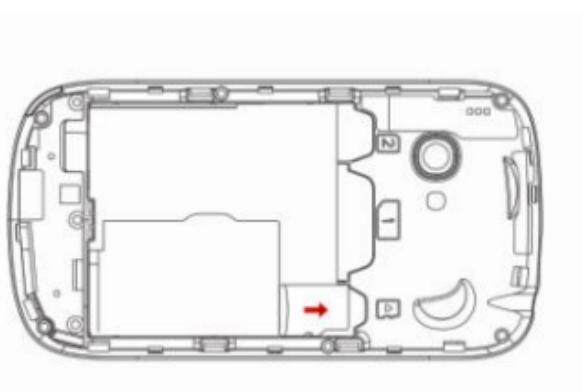

**Attention:** Do not bend or scratch SIM card, do not let it contact with static electricity, dust or water.

Keep all SIM cards where children cannot reach or touch.

**Note:** Keep the SIM card chip contacts face downward. Make the SIM card fits card slot.

## **Remove Memory Card and SIM Card**

**Note:** If the phone is turned on, long press Power Key about 3 seconds until it tips phone options and selects **Power off** and

then press **OK** to turn off the phone. Then, remove the battery, SIM card and memory card.

Do not plug or remove memory card in boot state, otherwise it will cause damage to the file system.

## Charge the Battery

1. Before charging, check the battery slot to ensure the battery has been installed correctly.
2. Plug one end of the charger into phone.
3. Connect another end of the charger to the socket.
4. Start charging. It can be charged whether power on or power off.
  - In power on state, when the battery icon on screen start rolling means it is been charged. When the icon is full and stop rolling means charge is completed.
  - In power off state, the battery icon on screen start rolling means it is been charged. When the icon is full and stop rolling means charge is completed.
5. Unplug the charger from the socket.
6. Disconnect the charger and phone.



## Use Touch Screen

- Press: Use finger to press the desired option to confirm selection or start an application.
- Long press: Long press the screen in current operation interface, icon, or input area; you can open the option menu in current interface.
- Slide: Slide the finger on screen horizontally or vertically. For example, slide the screen in standby mode or main menu horizontally to change menu page.
- Drag: Use finger to long press desired item, drag it to anywhere on screen. For example, you can drag the icon in main menu to standby screen.

## Status Bar

The status bar shows your phone's status and notifications.  
(Notifications are described on the next page.)

Notification icons



Status icons



## Status icons

The following status icons may appear on your screen:

Icon	Statement	Icon	Statement
	SIM Network signal level		Headset is inserted
	Indicates battery capacity		Bluetooth is activated
	Unread messages		Wi-Fi is connected
	Missed calls		Airplane mode is activated
	Alarm is activated		USB is connected

## Make a Call

1. In standby mode or in main menu, press the dial icon  to enter dial panel, press numbers on screen to enter phone number.
2. Press dial icon  at bottom and select SIM card to dial the number. You can also press video dial icon to make a video call.
3. Press end icon to cancel the call.



- You need to unlock the phone if the keypad and screen is locked.
- You can make calls through call log, contacts, and messages.
- During a call, press Volume Keys to adjust the volume.
- Your phone supports intelligent dial. When input numbers, the phone will search the corresponding contact in phonebook or call log.

## Answer a Call

When there is an incoming call, you can:

- Drag the icon  toward right to answer the call.
- Drag the icon  toward left to decline the call.

- Drag the icon  upward to reject the call with SMS.

## Emergency Service

You can call emergency service number directly without SIM card. Different networks use different emergency numbers, please query your network operator.

## Input Method

Your phone has the built-in input method. In edit mode, long press  to show **Input options** and set input languages and Android keyboard settings.

### Input English

Press the on-screen keypad to enter corresponding letters.

### Input Number

You can input numbers directly by press the number icons. Long press the letter icons with number, or after long press, slide finger to the numbers to input.

### Input Symbol

Press the desired symbol to input. Long press “...” to show symbol list, slide finger to the desired symbol to input.

## Application screen

In standby mode, press the launcher to enter application screen.

## MENU DESCRIPTION

### Browser

You can use your phone to access Wireless Application Protocol (WAP) sites and use WAP-based services. To browse WAP pages, you must subscribe to the data service from your service provider and configure your phone's relevant settings.

Select the website list on screen or input URL in address bar to visit.

### Games

Your phone has several built-in games, you can select to play.

### Calculator

The calculator can execute simple calculations. Slide the screen toward left or right, you can change the calculator in **Basic panel** and **Advanced panel**.

### Calendar

In the calendar, you can check schedules for current month. It has alarm for the date with schedule. Select one date to check all schedules for that day, or you can edit or delete the schedules.

### SIM Toolkit

If your SIM card supports STK (SIM Tool Kit) function, the phone can display different first level menu according to different STK card. This function needs the network provider support. If user finds STK function can't operate normally, please contact the network provider. If the network provider does not support this function, we do not claim any responsibility whatsoever.

## Camera

By using the camera application, you can take photos or records for around people or events anytime. Press the **Camera** icon in main menu to enter. Press the shoot icon or record icon to take photos or records.

Press the icons on screen or Option Key to set parameters of the camera or recorder.

## Clock

In the clock interface, you can check time and date. Press the alarm icon, you can add new alarm clock or turn on/off existed alarm clocks.

In the clock interface, you can also press the icons to enter count down function, stopwatch, cities settings, night mode, and settings.

## Downloads

To check all downloads applications.

## Email

You can use **Email** to send and receive emails.

### Setup Email Account

According to the tips on screen to input email address and password, and press **Next**. You can press **Manual setup** to setup server information manually.

### Check Emails

In the **Inbox**, select the email you want to check to enter. Press the icons at bottom to delete, reply, add to favorite.

## Compose and Send Email

In the **Inbox**, press new mail icon to create new email. Input receiver email address, subject, and content, and then press send icon to send the email.

## Delete Accounts

In the **Inbox**, press Option Key to select **Settings**. Select the account you want to delete and then select **Remove account** in the option list. Press **OK** to confirm and delete the account.

## File Manager

In this menu, you can select to check Phone storage and SD card.

## FM Radio

Select **FM Radio** in the main menu and plug earphone to enter. Press Power icon to turn on/off the radio. Press setting icon and select **Search**, the phone will search available channels and save in the list. Press the icons on screen to operate the FM radio.

## Gallery

You can use Gallery to view or manage images and videos.

## Google

Availability of Google applications, services, and features may vary according to your country or carrier. Please follow local laws and regulations to use them.

When you turn on your mobile phone for the first time, touch a Google services such as **Gmail**, **Google**, **Local**, **Maps**, **Navigation**, **Play Store**, **Talk**, or **YouTube**, and you may be prompted to sign in to your Google account.

Ensure that your mobile phone has an active data connection (3G/GPRS) before you sign in to your Google account.

If you already have a Google account, enter your username and password.

## **Messaging**

Select **Messaging** in the main menu or standby mode to enter.

Select new message icon at left down corner to create new SMS or MMS and send.

1. Enter receiver's number or add number via "Type name or number".
2. Press "Type test message" to input message content.
3. If you want to send picture or video file, press + to add pictures, videos and audio. The message will shift to multimedia message automatically.
4. Press send icon and select SIM card to send the message.

## **Music**

Select **Music** in main menu. Press **Artists, Albums, Songs**, and

**Playlists** at the top of screen to change category. Select one audio file to play the music. Press the icons on screen to operate the audio player.

## **People**

In the **People**, press search icon to search contact, press add new icon to add new contact. Press Option Key to enter:

### **Delete Contact**

Select one or more contacts, then press OK to delete all selected contacts.

### **Contacts to Display**

Select All contacts, contacts on SIM card, Phone, or Customize the contacts to display.

### **Import/Export**

Copy the contacts from SIM cards, phone, phone storage or SD card, and then select location to copy.

### **Accounts**

Select whether to Auto-sync app data.

### **Memory Query**

To check the memory of phone and SIM cards.

### **Join Contacts**

You can use this function to join same contacts.

## **Phone**

Press the icons on screen to input numbers in sequence. After inputting numbers, press dial icon and select SIM1/2 to dial. Press video call icon, you can make video call with your phone. Press the icons at the top screen, you can enter call log or contact.

## **Search**

Input keyword in search bar, the phone will match applications or contacts first. If there is no result, press the arrow icon on right to link to network and search.

## **Settings**

### **Wireless & Networks**

In this menu, you can select and set **SIM management**, **WLAN**, **Data usage**, under **More... - Airplane mode**, **VPN**, **Tethering & portable hotspot**, **Mobile networks**, and **USB Internet**.

### **Device**

In this menu, you can set audio profiles and display, check storage and battery, and manage apps.

## Personal

- **Location Access**

Select whether to access to my location, whether to turn on GPS satellites, or whether to use WLAN & mobile network location.

- **Security**

You can select **SCREEN SECURITY**, **ENCRYPTION**, **SIM CARD LOCK**, **PASSWORDS**, **DEVICE ADMINISTRATION**, and **CREDENTIAL STORAGE** in this menu.

- **Language & Input**

Select and set Language, keyboard & input methods, speech, and mouse/trackpad.

- **Backup & Reset**

In this menu, select **Factory data reset** and then select **Reset phone** to clear all data in the phone memory. Select **DRM reset** to delete all DRM licenses.

## Accounts

- **Add Account**

To add new account of Corporate, Email, or Google.

## System

- **Date & Time**

Set time and date for the phone.

- **Scheduled Power On & Off**

Set time to power on/off the phone automatically.

- **Accessibility**

To set accessibility functions for the phone.

- **Developer Options**

Select whether to turn on this function and choose the options in the list.

- **About Phone**

To check status, legal information, etc.

## FCC Statement:

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

### SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. \* Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when

tested for use at the ear is 0.793W/Kg and when worn on the body, as described in this user guide, is 0.790W/Kg(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is 0.790W/Kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

**FCC ID: 2ABBS-A35** Additional information on Specific Absorption Rates (SAR)

can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. \* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

### Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not

comply with RF exposure requirements and should be avoided.  
Use only the supplied or an approved antenna.