

Amaryllo/ACR1501




User Manual

[www.amaryllo.eu | sales.ai@amaryllo.eu | support.ai@amaryllo.eu]
© 2015 Amaryllo International B.V. All Rights Reserved.


5007150500100

- Install the camera
- Operate the camera App
- Control the camera rotation (for remote models)
- LED indication
- Setting
- Installation instructions
- Troubleshooting
- Warranty


1

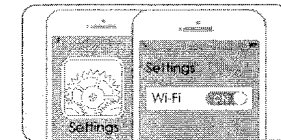

Switch on your phone's Wi-Fi

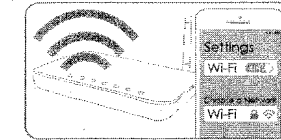

Connect your phone to a router

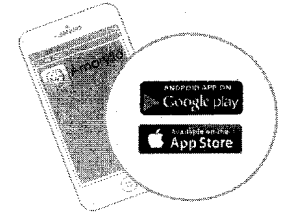


Download



Amaryllo App


2

- ☐ Install a new camera
- ☐ Obtain from another device
- ☐ Install a new camera (with pre-configured network)

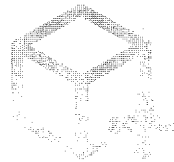


3

What Amaryllo product are you installing?

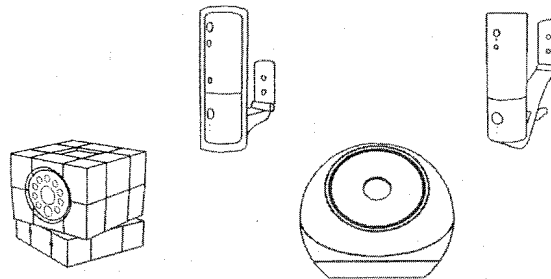

4


iCam / iBabi / iCare

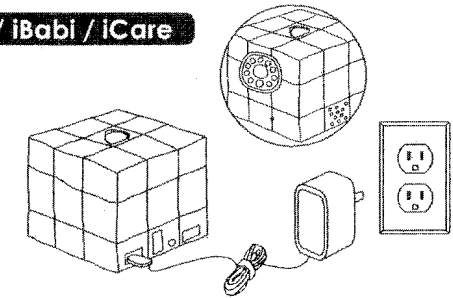

Connect the micro USB cable to a power outlet.
The blue LED light will be on when the camera is powered.
Wait for it to start flashing before beginning installation.

5


iCamPRO

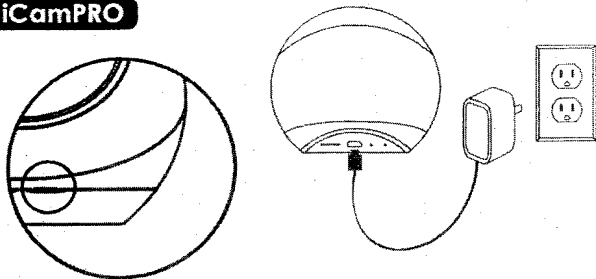

Connect the micro USB cable to a power outlet.
The blue LED light will be on when the camera is powered.
Wait for it to start flashing before beginning installation.


6

iSensor / Patio

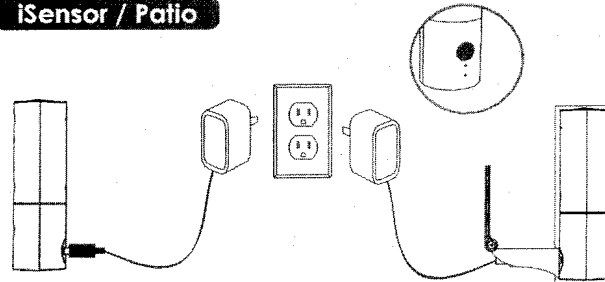

Connect the USB cable to a power outlet.
The blue LED light will be on when the camera is powered.
Wait for it to start flashing before beginning installation.

7

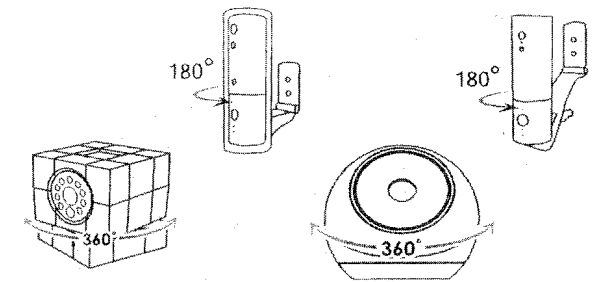


After power-on, it will take 25 seconds to start calibration cycle. (for remote models)

8

Enter the password of your Wi-Fi router

Password

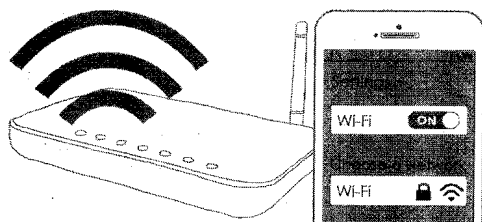


9

iCam / iBabi / iCare

Follow few steps below to complete scanning QR code.

1. Your device will automatically generate a QR code.
 2. Place the camera 4" ~11.8" (10~30 cm) in front of the smartphone's QR code or 7.8" ~11.8" (20~30 cm) in front of tablet's QR code.
- Please wait for a beep to confirm reception. After you hear a beep, you can put the phone down.

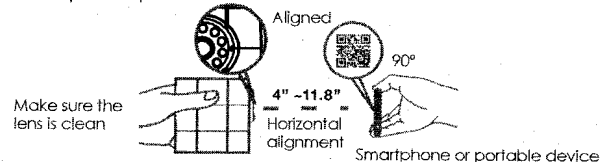


Make sure your device and the camera are parallel to each other.

10

iSensor / Patto

Follow few steps below to complete scanning QR code.

1. Your device will automatically generate a QR code.
 2. Place the camera 4" ~11.8" (10~30 cm) in front of the smartphone's QR code or 7.8" ~11.8" (20~30 cm) in front of tablet's QR code.
- Please wait for a beep to confirm reception. After you hear a beep, you can put the phone down.

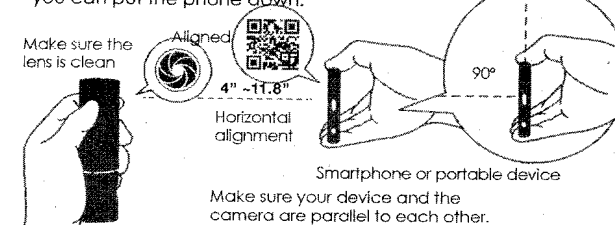


Make sure your device and the camera are parallel to each other.

11

iCamPRO

Follow few steps below to complete scanning QR code.

1. Your device will automatically generate a QR code.
 2. Place the camera 4" ~11.8" (10~30 cm) in front of the smartphone's QR code or 7.8" ~11.8" (20~30 cm) in front of tablet's QR code.
- Please wait for a beep to confirm reception. After you hear a beep, you can put the phone down.

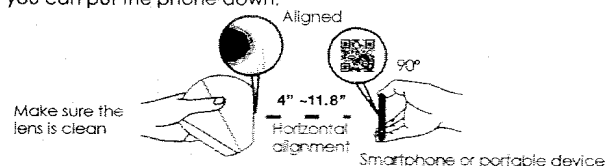

Make sure your device and the camera are parallel to each other.

12

iOS



Android



The timer will show the remaining time to finish the installation. If time runs out, you will need to start the installation over again.

13

- You will hear one beep when the camera install QR completes.
- You will hear two beeps when the camera setup completes.
- The green LED remains on when Wi-Fi is working properly.

14

If QR scan failed, it will ask:

Do you want to try again?
You can press "Retry" to try again.
It is recommended that you check your information and try again.

Check information


Retry

15


Congratulations!

- The camera setup is complete. You will hear two beeps when the camera setup completes.


iCam / iBabi / iCare

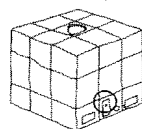


iCamPRO

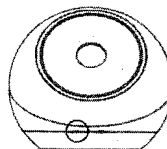

Patto

 


iSensor

 

- The green LED remains on when Wi-Fi is working property.


16

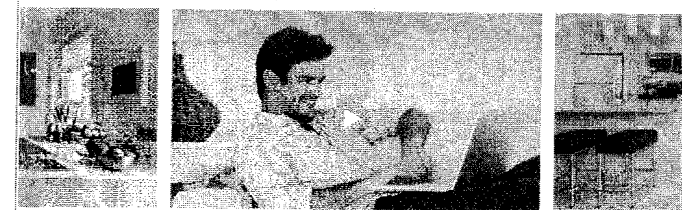

Press "▶" to view.

17

iCam / iBabi
iCare / iCamPRO

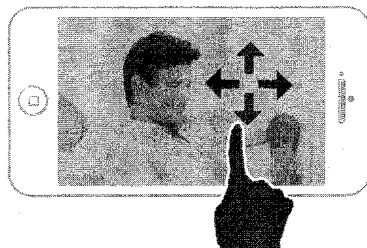


By sliding your screen

Remotely pan and tilt the camera anywhere by sliding your smartphone screen in the direction you want the camera to turn.

18

iSensor / Patio

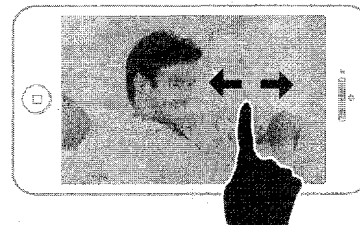

By sliding your screen left or right

Remotely pan the camera anywhere by sliding your smartphone screen in the direction you want the camera to turn.

19

LED indication

Blue LED:

- The LED is stable when you power on the camera.
- The LED flashes once per second when the QR scan is in progress.
- When LED is flashing twice per second, the camera is in use and someone is actively viewing it.
- When LED is flashing 3 times per second, the setup process was successful.

Green LED:

- When LED is flashing once per second, the camera is trying to connect to a Wi-Fi AP router.
- When LED is constant, the camera is connected to Wi-Fi and working properly.

20

Alert Detection

Wi-Fi

Viewers

Miscellaneous

Recording

Administrator

Google Drive Upload

About the cameras

Audio

My Public Channel

Please visit our website www.amaryllo.eu

to learn more about the settings.

21


If connection fails

Please check:

1. Is the camera powered on?
2. Is the camera's Wi-Fi connected? (Green LED should be lit)
3. Is a new Wi-Fi router required? (Press "📶")

22

Reset

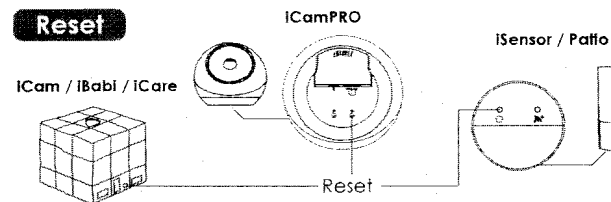


There is a small RESET hole. Press and hold for about 5 seconds until the blue LED flashes. All settings of previously stored in the camera will be erased, and it will be restored to the factory default.

After 25 seconds, the camera will start a calibration mode by rotating itself. (for remote models)

23

Install a new camera (with pre-configured network)

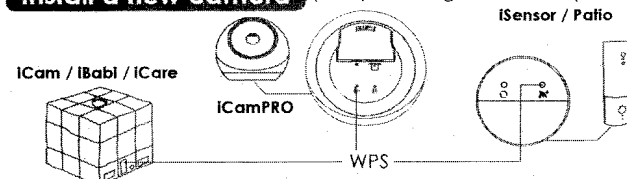

1. Connect your phone to your router.
2. Press and hold router's WPS button.
3. Press and hold WPS or 📶 button on the camera for 5 seconds or longer. When the green LED flashes, it indicates that the camera has entered WPS mode.
4. Please follow App instructions step-by-step.

Note: You need to press WPS or 📶 button of the camera and Wi-Fi AP router within 60 seconds.

24

One-year product warranty


1. Amaryllo warrants to the original purchaser of this product that product shall be free from defects in materials or workmanship under normal use during the warranty period applicable to the product.
2. Warranty does not cover damage caused by physical abuse, accident, natural disaster, or use which is different from Amaryllo's advice and instructions.
3. Customers may be asked to furnish proof of ownership and date of purchase by showing the sales receipt/purchase invoice/warranty card. This warranty extends only to the original purchaser, and is non-transferable to anyone who subsequently purchases, leases or otherwise obtains the product from the original purchaser.
4. The secure network video transmission and cloud storage services are provided by global renown enterprises for free and are not covered under our warranty.

25

iSensor

Installation Instructions

1. Choose a location that will give you the best view of the area you want to monitor. (Make sure an electric outlet is within 2 meters)
2. Mark hole location with pencil first, then drill holes. (Make sure drill holes are slightly smaller than anchors.)
3. Insert anchors into wall, then screw holder securely to wall.
4. Place USB power plug into holder opening from the rear.
5. Plug iSensor HD into USB adapter and adjust until proper angle is achieved.

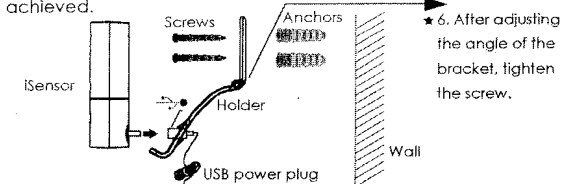


6. After adjusting the angle of the bracket, tighten the screw.

26

Patio


Installation Instructions

1. Choose a location that will give you the best view of the area you want to monitor. (Make sure an electric outlet is within 2 meters)
2. Mark hole location with pencil first, then drill holes. (Make sure drill holes are slightly smaller than anchors.)
3. Insert anchors into wall, then screw holder securely to wall.

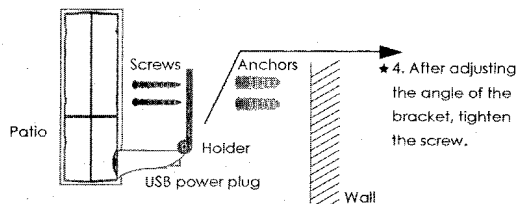

27

iSensor

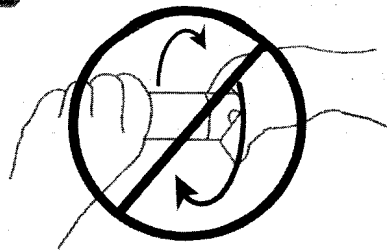

**Do Not Manually Twist!
Remove the label before use.**

28

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice :

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE:

To comply with the FCC RF exposure compliance requirements, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. No change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

FCC INFORMATION

The equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The user should not modify or change this equipment without written approval from Amaryllo International B.V. Modification could void authority to use this equipment.

