

User Manual

Model name: MISC-D

FCC ID: 2ABFAMISC-D

How to use the lavalier wireless microphone

1. Push the cover of the transmitter, insert a 9V battery according to the + - pole, then close the cover.
2. Put the Φ 3.5 mm lavalier plug into the jack of the transmitter (MIC position).
3. Push the transmitter to "ON" power LED lights indicating normal function of MIC.
4. It's better to adjust the main volume to 2/3 position, then adjust the transmitter volume to what you require. The better position for the microphone is nearer your mouth (the distance between your mouth and the microphone is around 2-3cm.) to avoid the sound screaming feedback.

NOTE:

1. A new battery should be replaced in case of noises, voice interruption and voice mutation indicating the low battery power while in operation.
2. Press the switch to "OFF" position after use to save the battery power and extend the life span of the batteries.
3. Remove the 9V battery avoid the leakage and acidification of the battery to damage the battery when not in use for a period of time.
4. Push the switch to ON of the transmitter, power LED lights indicating normal function of MIC. No flash or light of the LED indicates no power of the battery or the wrong connecting of the positive and negative poles. Adjustment should be needed or the transmitter can not be used.



FCC statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF warning statement:

The radiocommunication apparatus meets the exemption from the routine evaluation limits

The device can be used in portable exposure condition without restriction.