



DV714BH

QUICK START GUIDE

Car Multimedia & Navigation Player
Shenzhen Carbetter Technology Co., Ltd

This Quick Start Guide gives you the basics to start using your DV714BH. Please visit www.dualav.com/support/manuals.pdf to download a complete owner's manual or call customer service at 1-866-382-5476 (Monday-Friday, 9AM-5PM EST).

 


Customer Service Toll Free: 1-866-382-5476

Safety Notes:

The DVD video display of the in-dash unit will not operate while the vehicle is moving. This is a safety feature to prevent driver distraction. In-dash DVD video functions will only operate when vehicle is in Park and the parking brake is engaged. It is illegal in most states for the driver to view video while the vehicle is in motion.


Installation

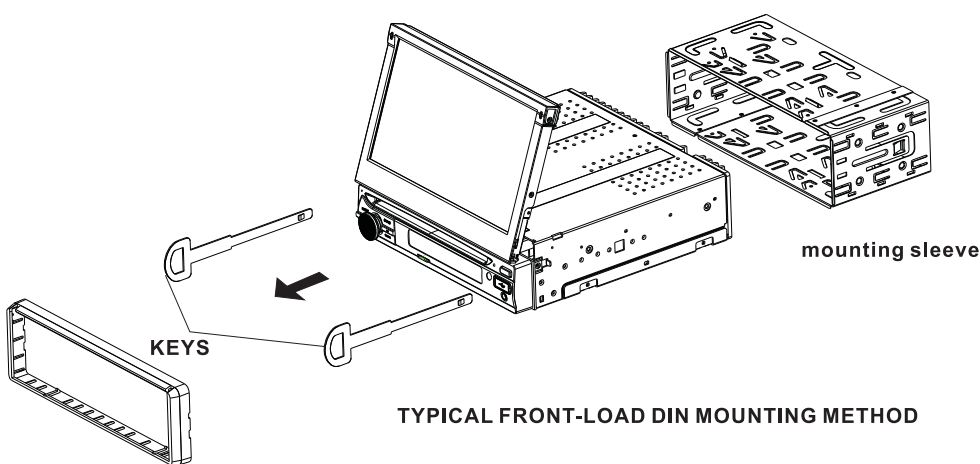

Copyright and Trademark Notes

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited. Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories. DVD Logo is a trademark of DVD Format/Logo Licensing Corporation registered in the U.S., Japan and other countries. SD Logo is a trademark of SD-3C, LLC. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. Dual Electronics Corporation is not affiliated with Apple, Inc. Other trademarks and trade names are those of their respective owners.

 Wiring Diagram – Inputs/Outputs

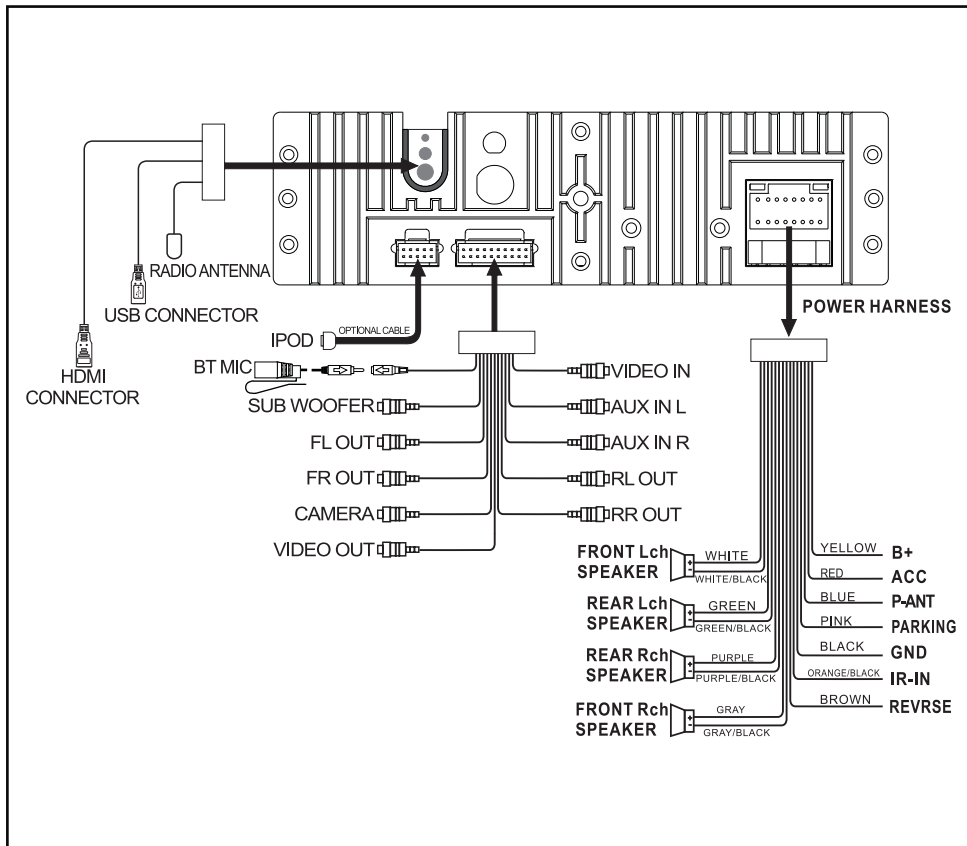


Control Locations



1. Reset - Press and hold to switch back to the original factory settings. This will erase all preset radio stations.
2. Eject - Press to eject disc.
3. USB
4. Auxiliary A/V Input
5. SD Card Slot
6. Track Up
7. Mute/End
8. Volume and EQ Setup
9. Mode
10. Track Down
11. Open/Close Button
12. Band/Talk

Remote Control

- | | |
|--------------|-----------------|
| 1. Power | 12. Setup |
| 2. Eject | 13. Search |
| 3. Mode | 14. Repeat |
| 4. Open | 15. Angle |
| 5. Up | 16. Audio |
| 6. Menu | 17. OSD |
| 7. Volume Up | 18. Zoom |
| 8. Mute | 19. ESC |
| 9. Sel | 20. Band |
| 10. Enter | 21. Volume Down |
| 11. Root | 22. Play/Pause |
| | 23. DN |

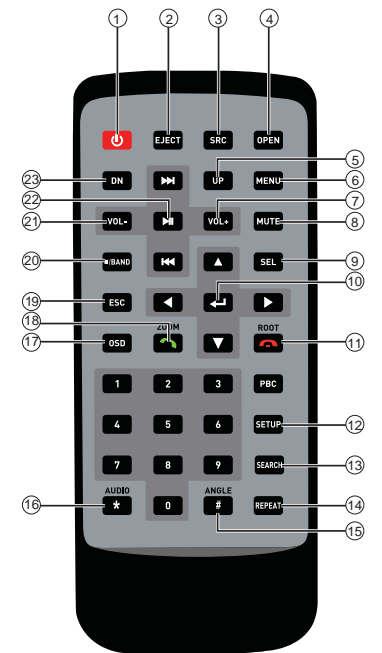 

Main Menu

In the Menu mode, press the desired icon to enter the corresponding mode: Tuner, Disc, USB, iPod, SD Card, AV Front, AV Rear, Bluetooth, Display Link, Camera, Setup.



Tuner Operation

Select the Tuner icon from the Main Menu screen or press MODE until Tuner is selected.


1. Current Mode Indicator
2. Information Display
3. Tune Up
4. Tune Down
5. Mute On/OFF
6. Setup
7. EQ
8. Preset Station Display
9. LOC
10. LOUD
11. AS/PS



DVD Operation

Insert a DVD in the disc slot for playback.

- | | |
|------------------|------------------|
| 1. Dimmer | 13. Play/Pause |
| 2. Setup | 14. Volume Down |
| 3. Info | 15. Volume Up |
| 4. EQ | 16. Mode display |
| 5. Direct Access | 17. Repeat Play |
| 6. Page Up/Down | 18. A-B |
| 7. Zoom | 19. Audio |
| 8. Fast Forward | 20. Sub-T |
| 9. Rewind | 21. Root |
| 10. Tune Up | 22. Title |
| 11. Tune Down | 23. Angle |
| 12. Stop | |

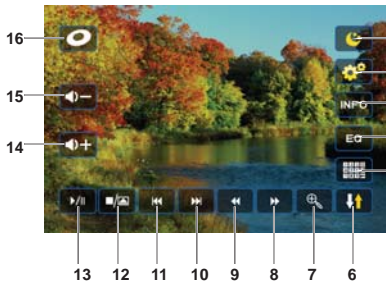 

CD/USB/SD Operations

 
Insert a CD in the disc slot, and the unit will read the disc. (Insert a USB/SD Card)

1. Page Down
2. Page Up
3. Direct Access
4. Previous Folder
5. Intro
6. Random Play
7. Repeat Play
8. Next Song(short press) / Fast Forward(long press)
9. Previous Song(short press) / Rewind(long press)
10. Stop
11. Play/Pause



EQ Operations

1. Fader Control
2. Trable
3. Bass
4. Loudness
5. Eq

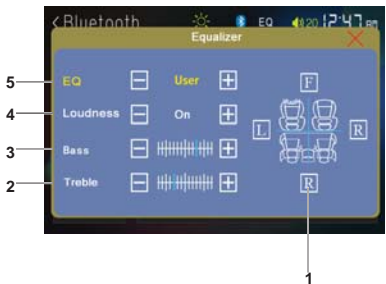

General Operations

Setup Menu

From the Main Menu screen, press Setup to enter the Setup Menu. The first 7 setup options will be displayed on the screen.



Bluetooth Operation

Bluetooth Microphone

Bluetooth features of the Multi Media function with the included external microphone, which is designed for mounting to the visor or A-pillar inside the vehicle.

Pairing and Connecting

Before you can use a Bluetooth device, it must be paired and connected. The Multi Media broadcasts the pairing signal constantly when no devices are currently connected. Complete the pairing sequence from your Bluetooth device. The device name is "Dual BT". The Bluetooth passcode "1234". Once pairing is complete, most Bluetooth will connect automatically if the device is in range when the Multi Media is powered-on.

Dialing a Number

Press to display keypad and dial a number.

Making and Ending a Call

Press to connect a call, and press to end a call.

Accessing Recent Call List

 
Press to access the recent call list and view/select numbers from recent Received, Dialed or Missed calls.

Transferring Audio

Press to transfer audio between the head unit and mobile phone.

Streaming Audio

Press to enter the music control menu. Press to play or pause the music. Press to skip to the previous track. Press to advance to the next track.

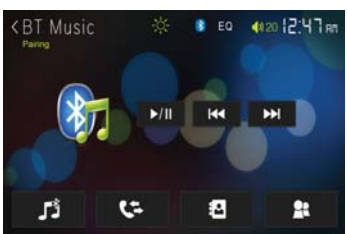

HDMI Operation

Please find the separate sheet for the HDMI operation.

F CC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.