

back

front

fold

Troubleshooting:

- **Bluetooth® cannot connect to device**
Confirm the speaker is under searching status and Bluetooth® on your device is turned on
- **No sound**
Check the volume control on the speaker and check the volume control on the connected device
- **No power**
Charge the speaker

Note:

- When the power on the speaker becomes low the start-up chime will sound every 20 seconds.
- When battery is depleted, it will enter a protection state. At this time, it can not be used under charging. Charge the speaker fully before next use.
- When not in use, turn the power switch to the "Off" position to conserve the battery.



ASI 79530 UPIC:PRIME
www.primeline.com

Lifetime Guarantee


We hope you enjoy this quality Prime Line® product. This item is guaranteed against any manufacturing defects. If it malfunctions, return it for repair or replacement free of charge. Please include \$4.00 for shipping and handling and send to:

Prime Service Center
1100 Boston Ave.
Bridgeport, CT 06610

PL-4404 Bluetooth® Cylinder Mini-Speaker

Contents:

Cylinder Mini Speaker
3-way Cable (USB, 3.5mm, Micro USB 5-pin)
Instructions

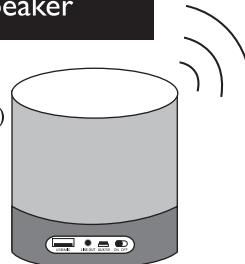

Important: Read these instructions before using the product

Specifications:

Rated Impedance: 4Ohm	Speaker: 1.6 inches
Rated Power: 3w	Line out: 3.5mm audio jack
Rated Voltage: DC 5V	SNR: ≥ 85dB
Frequency response: 90-20KHz	Distortion: ≤ 0.3%
Sensitivity: 85dB +/-2dB	
Power supply: DC 5V Built-in Lithium-ion battery	

Warning:

- Keep speaker away from water and moisture, do not get it wet.
- Keep speaker away from any heat source.
- Adjust volume to avoid damaging your hearing.

inside

fold

Charging:

1. The speaker contains a rechargeable Lithium-ion battery. Before first use, charge the battery for at least 4 hours.
2. Insert the Micro USB plug into the speaker and the standard USB port on your computer.



Connection to PC/Laptop:

Connect the 3.5mm line into the headphone jack of your computer and Micro USB plug into the speaker.

Using USB or TF Card:


1. Insert the USB or TF (with MP3 files) card (with MP3 files) into the proper port on the speaker.
2. Control volume and playback as described above.

Connection to Bluetooth® device:

1. Turn the power switch to the "On" position. After 3 seconds you will hear a start-up chime. The blue LED will indicate the speaker is connection to the last device used. The LED will flash quickly if the speaker is searching for a new device.
2. On your device, turn on Bluetooth® to search. When "BTS02" appears on your device, select and pair with the speaker. For first time use, you may need to enter the password "0000" to connect. Newer versions may not need password and will connect directly. When connected, the LED will flash slowly.
3. Play audio from your device. You can control the audio from the unit:
 - |◀/V- Previous track/Volume Down
 - ||▶ Pause/Resume play
 - ▶/V+ Next track/Volume Up
 To change tracks or pause, press buttons quickly. To adjust volume, hold buttons down till desired volume is reached.

To answer a call:

When a call comes through, quickly press ||▶ to answer. The speaker includes a microphone in the base; you will be able to hear and speak to the caller through the speaker. Press ||▶ quickly to hang up call.

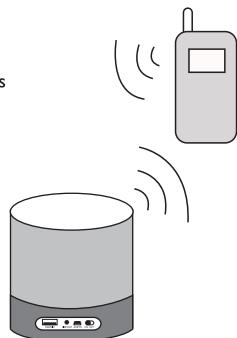

fold

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.