


Instruction manual



Art. No.7199-35

FCC ID: 2ABL8BT-1525

Please read this manual carefully to ensure correct operation of the headset.

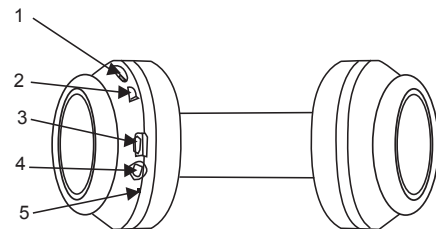

1. Play/pause and Volume +/- and Next/previous
2. Power on/off
3. Micro USB charging jack
4. 3.5mm earphone jack
5. Microphone

Specification:

Dimensions: 170x200x75mm
Unit weight: 190g
Working voltage: 3.7V
Music playing time: up to 8 hours
Charging voltage: DC 5V
Charging time: about 3 hours

Charging:

Plug the charging cable into the headset charging jack (3) and the USB port of your computer. The red light will turn on when charging. Once the battery is full, the light will turn off.

Pairing:

1. During pairing ensure the headset and Bluetooth device are no more than 1m apart.

1

2. Ensure the headset is turned off. If the headset is on, switch it off by holding down power button (2) until all lights are off.
3. Press and hold button (2) for 6 seconds until the red LED and blue LED flash alternately.
4. Activate your device's Bluetooth function (refer to your device's Bluetooth user guide for details).
5. Use the device to search for the headphones and select "Enyo" from the list of devices shown.
6. When the pairing is complete, the blue LED will flash regularly and the headset will be in standby mode.
7. Now you can make and answer calls using the headset.

Operation:

Turn the headset on by pressing and holding button (2) for 3 seconds. When power is on the blue light will flash. Turn the headset off by pressing button (2) until all lights are off.

***Note:** It is strongly recommended to turn off the headphones and Bluetooth on the mobile phone when not using it.

Answering/Rejecting a call

When a call comes in you will hear the ringtone of your mobile phone through the Bluetooth headset. Press button (2) to answer the call. To reject the call, press and hold button (2) for 2 seconds.

Ending a call

Press button (2) to end the call.

Redialling the last dialled number

Press button (2) twice to redial the last dialed number.

Play/Pause

Press button (1) to play and pause music.

Adjusting the volume

Use button (1) to adjust the volume during phone calls or while playing music. Roll button (1) upwards to increase the volume and roll button (1) downwards to lower the volume.

Selecting music:

While playing music: roll button (1) upwards to go to the next song and roll button (1) downwards go to the previous song.

2

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.