

Smart Watch

User Manual

Please read the manual before use.

1. Safety Warning

- ◆ The information in this document won't be modified or extended in accordance with any notice.
- ◆ The watch should be charging 2 hours at least before use

Security Code

- ◆ The original code is 1122. This code can prevent your watch in use by others without your permission.
- ◆ Please change the original code to insure your personal information safe.

2. Product details:

2.1 Product details

Power button: Long press to power On/Off; Short press to awake/dark screen/ Back to main menu

USB port: Charging/Data:

SD Card slot available (Up to 32GB)

Touch screen: each function (main menu) will be shown and displayed on capacitive touch screen.

2.2 Products quick into

You can enter into next page by sliding screen to the left and return to last page by sliding screen right; It is will be in mistake for a click if the drag distance too short.

2.3 Clock Display

Setting method:

Method 1: Power on, when the watch in clock mode, please click middle screen and set different clock interfaces if you like.

Method 2: Power on, Main menu: setting—watch setting—standby menu display—Wallpaper display.

3. Product quick use

3.1 Download the Sync software.

Scan QR code in your smartphone using any QR scanner from Google Play Store. Download the APP which can match your android phone. This APP only use for the Sync between watch and phone.

If you already download the related software, please check the version and use the newest related in order to ensure all function normal use. Please update the software when it has new one.

The software can also be found in the Play Store under the *BTNotification* name  url link:
<https://play.google.com/store/apps/details?id=com.szfunyun.bnnotification>

3.2 Install and use the Sync software

Android Application installation:

Please install the android application in your smart phone, you can storage it into your phone memory or install by Sync assistant.

Android application usage (already installed)
(Smart phone) Setting—Accessibility—Enter into
Bluetooth notice (service), enabled this service. (Please
choose “sure” when shown a warning notices) the
application runs on the background automatically and sync
function will be switched on

Click the Bluetooth notices and choose the Notification
service, select your Personal or System application in
Notify application.
Telephone Calls service is including SMS, incoming call
and localize your watch.
Notice:
Please don't shut the Bluetooth notify service when you
are clearing software by background or close background
application software. It will affect the Sync function
between watch and phone if shut it.

3.3 Bluetooth Connection and Sync function

3.3.1 From phone to watch

Phone setting—turn on the Bluetooth—search for devices
(Q18), please click pair devices when found it. And also
choose “yes” in your mobile phone, paired done.
Please choose “sure” when there is phone book request.
Meanwhile you'd better choose “no remind again”, this is

convenience when you connect next time (without remind again)

Notice: The Sync software can open in sync APP already installed and Accessibility, the mobile will show Bluetooth connected done after 2-5 min; the watch will inform you the time of Sync with phone, then the Sync switched on. The message will sync to you watch when it incoming to mobile.

3.3.2 From watch to phone

BT dialer on Smart watch ---Search new device—found your smart watch (such as Q18)—connect the processes of next are same with 3.3.1

3.4 Base function

3.4.1 Message

Sync phone

3.4.2 Bluetooth

Sets the Bluetooth status, turn on/off.

3.4.3 Calls records

You can check your phone call records after you connect with the Bluetooth.

Shown all records including miss call, dialed calls and receive call; You can check the date, time and phone number of the miss call after you choose it. But only can call this number.

3.4.4 BT dialer

Paired devices from smart watch

3.4.5 remote notifier (Only for Android users)
When there is SMS, the watch phone will alert you to read them.

3.4.6 Remote Camera

Watch camera can control smart phone camera. Via Bluetooth synchronization

3.4.7 Anti lost

Watch to find the phone, or phone to find watch.

3.4.8 Setting

Notice: sets clocks display and theme in phone setting. In the security Settings. The safe code is 1122.

3.4.9 Quick response

It can download sync software when scan the quick response, if there is a new version need to update, please contact with our servicer, our company will provide a new link for your download.

3.4.10 Alarm

3.4.11 Calendar

3.4.12 Calculator

3.4.13 Audio player

Can play music from local or smart phone after connecting with Bluetooth.

3.4.14 Recorder

4. Notice

Main menu: Theme setting, choose the theme if you like.

- 4.1 Full charge before use, the charge time need 1-2 hours.
- 4.2 Use the accessories cable and charger, or your android phone accessories.
- 4.3 Bluetooth will disconnect when exceed the distances, after switch on the Anti lost. The smart search function can't be use before reconnecting with Bluetooth.
- 4.4 Please reconnect with BT if it's disconnected occasionally (please Manual connect if the Bluetooth disconnected over 5 minutes). Please agree the phone book Sync otherwise there is no called phone book.
- 4.5 When playing the music, some of music's name can show and some can't, it is normal. Because android phone is difference.
- 4.6 The USB cable only has charging function

5. Common trouble shooting

Please refer below key function for any problems with the watch, if the problem is still unsolved, please contact with your dealer or serviceman appointed.

5.1 Unable to switch on

The time of press the power button too short, please keep it more than 3 seconds.

Low power, please charge it.

5.2 Shut down automatically

Low power, please charge it.

5.3 Unable to charge.

The battery's life will be reduced after few years, please check if the battery is working.

Change a new charger if it is unworkable.

Please check the USB slot connecting good, if no, please try again.

5.4 No caller's name when incoming call

Forgot to choose to upload the phone book when connected with BT, or unselected keep upload the phone book.

Forgot to sync the phone book when reconnected, please pair the device and connect BT again.

5.5 Bad phone call voice

Watch and phone are separated too far, please be closer; to get better signal of BT.

Bad signal of your own phone call, please change to a better place for phone call.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the

party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.