


USER MANUAL

MM5008A/ Olé!

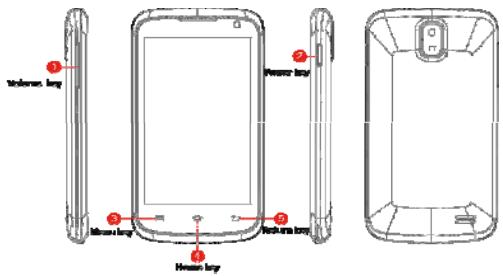

Precautions

1. This user manual has been specially designed to guide you through the functions of your mobile phone.
2. The company follows the strategy of sustainable development, so we will reserve the right to modify the product function, interface and the shape without informing the user.
3. When there are some discrepancies between the description and the actual product, the actual product shall prevail.
4. Please power off following the correct steps, do not remove the battery when power on or charging, to avoid adverse consequences, such as data loss, etc.

Guidelines for Safe and Efficient Use

To safely and effectively use your product, please read this information in depth before using your phone. The following suggestions may help you to follow the warranty terms and prolong its service life.
To avoid the damage of hearing, please answer the call or lower the volume in advance before placing your phone to ear.

Using your product (phone), charger and other accessories

- Turn off your product where noticed and prohibited (including airports, gas stations and hospital, etc.).
- Keep your product and its accessories away from small children.
- Do not expose your product and its accessories to liquid or moisture or humidity.
- Do not expose your product to extreme high or low temperature.
- Do not expose your product to open flames or lit tobacco products.
- Do not paint your product.
- Do not drop, throw or try to bend your product.
- Do not store your product with PC-disk, credit-card, travel-card or other metallic objects. Otherwise information stored in the disk or credit-card may be affected by your product.
- Do not expose your product or battery in the areas where temperature may exceed 60°C, such as windowsill or behind direct sunlight glass plate, etc.
- Do not attempt to disassemble your product, do not unauthorized service your product and its accessories.
- Do not use any battery or chargers that are not approved by the phone manufacturer, to avoid potential dangers.

- Wipe your product with a slightly damp or anti-static cloth. Do not use dry or electrostatic cloth to wipe your phone. Do not use chemicals or detergents containing grinding ingredients, otherwise it may damage the casing.
- LCD parts belong to the fragile and easily scratched parts that need to pay attention to store. Do not hit or crush your product. Do not store your product with sharp objects, to avoid scratching the screen or your phone.
- If your phone, battery, charger or other accessories are not working properly, bring your product and related accessories to the nearest authorized professional maintenance department, the staff will assist you, and arrange repair if necessary.
- Turn off your product and comply with all the safety signs or instructions when you in the hospital. Otherwise the waves emitted from your phone will affect the proper functioning of the electronic medical equipment and the cardiac pacemaker, and then endanger the patient's life.

Personal Healthcare Device Class

- Mobile phones may affect the operation of cardiac pacemakers, hearing aid, implanted Cochlear and other medically implanted equipment. Avoid placing the mobile phone in the breast pocket. When using the mobile phone, place it at the ear opposite the pacemaker. Keep the minimum distance of 15cm between the mobile phone and the pacemaker throughout. If you have any reason to suspect that interference is taking place, immediately turn off your mobile phone, move it to the far place, then contact your cardiologist for more information. If you use any other personal medical device or implanted equipment, e.g. hearing aid, consult the manufacturer of your device.

Driving

- Always give full attention to driving and pull off the road and park before making or answering a call. If local laws and/or regulations permit drivers to use a Hands Free solution, we recommend that you use 'Interior Hands Free' solutions intended for use with your mobile phone only.

Child safety instructions

- Keep your phone and all accessories out of the reach of small children. Do not allow children to play with your mobile phone or its accessories, they could hurt themselves or others, or could

Hospital

accidentally damage the mobile phone or its accessories. Your mobile phone or its accessories may contain small parts that could be detached and cause a choking hazard or serious injury if swallowed.

Used battery

- The used battery should never be placed in common municipal waste. Please consult local regulations for disposal of waste electronics products to get the correct disposal ways.

Use of original accessories

- Charger:** Connect the AC power adapter to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp areas. Never alter the cord or plug.

- Battery:** We recommended that you charge the new battery (or one that has not been used for a long time) for 12 hours at least and less than 24 hours before you use your mobile phone for the first time. The battery can only be charged in temperatures between -5°C and +45°C. When the battery is fully charged, unplug the adapter or the charging cable.

A new battery or one that has not been used for a long time need several fully charged and discharged to reach its best performance. Use only our company branded original chargers to charge your battery. Do not short-circuit the battery. To avoid explosions, never dispose of batteries in a fire.

KEY	Function
MENU	Press the key, you can access the menu options interface.
Home	Press the key, you can return to the idle interface.
Back	Press the key, you can return to the previous menu.
Volume	Using the two keys, you can adjust the volume. E.g.: The media player playing the audio and video, calling volume adjustment, etc.
Power	Long press the key to turn on your phone when it is off. Long press the key can switch to Reboot, flight mode or power off when your phone is on. In the idle interface, short press the key can lock the touch screen.

Screen icon definition


Icon	Function Description
	Network status identification Once you insert the SIM card, the idle screen display the icon.
	Battery power level The more full the bottle is, the more power the battery has. The icon will be displayed on Standby screen.
	Alarm activated This icon means the alarm has been set on. When the clock is set off, it will disappear automatically.

	New message This icon will be displayed on status bar when you have unread messages.
	Missed call This icon will be displayed on status bar when you have missed calls.
	Silent mode The icon will be displayed on status bar when changing the phone profile to silent mode.
	Vibration mode The icon will be displayed on status bar when changing the phone profile to vibration mode.
	Outdoor mode The icon will be displayed on status bar when changing the phone profile to outdoor mode.
	WLAN connection The icon will be displayed in the status bar, when the phone is connected to an AP network.
	Bluetooth activated The icon will be displayed in the status bar, when the Bluetooth is set on.
	Headset The icon will be displayed in the status bar, when the headphones are connected to the mobile phone successfully.
	Airplane mode The icon will be displayed on status bar when changing the phone profile to flight mode.


■ Install and remove the memory card, SIM card

- Remove the battery before install the memory card or SIM card.

- Install the memory card (TF card): Open the cover of the memory card slot, insert a memory card, and then lock the card slot.

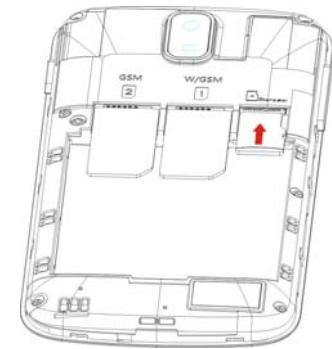

- Install the SIM card: SIM1 card slot and SIM2 card slot is marked as '1' and '2'. Insert the SIM card into card slot following the SIM card logo and directions.

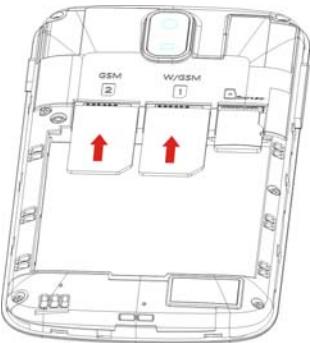

■ Turn your product on and off

- When your product is power-off, long-press the power key to startup and enter the main interface (Home).
- When your product is in the state of power-on, long-press the power key will pop-up a 'Phone option list' menu, you can select: 'Reboot', 'Airplane mode', 'Power-off' as desired.

■ Charge the battery

- Plug the end of the adapter into the phone charger/USB data cable multifunction jack.
- Plug the adapter into a power outlet.
- Now, the battery power level icon at the top right of the screen will blink; If your product is power-off when charged, the charging dynamic icon will appear in the center of the screen, that means the battery is charging.
- When the battery power level icon at the top right of the screen shows full and no longer moves, it indicate that the battery is fully charged.

If your product is charged when power-off, the charging flash will be static on the screen after completely charged. The course needs 2-3 hours in general.

During charging, the battery, phone and charger may feel hot to the touch, which is normal.

5. When the battery is fully charged, unplug the adapter from the phone and then from the AC power outlet.

Warning: While charging, the product must be placed in a ventilated place at -5°C to + 55°C, and be sure to use the charger offered by your provider. Use any chargers that are not approved by the phone manufacturer will maybe cause danger, and violate the ratification and warranty clause of your phone.

■ Use the headset: As you plug headset into the phone's headset jack, your phone's audio output will switch to headset output automatically.

■ Secret password

PIN: PIN (Personal identification Number) can prevent others to use your SIM card without your permission. Your PIN is supplied with your SIM card in general. If you enter your PIN incorrectly three times in a row, you need to enter your 'PUK' to unlock it. For details, please contact with your network operating company.

PIN2: You need to enter PIN2 when you access certain services (such as Fixed Dialing Number), if you enter your PIN2 incorrectly three times in a row, you have to enter your 'PUK2' to unlock it. For details, please contact with your network operating company.

PUK: To edit your blocked PIN, you need enter your PUK (Personal Unblocking Key). Your PUK is supplied with your SIM card. Otherwise, contact your service provider. If you entered your PUK incorrectly 10 times in a row, the SIM card can't be used again. Contact your service provider to buy a new SIM card. You can't modify your PUK. If you lose your PUK, contact your service provider.

PUK2: To edit your blocked PIN2, you need enter your PUK2. If you entered your PUK2 incorrectly 10 times in a row, you can't use the function to need the PIN2. Contact your service provider. You can't modify your PUK2. If you lose your PUK2, contact your service provider.

■ Calling functions

Keypad: You can make a call with keypad, phonebook or logs. Regarding the keypad, you can directly dial the number from it. Calling record will be shown when no entering in keypad. Once starting to enter the number, the matched phone number will be listed out and could be selected to dial quickly.

Answer a call: In the standby interface, when a call comes in, please click [Answer] button or click [Speaker] button to answer; In the lock screen interface, when a call comes in, please drag the answering icon to down to answer.

Use options during a call: In the call interface, click [Mute] button, you can hear the other party, but he/she can't hear you; press [Speaker] button to activate the speakerphone feature; press [Add call] can add another calls; press [Recording] can make a call recording; press [Dialpad] to activate the digital keypad; press [On Hold] to place a call on hold.

Reject a call: In the standby interface, when a call comes in, please click [Decline] button or click [Send SMS] button to reject, In the lock screen interface, when a call comes in, drag the Decline icon to down to reject.

■ Emergency number:

- You can make an emergency call directly with or without a SIM card.
- Different networks support different emergency number, consult your network operator for details.

■ Call logs: Call logs save the History you dialed and the incoming calls.

■ Fast dialing setting: Set your favorite number, click the entry to dial out

■ Phonebook

Phonebook can be used for storing contact information (names, phone numbers, email addresses, etc.). You can assign personal ringtones and picture phonebook, and do various communication operation directly.

The contact quantities can be stored in your SIM card phonebook depend on the memory capacity of your SIM card offered by your network service providers.

Tip: To better operate and store contact information, recommend that you store the information in your phone.

Basic operation: Using phonebook, you can view, add and manage your contact information easily.

Create a contact: 1.In the phonebook main interface, press [Create a contact] button, and chose save address(Phone or SIM cards); 2. Enter contact information, press [Done], you phone will save the information and exit the edit interface.

View, edit contact: In the phonebook main interface, press the contact to access the detail interface of the contact, you can view the related information stored; Press Message icon, can send the message to the number; Press the menu key, you can edit contact using [Edit] in the menu options as well as other options are available.

Search: The product provides you a search function in the phonebook main interface, press the icon [Search], enter the searching keywords, you can find the eligible contact.

Fast locating: This phone gives you a quick locating feature and can quickly go to the contact. In the "All contacts" interface, click the letter that corresponds with the contact name, you can quickly find the location to a contact.

Create a group: In the phonebook main interface, press the 'Groups', and press [Add group], then chose save address(Phone or SIM cards) and enter the name of the new group, and press [Save], a new group can be added.

Grouping operation: In the group of contacts main interface, you can press the 'Menu', and then the options of [Edit] , [Delete(group)]、[Delete group members]、[Bulk mms]、[Bulk email] and Move group members. Select relative operation to have further operation.

■ Message

Write a message: In message menu, press [New message], access to the message editing interface, enter the contact number or select from Contact list, after enter your message text, press [Send] to send a text message, or press 'Menu', then from options of [Add subject], [Insert Contacts], [Attach],[Common phrases] etc to have more other operations.

Read messages: If there are unread messages, the tray will show a prompting icon.

Search message: Press the icon [Search], and then start to search messages.

■ Message settings

Storages settings: In the message view, you can delete the old message if the total number of message reaches the upper limit; SMS limit: the number of SMS limited to store in each session; MMS limit: the number of MMS limited to store in each session.

Notification settings: you can set whether to display the message notification in the status bar or not; the setting of ringtone when SIM1 and SIM2 on arrival.

SMS settings: Press the 'Menu' button in the main message interface, select [setting] menu, to have the relative settings.

Common phrases: Press the 'Menu' button in the main message interface, select [Common phrase], select it and then create [NEW] or [DELETE] created one. Press the created common phrase can [Edit] or [Delete] it from options.

■ **File Explorer:** You can view the file content in your mobile phone and SD card by this file manager. You can manage files according to the window menu options.

■ **Browser:** You can connect to the Internet fast and conveniently by using your phone browser. In the navigation page, you can open the homepage easily and browse the commonly website. When browsing the web, you can conduct operations according to the browser menu option button, such as saving bookmarks or webpage, viewing the history and the download content, settings, and etc

Tip: The phone also provides third-party browser Opera Mini applications. Accessing the web function depends on whether the networks service provider have offered and you have subscribed this function or not. For details, contact your network service provider.

■ **Calendar:** Access the calendar interface of the current month. Press Menu, through the menu options, you can create an activity, search your calendars and select the data, see the Week, Month, or Day view, setting, etc.

■ **Clock:** With this function, you can edit the alarm time, ringtone, repetitive mode, tags, etc.

■ **Calculator:** The phone has a built-in calculator, which can add, subtract, divide and multiply.

■ **Music:** You can select 'music' to access the audio interface in the application list, you can select songs, playlist, album or artist to classify. In the process of playing, you can pause/play, up/down, adjust volume, set the circulation mode, etc.

■ **Gallery:** Click into gallery, you can manage and scan the pictures.

■ **SIM Toolkit:** Using the function, you can view the SIM information and a variety additional services offered by your service provider.

■ **Camera:** Your product supports for taking photos and video recording. Before taking a photo or video recording, you can set the following options: Exposure value, Image

quality, Auto contrast, Color effects, Flash mode, White balance, Size, Brightness, etc. You can press the Thumbnail picture to view, edit, share the picture or video. Press 'Menu' for more options.

■ **Sound Recorder:** Your product supports [Voice Recorder], you can record voice, set the record formats, view the record list, etc.

■ **FM Radio:** Plug a headset into your product, turn on the FM radio, you can listen to the radio. You can scan and save available stations automatically through the menu. Moreover, in the main interface, you can search channels manually, view the list of radio stations and turn on the speaker, etc.

■ **Downloads:** You can view all the download files through [Downloads]. In addition, you can remove or according to the file name, data, size sorting these files.

■ **Search:** You can search the Address book, Message, Note which stored in your phone.

■ **WhatsApp:** WhatsApp is a used for communications between smartphone applications

■ **Email:** Into the list of applications to open e-mail, enter your email address and mailbox password and click Next to create the account name and the name, point to complete e-mail to receive your mailbox.

In the Inbox list has the following option:

1. Refresh: Refresh your email inbox.
2. Compose: Write a new Email.
3. Folders: View the Email Inbox and Email Draft
4. Account settings: Set up your account name, signature, and receive mail frequency. Open the email, you can delete, forward, reply, and so on.

■ **Play Store:** Need to Google accounts support.

■ **Holo Torch:** Click to open or close the flashlight.

■ **Settings**

Dual SIM settings: When SIM1 and SIM2 in your phone at the same time, you can enable SIM1 or SIM2 in idle mode;

when data connecting, voice calling or SMS/MMS sending, you can use SIM1 or SIM2.

LockScreen settings: Choose the way to lock screen.

WLAN: Using the function, you can search the available WLAN network automatically or manually. Click one network to connect. The password may required to access the network.

To save the power, please keep WLAN function off when it is not being used.

If the WLAN network has been accessed and saved before, then the phone will connect to it automatically if the WLAN network is in range again and WLAN function is ON.

Bluetooth: This function can exchange the information with other device in short distance. When it is ON, the phone will search other devices which are on the statues of BT ON automatically. Select the device found and pair with it to set up the connection, and then can exchange the data in between.

In case, manually searching could be performed.

Visibility of the phone could be set up whether to allow other device find or not.

Wireless and Networks: Using the function, you can set Flight mode, Tethering and portable hotspot, VPN settings, Mobile networks, etc.

Audio profile: In the settings, you can select the predefined Audio Profiles. Each profile can be edited by press it.

You can switch to different Audio profiles based on different application scenes, and set each profile in detail, except Silent mode and Vibration mode. The profiles can be set including: 1.General mode; 2.Silent mode; 3.Vibration; 4.Outdoor mode. You can also add the Customize phone profiles.

Display: Brightness: Using the function, you can adjust the backlighting. Auto-rotate screen: With the function, you can set whether or not to rotate the screen content

automatically. Other functions includes Font size and Wallpaper.

Storage: Using the function, you can view the phone memory/SD card total capacity and available space, install/uninstall or format your SD card, and view the available space of your phone.

Battery: Check the lasting time of battery power and percentage of power consumption of each AP.

Security: Using the function, you can set [Device administration], [Screen Security], [SIM card lock], etc.

SIM card lock: When you buy the SIM card, the PIN code is offered by your network service provider, you can select whether or not to use as required. Activate the PIN lock feature to require the following settings: Press to access the SIM lock setting interface, press [Lock SIM card], popup the window to enter the PIN, enter the PIN code that offered by your network service provider, press [OK].

Device Administration: Unknown sources: You are allowed to install applications provided by non-electronics market. Manage applications: Using the function, you can manage or uninstall the applications installed. Running services: Using the function, you can view or manage the services you are using.

Accounts: Using the function, you can set or manage the accounts.

Backup & Restore: Using the function, you can select Factory data reset, erase all the information, and select whether or not to format your SD card.

Language and Input: Using the function, you can select the language area, set the Input Method (IME), add or delete words to user dictionary.

Data and time: Using the function, you can set the time updated automatically using the Internet or manually, select the time zone and data/time format.

Accessibility: You can set your phone to end a call when you press [Power] etc.

About phone: Using the function, you can view the Status message, Battery power level, Legal information, Model, Versions, etc.

Warning

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1cm from the body.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and

can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful

interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This UTCOM TECHNOLOGY CO.,LIMITED. meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue.

Device types: LAUNCH (FCC ID: YPVITALCOMTIN) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.382W/kg and when properly worn on the body is 0.587W/kg. This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna.. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.