
Remie

Model Name: BSC200

Brand Name: Brandstand Products


FCC ID: 2ABOXBSC200

IMPORTANT SAFEGUARDS**Signal Word Definitions**

DANGER – Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. Usage of this signal word is limited to the most extreme situations.

WARNING – Indicates a potentially hazardous situation, which, could result in death or serious injury.


CAUTION – Indicates a potentially hazardous situation, which, if not avoided, may result in minor/moderate injury or product/property damage. It also alerts against unsafe practices.

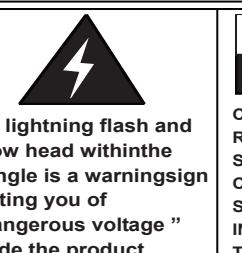

The lightning flash and arrow head within the triangle is a warningsign alerting you of "dangerous voltage" inside the product.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

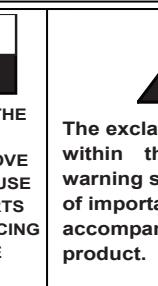

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USE SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

READ ALL INSTRUCTIONS BEFORE USE

Always follow basic safety precautions when using electrical products, especially when children are present.

- WARNING** – To reduce the risk of fire, electric shock, or serious personal injury:
- Keep the product out of the reach of children and pets. This product is not intended for use by children. Extra caution is necessary when using any electrical product near children.
 - Always ensure the product is unplugged from the electrical outlet before relocating or cleaning it.
 - Keep the power cord and product away from heated surfaces.
 - Do not use the product near water or other liquids.
 - Do not place or drop the product into water or other liquids. If the product falls into water, immediately unplug it from the electrical outlet; do not pull on the power cord.
 - Do not put any stress on the power cord where it connects to the product as the power cord could fray and break.
 - Do not plug/unplug the product into/from the electrical outlet with a wet hand.
 - This product has no user-serviceable parts. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform the service; take the product to the electronics repair shop of your choice for inspection and repair. Do not operate the product if it has a damaged or cut power cord or adapter, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if it is dropped or exposed to water.

- CAUTION** – To reduce the risk of personal injury or product/property damage:
- This product is intended for indoor, non-industrial, non-commercial use; do not use the

product outdoors.

- Do not wall or ceiling mount this product.

Battery Handling and Usage:

WARNING – Only adults should handle batteries. Do not allow a child to use this product unless the Battery Compartment Cover is securely attached to the Battery Compartment in accordance with all product usage instructions.

- Follow the battery manufacturer's safety and usage instructions.

Keep batteries away from children and pets.

Do not mix a new and a used battery or mix batteries of different chemistries or sizes.

Insert the batteries observing the proper polarity (+/-) as indicated inside the battery compartment. Failure to properly align the battery polarity can cause personal injury and/or property damage.

- Remove spent or discharged batteries when not using the product for an extended period.


Never throw batteries into a fire. Do not expose batteries to fire or other heat sources.

Dispose or recycle spent/discharged batteries in compliance with all applicable laws.

For detailed information, contact your local solid waste authority.


PREPARATION FOR USE**UNPACKING AND SET UP**

- Carefully remove all the components from the display carton and verify that you have all the necessary components before you dispose of the display carton.
- Remove all packing materials from the individual components. Remove any descriptive labels that may be attached to the front panel of the unit. Do not remove any labels or stickers on the back panels of the main unit or the speakers.
- Place all the components in the desired location. This system is designed to be used on level, stable, flat surface such as a table, desk, shelf, or stand, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dust, moisture, or vibration.
- Unwind the AC power cord on the back of the unit and extend the cord to its full length.

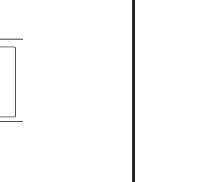PREPARATION FOR USE**POWER SOURCE**

- Main plug is used as the disconnect device, the disconnect device shall remain readily operable.

NOTE: The system has an AC plug and will only fit into matching AC outlets. This is a safety feature to reduce the possibility of electric shock. If the plug will not fit in your AC outlets, you should have the outlet changed by a qualified, licensed electrician. Do not use an adapter to make the plug fit into your outlet. This defeats the safety feature and could expose you to electric shock.

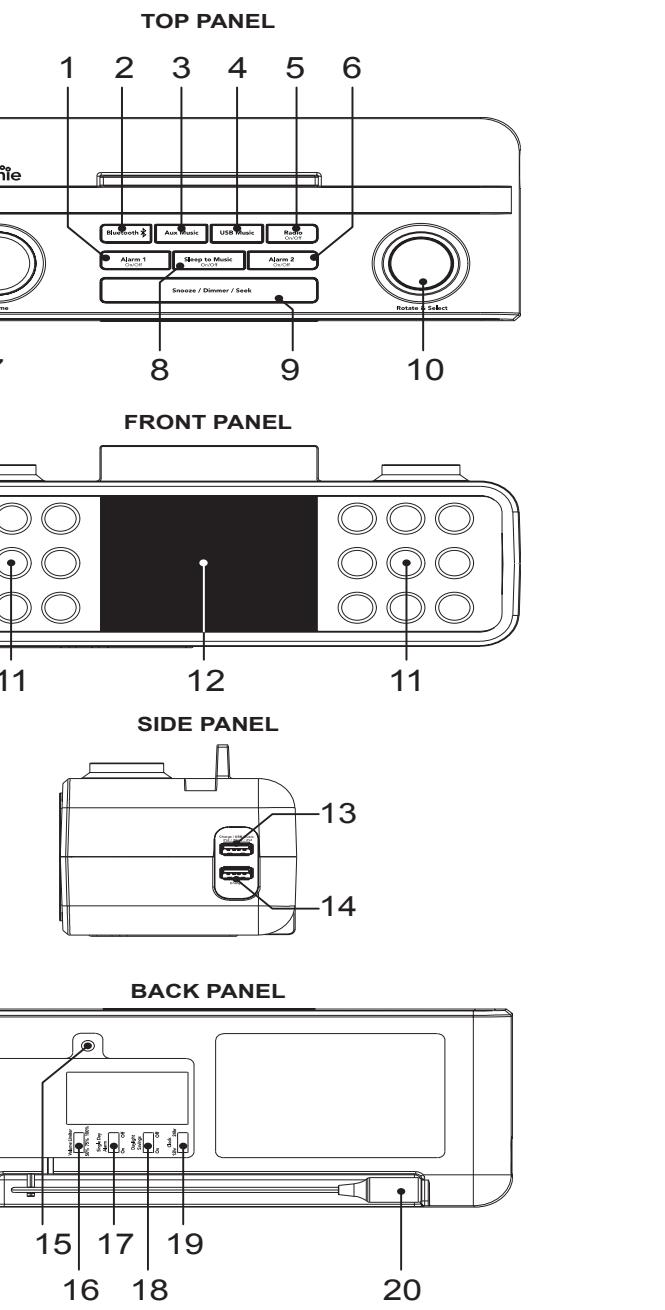**DISPLAY**

- Alarm 1 On/Off Button
- Bluetooth Button
- Aux Music Button
- USB Music Button
- Radio On/Off Button
- Alarm 2 On/Off Button
- Volume Knob
- Sleep to Music On/Off Button
- Snooze / Dimmer / Seek Button
- Rotate & Select Knob
- Speaker Driver
- Display
- iPad USB Port (Play and Charge iPhone/iPad/iPod)
- USB Charging Port (Charging Only)
- Battery Door Screw Lock
- Volume Limiter Switch
- Single Day Alarm On/Off Switch
- Daylight Saving On/Off Switch
- 12/14hr Clock Display Switch
- Aux In Cable
- Bluetooth Icon
- Aux Music Icon
- USB Music Icon
- Radio Icon
- Volume Indicator
- Alarm Wake to Indicator
- Clock Display
- Alarm 1 Time Display
- Sleep To Music Indicator
- Alarm 2 Time Display

OPERATION INSTRUCTIONS

- Make sure the AC adaptor from this unit is properly connected to a 100V-240V 50/60Hz household AC power outlet.
- For sufficient ventilation make sure that the minimum distance around the unit is 10 cm.

I) Setting the clock

1) The unit comes with preset time and date. After you connect the unit to the AC power outlet, the clock will automatically display the correct time.



2) You can also set the clock manually by pressing and holding the "Sleep to Music" button. The screen will show "2014" and start flashing. Adjust the year by turning the "Rotate & Select" knob. Press the "Rotate & Select" knob to confirm the year.



3) After the year is confirmed, the screen will show "m 01" and start flashing. Adjust the month by turning the "Rotate & Select" knob. Press the "Rotate & Select" knob to confirm the month.



4) Next you will see the screen showing "d 01" and start flashing. Adjust the date by turning the "Rotate & Select" knob. Press the "Rotate & Select" knob to confirm the day.



5) When the date is confirmed, you will see the clock displayed on the screen flashing. Adjust the time by turning the "Rotate & Select" knob and the "Rotate & Select" knob to confirm. The clock will adjust with both "Hour" and "Minute" Digit. Scroll faster if you would like the clock adjustment faster.

7


II) Alarm 1 and 2 Set

You can only set the Alarm mode directly on the unit during Standby mode.


A. Set Alarm 1

1) The Alarm Time is defaulted to 6:00AM and the default wake mode is Buzzer.

2) Press and Hold either "Alarm 1 On/Off" button and the Alarm 1 display will start flashing

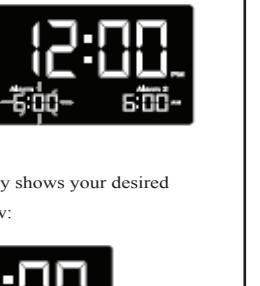

 3) Simply rotate the "Rotate & Select" knob to your desire alarm setting time and press the "Rotate & Select" knob to confirm the time.



4) Choose the wake to mode by rotate the "Rotate & Select" knob until the display shows your desired mode. You can choose wake to Buzzer, FM or USB Music (iPod) as shown below:



5) After you have set the time and the wake to mode, simply press the "Rotate & Select" knob to confirm or release all buttons and allow the Alarm display to flash for 5 sec and it will confirm automatically.

B. Set Alarm 2

Press "Alarm 2 On/Off" button and simply repeat the above 3) 4) 5) steps

C. Resetting and Alarm OFF function.

1) You can reset the Both Alarm 1 and Alarm 2 at any time by pressing the "Alarm 1 On/Off" button and "Alarm 2 On/Off" button, the Alarm 1 or Alarm 2 display will show "OFF".



2) When either Alarm 1 or Alarm 2 is activated, press the "Alarm 1 On/Off" button and "Alarm 2 On/Off" button to turn off the Alarm. The Alarm will be reset and the display will show OFF.

3) If Alarm 1 or Alarm 2 is activated and no button is pressed, the Alarm will reset to off automatically in 15min.

D. Snooze Function

After alarm is ON, you can press the SNOOZE button on the top panel to temporarily deactivate the alarm for 9 minutes.

(Note):

If either alarm is in Snooze mode and the other Alarm is activated, the Snoozed Alarm will be reset to OFF automatically.

E. Sleep Function

1) Press "SLEEP to Music On/Off" button on the top panel when the unit is on any playback mode (Bluetooth, USB Music, Aux Music and Radio). The display sleep indicator will show SLEEP TO MUSIC 15 and flashing.

2) Sleep to Music function have choices of 15/30/45 minute. Keep pressing the "Sleep to Music" button and the 15/30/45 icon will cycle. Simply stop pressing the "Sleep to Music" button when the icon show your desired sleep time. Sleep to music function is OFF when the sleep to music icon is not shown on the display.

**III. Bluetooth Playback**

1. Press the 'Bluetooth' button to select the Bluetooth mode. The Bluetooth icon on the display will start blinking.




2. Turn on your Bluetooth of your Bluetooth device and search for connection. Your Bluetooth device should find "Ramic". If password is needed for connection, please enter "0000".

3. The Bluetooth icon will be on and start blinking when the connection is successful.

4. Select and play the audio file through your Bluetooth device.

5. Rotate the Volume Knob to adjust the volume to the desired listening level.

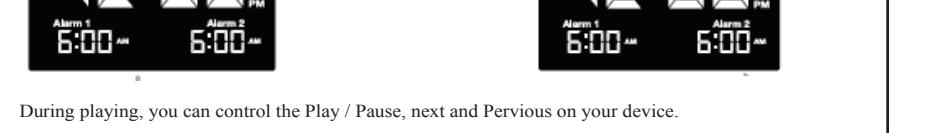

6. During playing, you can control the Play / Pause, next and Previous on your device.

7. To turn off the Bluetooth Mode, simply press the "Bluetooth Button" once and the Bluetooth icon on the display will went off.

IV. iPod/iPhone and iPad Playback (USB Music Playback)

1) Connect your Apple device (iPod/iPhone or iPad) to the original USB cable (Not Included) to the iPad USB Port (Play and Charge iPhone/iPad/iPod) on the side of the unit. The Apple device will start charging.

2) Press the "USB Music" button on the top panel. The Apple device will start automatic playback of music.



3) Press the "Rotate & Select" button to control the "Play/Pause" of the music playback. You can also go to the next songs by turning the "Rotate & Select" Knob Clockwise and go to the previous song by turning the "Rotate & Select" Knob Anti-Clockwise.

4) Rotate the Volume Knob to adjust the volume to the desired listening level.

V. Listen to Radio

Note: Extend the FM antenna to its full length. It may be necessary to adjust the direction of this wire antenna until you find the best position of reception for your favorite FM stations.

1) Press the "Radio On/Off" button on the top panel to switch on the FM Radio Function.



2.) FM frequency will show in the display at FM mode and AM frequency will show in the display at AM mode.

3.) Tune to the desired frequency as follows:

a) Automatic Tuning


Press and hold the "Snooz/Dimmer/Seek" button on the top panel. Auto tuning will start.

b) Manual Tuning

Turn the "Rotate & Select" knob on the top panel until the frequency of the desired station appears on the display. The frequency will go from Low to High when turning the knob in clockwise direction. The frequency will go from High to Low when turning the knob in Anti-Clockwise direction.

XI) Resetting

If the unit does not work properly, you may have experienced an electrostatic discharge or a power surge that caused the internal computer to lock up (crash). If this occurs, simply disconnect the unit from the mains and re-connect the main power again after one minute.

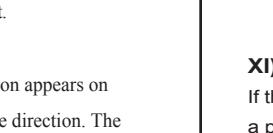**V) Auxiliary Cable**

Connect the Auxiliary cable to your sound source (TV, VCR, DVD Player, Cassette Deck, Mini Disc player, MP3 etc.)

The auxiliary function will only be supported when the Auxiliary Cable has a suitable sound source applied via a suitable connection cable.

1) Press the "AUX Music" button on the top panel and the unit will be in AUX music mode

2) Turn your auxiliary source "On" and operate as usual. The sound from the auxiliary source will be heard through the speakers of this unit.

3) Adjust the VOLUME level controls of this unit as desired.

VII) Display Brightness Control

This unit comes with a Volume Limit Switch located under the unit (Inside the Battery Compartment). The limit options are 50%, 75% and 100%. Default setting is 75%. Simply slide the switch to the desire level to limit the percentage of the Total Volume Output.

Note: Always use alkaline type battery and always remove the batteries if the unit will not be used for an extended period of time. Make sure you observe the battery polarity markings inside the battery compartment. Do not mix old and new or different types of batteries as this can cause internal damage and functional problems

Note: Although disconnecting the power will unlock the internal computer after a power surge, it will also erase all of the settings. After turning "On" the unit, you will need to reset the settings again.

Xii) Back Up Function

If the AC supply is interrupted, the clock display and Radio preset stations will be lost and all settings will be cancelled.

Two "AAA" size batteries are supplied with the clock. If the AC supply is interrupted, the internal clock will not be interrupted due to battery back up. The back up battery will support iPod settings or Alarm Settings.

Note: Always use alkaline type battery and always remove the batteries if the unit will not be used for an extended period of time. Make sure you observe the battery polarity markings inside the battery compartment. Do not mix old and new or different types of batteries as this can cause internal damage and functional problems

CARE AND MAINTENANCE

<b

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.