


Product Scheme -----	20
Buttons and Function	
1. About the minibar B1239 -----	20
2. Charging-----	21
3. Setting of the Main Power Switch -----	21
4. Turning On and Off -----	22
5. Bluetooth Connection-----	22
6. Connection with 3.5mm Audio Cable -----	22
7. Portable Hands-free Broadcasting-----	23
8. Volume Adjustment -----	23
9. Mute Function -----	24
10. Output function -----	24
11. Adjustment of Listening Angles -----	25
12. Specifications -----	26
Precautions and Warnings	
Precautions -----	27
Risks of Fire and Electric Shock -----	28
Safety Tips for Battery/Charger -----	28
Safety Tips for Car Accident-----	29
Danger of Falling-----	

## Product Scheme

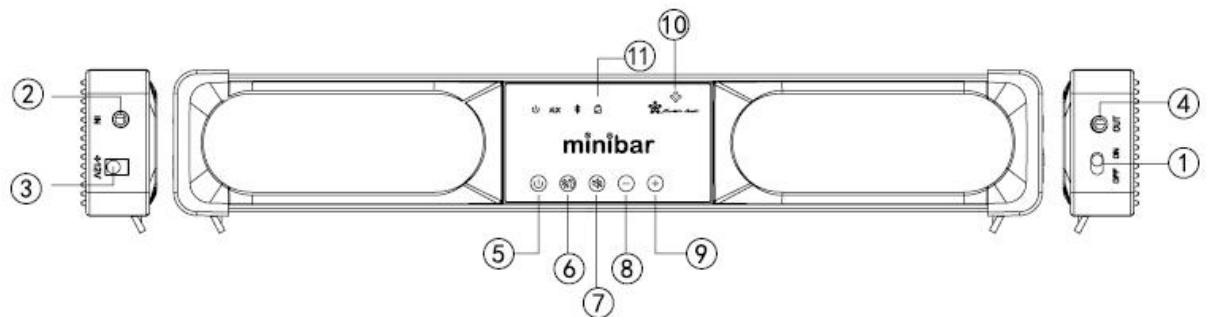

## Buttons and Functions

### 1. About the minibar B1239

- 1 ON / OFF : Main power switch
- 2 IN : Audio input
- 3 +12V : Power supply input
- 4 OUT : Audio output
- 5 : Power on/off
- 6 : Mode selection
- 7 : Mute
- 8 : Volume down
- 9 : Volume up
- 10 : Microphone
- 11 : Low power indicator

## 2. Charging

- (1) Before using the minibar for the first time, please fully charge the battery.
- (2) Once the power supply is connected, the charging LED is continuously illuminated to indicate charging and goes off when charging is complete. The charging time is approximately 2.5 hours.
- (3) You may use the minibar as usual while it is charging.
- (4) As soon as the lithium battery is fully charged, the speaker can be used for 8 hours under normal playback conditions.
- (5) When the battery is low, the charging LED will flash every 3 seconds. Please connect the power adapter for charging.

## 3. Setting of the Main Power Switch

- (1) The minibar has an ON/OFF power switch to prevent the speaker from automatically functioning due to inadvertent touch.
- (2) The speaker can work normally when the switch is set to ON. If the minibar needs to be carried outside in a suitcase or bag, we recommend that the switch be set to OFF to prevent the unit from operating due to accidentally pressing the power button on the panel. In this case, the unit is completely powered off and cannot

be started or operated no matter which button is pressed. (The unit must be completely powered off when boarding.)

#### 4. Turning On and Off

- (1) ON/OFF: First, set the power switch to the ON position.
- (2)  Power on: press the button until the power LED flashes rapidly. The power LED illuminates continuously after the unit is powered on.
- (3)  Power off: press the button until the power LED flashes rapidly. The power LED goes out after the unit is powered down.


#### 5. Bluetooth Connection

- (1) The Bluetooth connection is the default mode when power on. Voice message “ Power On ” & “ Pairing ” will be broadcasted to indicate that the unit is on and the Bluetooth function has entered into the pairing mode.
- (2) Switch on the Bluetooth settings on your smart phone, tablet, PC or equipment and search for the minibar for pairing.
- (3) Once the pairing succeeds, the voice message “ Pairing Completed ” will be heard. The device is ready to play music through the Bluetooth device.

(4) The Bluetooth function of the minibar can connect to only one Bluetooth audio source.

## 6. Connection with 3.5mm Audio Cable

The Bluetooth mode is the default mode when the minibar is turned on. Press the  switch to the AUX mode and the associated LED will be illuminated. Audio sources, such as PC, notebooks, mobile phones, iPad, and MP3 and MP4 players, can be connected via a 3.5mm stereo audio cable.

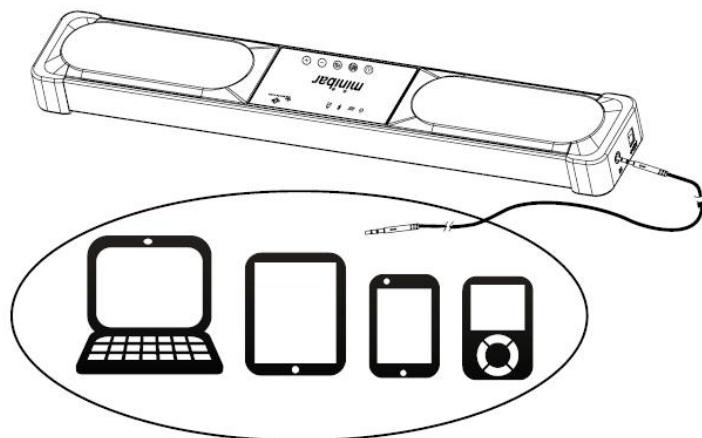

## 7. Portable Hands-free Broadcasting

When connected via Bluetooth, the minibar can be used as a portable hands-free phone (hands free set, receiving, and broadcasting). A phone call could be answered/ended by a mobile phone or by pressing the  key.

## 8. Volume Adjustment

is the key to decrease volume when pressed.


is the key to increase volume when pressed. In the Bluetooth listening mode, a tone can be heard when the volume is set to max.

## 9. Mute Function

Press the  key to switch the minibar between playback and mute mode.

## 10. OUT Function

The audio OUT function, can externally connect an active subwoofer or other portable speakers with built-in amplifiers, via a 3.5mm stereo audio cable.

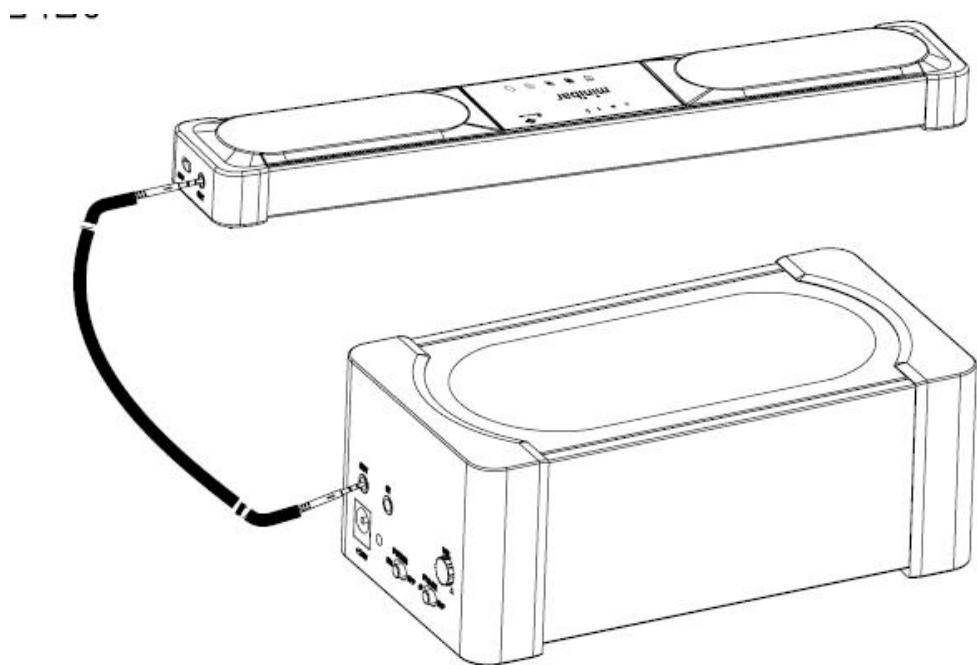


Notes:

- (1) The minibar is only applicable for connecting to audio sources such as PC, notebooks, mobile phones, iPad, and MP3 and MP4 players, but not applicable for directly connecting to equipment such as conventional CD players, Blu-ray players, and DVD players.
- (2) When using the power supply, the power may only be supplied after the minibar is turned off.
- (3) When the minibar is under the condition of low battery power which is not ideal for operating the device, please recharge immediately.

## 11. Adjustment of Listening Angles

- (1) The listening angle can be adjusted with the bracket in back of the minibar.
- (2) The minibar has a total of four listening angle arrangements in prop-up and flat positions. The bracket can be adjusted in two steps with the first one at 70 degrees and the second one at 110 degrees. Users may adjust the listening angles according to the ambient conditions.

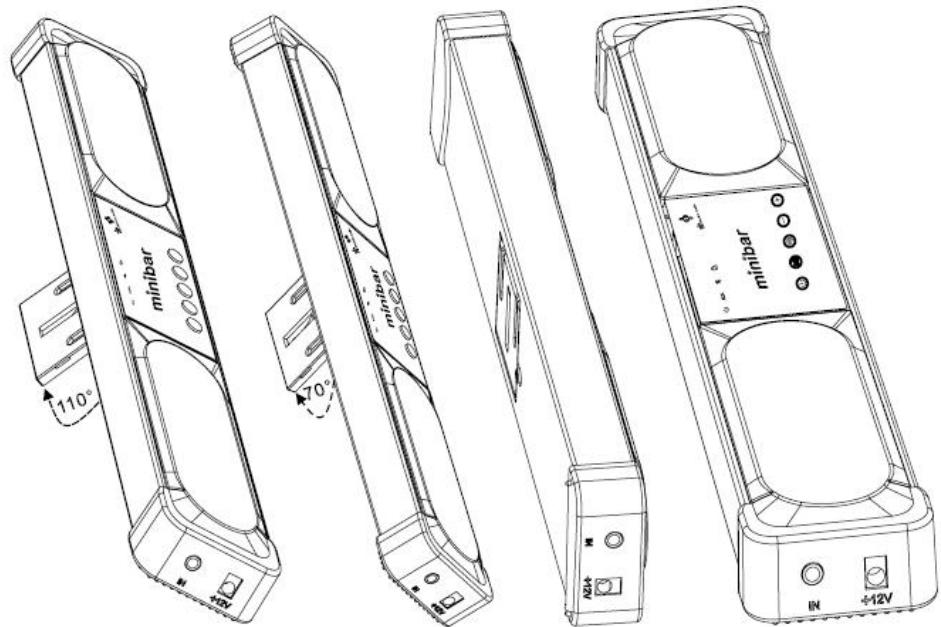

(3) A black button is located near the stand in back of the minibar.

Push the button in the direction of the arrow and the stand will pop up automatically, allowing you to adjust the angle of the stand.

## 12. Specifications

(1) Power source: DC 12V/2A & rechargeable lithium battery

(800mAH)

(2) Max sound pressure: 93db

(3) Bandwidth: 100 ~ 19KHz.

(4) Resonant frequency (FO): 100Hz

(5) Nominal impedance: 4 Ohm

(6) Dimension (L x H x W): 282 x 47 x 24 mm

(7) Amplifier distortion: 0.02%

(8) Net weight: 360 g

## Precautions and Warnings

Please thoroughly read the following safety warnings and precautions to ensure your personal safety and prevent property loss under the conditions or situations described below.

### Precautions

- (1) Do not use sand paper to clean the minibar since its stainless housing may be scratched and damaged.
- (2) Do not subject the minibar to the contact of sharp objects since it may cause scratches and damages.
- (3) Do not insert foreign objects into the minibar as this may damage internal components.
- (4) Do not try to repair, modify, or disassemble the minibar by yourself.
- (5) Do not try to replace the battery of the minibar as it is designed as a non-replaceable built-in battery.
- (6) Only use the factory supplied charger to charge the minibar. Other chargers may look similar to the supplied unit, but can

cause electrical shocks or damage the minibar due to differences in the voltage output.

- (7) Turn the power off when taken minibar on an airplane.
- (8) Dispose of the minibar and its battery in accordance with local regulations. Do not dispose the battery together with regular municipal waste.

#### Risk of Fire and Electrical Shock

- (1) Do not expose your minibar to liquid, a wet environment, or rain. Do not use the minibar in the vicinity of a bathtub, sink, Sauna chamber, swimming pool or steam room. Electrical shocks may be caused by exposing the minibar in an extremely damp atmosphere.
- (2) Do not subject the minibar to falling, dissembling, opening, extruding, bending, twisting, piercing, tearing, heating, burning, and painting operations or insertion of foreign objects.
- (3) Do not use the minibar as a tool or batting rod.
- (4) Do not expose the minibar to extreme temperatures.
- (5) Do not expose the minibar in direct sunlight for extended periods of time.
- (6) Do not place the minibar in the vicinity of open flames, such as cooking oven, candles or fireplace.

## Safety Tips for Battery/Charger

- (1) Do not destroy the minibar by disposing of it in a fire. Otherwise, the battery may explode and accidents.
- (2) Recharge the battery as per the instructions supplied with the minibar.
- (3) Do not try to disassemble the charger of the minibar or forcefully open the built-in battery as this may cause electrical shock.
- (4) Do not charge the minibar in a particularly wet environment or under extreme temperatures. Otherwise, electrical shocks may occur.
- (5) Do not clean the minibar with a wet cloth when charging. The charger plug must be removed before cleaning the minibar.

## Safety Tips for Car Accident

Do not leave or store the minibar or any accessories in the vicinity of the location where car safety may be impaired. Otherwise, the device may cause serious injury in the event of an accident.

## Danger of Falling

Do not place the minibar in a high place since the minibar may

displace during music playback, resulting in the speaker falling from the edge and casing personal injury or property damage.



The minibar is recommended to be used under 2000 meters of altitude for safety purposes.

The minibar is not recommended to be used in a tropical climate for safety purposes.

An explosion accident could be caused from a wrong dismantling method.

For a normal operation, a qualified battery component is necessary. If changing the battery is needed, please send the product back to our manufactory or local service point.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment