

NUMY 3G AX1

User manual

\*ainol®


An Intelligent Necessity Of Life

# Preface


Firstly thanks a lot for using Ainol digital products- Nemy AX1, sincerely hope you can enjoy it. This manual will introduce the feature of this product that allows you to fully understand how to use it. For your ease to operate the device as soon as possible, please read the instructions before using the machine so that you can properly use it!

1. It is based on Android 4.2 operating system.
2. Support wireless Internet, support Bluetooth 4.0 data transfer function.
3. Dual sim cards and dual standby (GSM and WCDMA), Support 2G and 3G voice calls and connect to internet.
4. Built in high precision GPS module and FM radio.
5. 7.0 inch, 1024X600 high Resolution.
6. CPU: MT8389 Quad-core
7. Camera: Front 2.0 Mega Pixels, Rear 5.0 Mega pixels.
8. 8.5mm metallic enclosure, support 1080P Full HD format video play.
9. In the operation process of the crash, please press the power key for 8 seconds to forced shutdown.
10. The picture used in the manual may be different from UI in the device, please subject to the device.

**Accessories:** If there is any change, we will advise

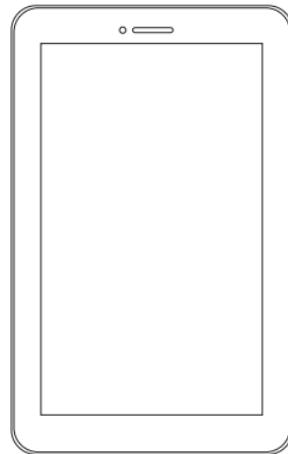

NUMY 3G AX1

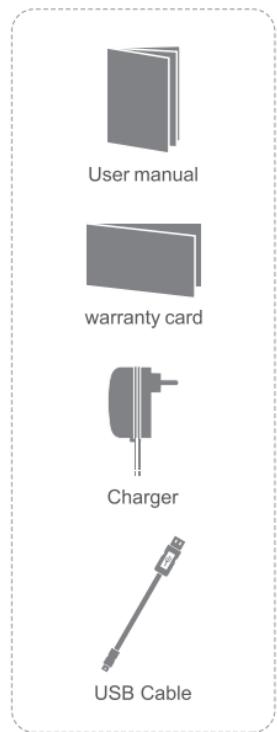



## Main function

- 7.0 inch, 1024X600 high Resolution;
- Support Android 4.2 operating system;
- Support APK application and installation;
- Support 1080P full HD format video play;
- Support G-Sensor for screen rotation function;
- Support audio play format:MP3, WAV, (APE, FLAC, AAC, OGG need to install third-party software);
- Support TF card, capacity is 2GB-32GB;
- Support multi-format video play;
- Support JPG, BMP, PNG, GIF format picture browsing;
- Built-in microphone, can support ultra-long recording;
- Energy-saving setting, brightness freely adjustable, can set up automatic shutdown;
- Support and compatible for WIN2000, WINXP, VISTA, WIN7 system;
- Support e-book and bookmark functions;
- Support firmware upgrade;
- Support multi-task, can read eBook while listening to music

## Note

This manual contains important safety measures and information to use the product correctly.

In order to avoid using improperly, please read the manual carefully before using it.

- Never use the device in extremely cold, hot, dusty and moist environment
- Please avoid the device falling down, being hit strongly and suffering severe vibration.

Otherwise, it would lead to the damage or abnormal display of the TFT Screen.

The user is responsible with the damage in this circumstance.

- Battery life will vary as the conditions and environment in use
- Please charge the battery in time if any following conditions:
  - A. The system warns that the power is low
  - B. There is no response when operating the keys
- When the device is formatting, uploading or downloading documents, do not disconnect it suddenly. Otherwise it will probably lead to player failure. We are not responsible for any document losses incurred by damage and repair the machine or other reasons. Please use it as the manual and copy the important data in time. If you have any questions, please connect to the dealer. Do not disassemble the machine independently. Otherwise, you will lose the warranty that our company is committed to. The user will be responsible for the entire problem caused by disassembling the machine without permission.
- Because the difference of calculating the capacity, the player system firmware and FLASH memory FAT partition table should occupy a certain space. There might be some discrepancies between the memory capacity marked on the logo and the memory capacity connected to PC, which depend on the firmware version and FLASH category used by the tablet.
- At present, there are many viruses in the computer. It is easy to damage the local documents and firmware by the virus. Please strengthen the prevention. If it is infective which cause the failure of the tablet. Please upgrade the firmware in the computer after you ensure that it has no virus, and then format it to solve the problem.
- The product performance and functionality may be different with different version of software. We'll not give further notice. The company reserves the right to improve the product.

## Basic Operation

### Power On/ OFF

Power On: In the turn-off status, press the power button for 3 seconds, the unit will enter the main interface after the boot.(Slightly longer boot time, please be patient.)

Power Off: In the power-on status, press the power button for 3 seconds, the pop-up interface, select "Shut Down" option to shutdown, otherwise click "cancel" option; press the power button to close screen, press again to open screen, drag lock up



can unlock and return to the main interface

### Main Screen Button operation:



Enter the main screen



Return to main Interface from any Interface



Check the history record



Return to last layer

### Main Interface operation:

Clicking at any point in the center of the main interface can set the wallpaper.

Wireless Internet function: click on "Google search" in the main interface, then input the contents with the pop-up keyboard input. After the input is complete, click to enter website. Click the on main screen or the menu button on the device.

### Main Function menu operation:

Click this function button, full-featured pop-up menu.

This window shows all the features of the machine icon, click on any icon to access the relevant function interface, click on the main interface key to return to the main interface.

Click "windows widget" to add widget of all functions in any window

## Emails

Click "emails" to enter user account interface and then log in to send and receive emails.  
(Require to register a google account)

## Calculator

In the main menu interface, click the "calculator" option, you can enter the calculator display screen, click on the numbers and operators, can be "add, subtract, multiply, divide," Click  can clear one by one.

## Browser

Under the main menu, click "Browser" to enter into the internet interface. The default home page of this device is "Google".

Click "website column" to pop up the keyboard for new website address; Click "content column" to pop up the keyboard for new searching content.

 check webpage bookmark, history  
record and Saved webpage

 pop up the keyboard for searching content

 enter the interface of browser setting

 add the current webpage as bookmark

Click  icon to hide the keyboard after putting in the website, click  to enter the webpage.

please click  icon or the menu button on the unit when browsing the webpage, the operation menu will pop up as below:

Click "refresh" to refresh the current webpage

## Settings

Click the "Settings" on the main interface to enter the system settings interface.

### 1.Wireless and Networks

#### • SIM management:

SIM Information: choose SIM card to turn on or off

Default Settings: set the information about Voice Call, Video Call, Messaging and Data Connection.

General Settings: set the function of Roaming and Contact Binding.

#### • Wi-Fi: turn on or off Wi-Fi

 Click to popup the dialog box. Add the target network to the list after set the Network SSID and Security.

 Click to popup the Wi-Fi settings menu.

#### • Bluetooth: click to turn on and off

Click "Searching" to search for the devices matched to this tablet.

 Click to popup the submenu.

### 2.Device

**Audio Profiles:** set the Predefined Profiles (General, Silent, Meeting, Outdoor) and Sound Enhancement.

**Display:** Enter this to set the screen brightness, automatically rotate screen, wallpaper,

**Memory:** User can tap to view the internal memory, SD card capacity, free space and relevant operations.

**Battery:** Click to check the battery status

**Application:** check all the apps in the unit which is download or in operation.

### 3. Personal

**Location Access:** set the information about Access to My Location, GPS Satellites and Wi-Fi & Mobile Network Location.

**Security:** set the Screen Security, Encryption, SIM Card Lock and Password.

**Language & Input:** set the language, input methods, keyboard and mouse.

**Backup & Reset:** save personal document and restore the machine to factory state.

### 4. Accounts: add accounts

### 5. System

**Date & Time:** set to automatically gain the data and time from the network or not, and can also manually set the date / time zone / time / format.

**Scheduled Power on/off:** set to turn on or off automatically.

**Accessibility:** set the accessory function.

**Developer Option:** set USB debugging, stay awake, allow mock locations, desktop backup password, user interface, application related function Settings.

**About Tablet:** basic information about the tablet.

## Search

Click on the "search" option in the main function, will pop-up search interface and content input keyboard, input is completed, click "go" to enter the relevant pages.

Click  Voice search can be performed

Click  will pop-up search settings menu, enter can set up the search items

## Audio Record

Under the state of main menu, select "Record" option, enter into the Record interface . Click  button to start record; Click  button to stop record and save it; click  to display current recording file.

## FM Radio

Click "FM Radio" on the main interface to enter the radio interface. (Please insert the earphone as an aerial. If not, it cannot search the FM band.



Channel list: click to enter the channel list



Menu: click to pop-up the menu



Last channel: click to broadcast last channel



Next channel: click to broadcast the next channel



Quit: click to quit the FM Radio



Favorites menu: click to add this channel to Favorites

## File Management

In the "File Manager", it list show all the files in the internal memory and SD Card. Click to enter one layer by one layer, which list the files under the current folder.



check the files stored in the internal memory



check all videos



check the files in the SD Card



return to previous layer



check all the photos