

# **User manual**

**Model name: T160**

**Brand name: Cellacom**





## Introduction




 
Thanks for selecting T60 color screen GSM digital mobile phone. Through reading the manual, you can fully know how to use T131 mobile phone, appreciate its complete function and simple operating method.

# 1. Before Use

## 1.1. Name and Explanation of Each Part

### 1.1.1. Description of the Standby Pictures

	<p><b>Network signal strength</b></p> <p>The more the stripe is, the stronger the signal is. When SIM card 1s inserted in card slot 1, standby screen will show the icon.</p>
	<p><b>Network signal strength</b></p> <p>The more the stripe is, the stronger the signal is. When SIM card 1s inserted in card slot 2, standby screen will show the icon.</p>
	<p><b>Battery strength</b></p> <p>The full the fill is, the more electric quantity is. Standby screen will show the icon.</p>
	<p><b>General mode</b></p> <p>When scene mode is set as general mode, standby screen will show the icon.</p>

	<p><b>Silent mode</b></p> <p>When scene mode is set as mute mode, standby screen will show the icon.</p>
	<p><b>Meeting mode</b></p> <p>When scene mode is set as meeting mode , standby screen will show the icon.</p>
	<p><b>Indoor mode</b></p> <p>When scene mode is set as Indoor mode, standby screen will show the icon.</p>
	<p><b>Outdoor mode</b></p> <p>When scene mode is set Outdoor mode, standby screen will show the icon.</p>

### 1.1.2. Description of Keys

Keys	Function
<p><b>Left soft key/</b></p> <p><b>Right soft key</b></p>	<p>1. Execute functions that the left-down/right-down corner indicator shows. 2. In the standby mode, press Left Soft key to access Menu, Right Soft key to access Contacts.</p>

<b>Navigation key</b>	On other interfaces, it equals to navigation key and direction key except for special functions.
<b>Dial key</b>	<ol style="list-style-type: none"> <li>1. Press this key to dial or receive an incoming call.</li> <li>2. When in the standby mode, press this key to access Dialed Calls.</li> </ol>
<b>OK key</b>	In the dial panel mode, press this key to show or hide dial panel.
<b>End key</b>	<ol style="list-style-type: none"> <li>1. Mainly used as power on/off.</li> <li>2. Press to return to standby screen in any interface.</li> <li>3. End calls or reject incoming calls.</li> </ol>
<b>Number key</b>	It is used to dial and input numbers or characters. Press and hold Number key 1 or 2 to get through the preset voice inbox.
<b>* Key</b>	On the standby interface, input *; after inputting telephone number, if you want to input extension number, please press twice asterisk key, after the display screen shows “+”, please input your

	extension number.
<b># Key</b>	<ol style="list-style-type: none"> <li>1. In text editing interface, press "#" key to switch text the input method.</li> <li>2. On the standby interface Press and hold "#" key to transfer the profile of General /Meeting.</li> </ol>

## **1.2. Install SIM Card and Memory Card**

### **1.2.1. SIM Card**

**Before using the phone, you must insert valid SIM (Subscriber Identity Module) card in the phone. SIM card 1s provided by network supplier.**

### **1.2.2. Memory Card**

Aim at the T card slot and push the T card gently, and the card will be inserted correctly.

**Prompt: If the memory card is failed, please check whether it is correctly placed and good contact of metal point.**

## **1.3. Battery**

### **1.3.1. Install the Battery**

- Take off the rear cover, of the mobile.
- Make one end of battery with metal surface aim at the battery connector.
- Then gently press the battery downward using the finger, and then press the other end to install the battery.

**Prompt: Please operate correctly to avoid damaging the battery connector.**

### **1.3.2. Charging**

Insert the charger on the charging interface at the side end of the phone.

Connect the charger to a standard wall outlet and the battery power icon in the up-right corner of the screen will start scrolling. When the battery bar stops scrolling, it means the battery charge is complete. Press the two sides of the charger plug and disconnect the charger from the phone.

**Prompt: In order to ensure normal operation of the phone, please make sure to use the designated charger.**



## **2. Function Menu**

### **2.1. Call History**

#### **■ Call logs**

Display your recent call log.

#### **■ Missed calls**

Display the list of your recent missed numbers. The operation is the same as the Dialed.

#### **■ Dialed calls**

Display the list of your recent dialed numbers.

#### **■ Received calls**

Display the list of your recent answered numbers. The operation is the same as the Dialed.

#### **■ Rejected calls**

Display the incoming call records in the blacklist.

## ■ **Delete all**

You could delete all the records of the Dialed, Received, Missed and Rejected.

## ■ **Call timers**

Display information details of SIM1/SIM2: Last Call, Received Calls, Dialed Calls, and All Calls. Press left soft key to "Reset".

## ■ **GPRS counter**

Display information details of SIM1/SIM2: Last sent, Last received, Total sent, and Total received. Press left soft key to "Reset".

## **2.2. Names**

This function could help you browse the name card holder, store, edit and delete the names and phone numbers in the phone and SIM card. To facilitate the management of the records, this phone sets the group function, collecting the similar items into a group. The storage capacity of the SIM card varies and the maximum storage capacity of this phone is 300.

## 2.3. Games

This mobile phone provides small games, specific operation see game shows.

## Settings

You can customize the settings, such as time and date, language, call settings etc.

### ■ Call settings

Including:

**Dual-SIM:** Including Standby mode, Reply by original SIM, Set SIM name.

**Call Divert:** When “call divert” function is started up, you can transfer the incoming call to voice inbox or other phone number according to the tasked “call divert” conditions.

**Call Waiting:** You can start up or shut down the function. When it is started up, even when you are making a call, you can also receive another income call.

**Call Barring:** All outgoing calls, incoming calls, roaming incoming calls, international outgoing calls, roaming international outgoing calls are available.

**Hide ID:** Set the display mode of the phone number.

**Others:** The setting options include Call time minute

reminder, Auto redial, Vibration when connected, Reply SMS after reject, Auto call record.

## ■ Phone settings

**Date & time:** You can set up the date and time on the phone as well as their display mode.

**Language settings:** You can select phone language.

**Shortcut settings:** You can set the menu when you press navigation button to enter in standby interface.

**Auto Power on/off:** You can set the time and repeat mode of power-on and power-off.

**Power management:** When setting pattern set to save electricity mode. And can view your battery power.

**Restore factory settings:** You can restore part of the phone settings as factory settings. The default code of restoring factory settings is: 1234.

## ■ Display settings

**Animation effect:** Including Power on display, Power off display.

**Wallpaper Settings:** Supported: Static wallpaper and more pictures.

**Idle display settings:**

**Contrast:** Adjust the screen backlight.

**Backlight:** Adjust the backlight time.

**Keypad backlight time:** Adjust the keypad backlight time.

## ■ Security settings

**PIN:** Start and close of PIN code and the modification of PIN.

**Modify PIN2:** Modification of PIN2 code.

**Phone locked:** Open or close the phone lock. The default password is “1234”.

**Modify the cellphone password:** Change the phone and privacy password.

**Privacy:** Set the privacy protection. The default password is “1234”.

**Auto keypad lock:** Set the time of mobile phone automatically locked.

**Lock screen by end-key:** Choose open or closed by red key locking function.

**Mobile tracker:** You can start up or shut down anti-theft function or revise anti-theft function password (the password shall be 6-digit). The default anti-theft password is 123456.

**Fixed dialing:** Start and close of the fixed dialing, and management of the fixed dialing list

**Blacklist:** Set the Settings of the blacklist and management of the list.

## User profiles

The preset modes are General mode, Silent mode, Meeting mode, Indoor mode, Outdoor mode, Earphone mode and Bluetooth mode. It support custom profiles, define at most 7 profiles, and users can set the parameters of the profiles.

### ■ Connections

**Network account:** Manage internet account, and support editor and delete.

**GPRS Service:** Choose turn on or off GPRS service.

**Data connection settings:** Select to connect when needed or Always connect.

**Network selection:** Select to Auto select or Manual select.

## 2.4. Messages

### ■ Write Message

——New SMS

You could write new message by using this function. When you input the message to be sent, click left soft key to send, to insert the templates, to add contact person

information and symbol, and to save, etc.

——New MMS

#### ■ **Inbox**

Save the received SMS and MMS.

#### ■ **Outbox**

Save the SMS and MMS not sent out successfully.

#### ■ **Drafts**

Save the unsent SMS and MMS.

#### ■ **Sentbox**

Save the SMS and MMS you sent successfully.

#### ■ **Security inbox**

Will store information to safety after the inbox, into view must enter the password to check is 1234

#### ■ **Templates**

You could edit or delete the templates.

#### ■ **Broadcast message**

The area info services send different kinds of messages. Change the settings of this service and inquire the area info by using this function.

## **2.5. Multimedia**

### **Camera**

The device is equipped with a webcam with high pixels. You can take photo at any time and save the photo in the device or SIM card. Press OK key to get the picture.

#### **■ Image viewer**

Check the pictures and shoot photos in the memory card through the photo album.

Edit the opened pictures, press options, can do Set as wallpaper, Set as contact icon, Delete, Share, Rename, Slide play, Details.

#### **■ Video recorder**

The device is equipped with a video capture so that you can chat with your friends through it. A driver is needed to be installed when the video capture function is used. The details can be found in driver installation guide.

#### **■ Video player**

This phone supports the video format of 3GP, and MP4. Enter the video play list interface, press left soft key, you could go on the following operations.



### ■ **Audio player**

This phone could play the MP3 stored in the phone memory and support the background play. Press the left soft key or "OK" key to enter and use the Navigation keys to operate the MP3 player. Press up key and down key to adjust volume. Press left soft key to access Options:

#### **FM radio**

You can listen to Fm radio freely. Enter the radio interface. Press the left and right navigation key to switch on a channel. Press the ok keys to stop/play broadcasting FM radio. Press up key and down key to adjust volume.

### ■ **Sound recorder**

Use this function you can record or listen to your own record. The record file format: wav.

Press left soft key and ok key select "record".

### ■ **My files**

My files manager can manage the files in the memory Card (make sure the card has been inserted).

## **2.6. Tools**

### ■ **Bluetooth**

This mobile phone support Bluetooth wireless connection. You can establish wireless connection

between mobile phone and device to realize voice communication, data exchange and synchronization.

### ■ **Calculator**

The function will make your device a calculator with which you can carry out simple math calculation.

### ■ **Calendar**

You can use this feature to view the year, date and solar term easily. Use up/down/left/right direction key to navigator other date.

### ■ **Alarm**

You can edit alarm, time, ring and repeated ring mode.

In “alarm edit” mode, you can scroll up or down direction key, when the cursor goes to the desired option, press “OK”, then you can select desired settings.

### ■ **Torch**

You can turn on/off torch light or long press ok key in standby interface.

### **STK**

Enter STK submenu, you can use the additional services that the network service operator provided.

The device has STK function. The service is provided by network operator. If SIM card or network operator fails to provide the service, the function can't be available.

Contact network service operator, if you want to have more information.

## **2.7. Elite**

In the function, you could check the service information and the product simple specification.

## **2.8. Internet**

The device is compatible with WAP service. You can visit various WAP services, for instance, news, weather forecast and airlines etc. The services are specially designed for the device and are maintained by WAP service supplier.

## FCC

### FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over on one gram of tissue.

Device types: T131 (FCCID: 2AC343396993T160) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.724 W/kg and when properly worn on the body is 0.891 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0 cm separation distance between the user's body and the back of the handset.

The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including

interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The user's manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.