




STYLE SELECTIONS and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved

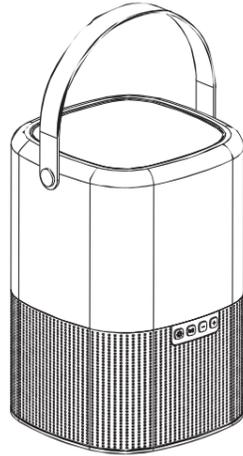

ITEM #6032677
MODEL #L-0118-052

9-IN BATTERY-POWERED LED SPEAKER LANTERN

Questions, problems or missing parts?
Before returning, contact us on:
1-866-994-4148, 8 a.m. - 8 p.m. EST, Monday - Sunday or ascsl@lowes.com

Thank you for purchasing this STYLE SELECTIONS product. We've created these easy-to-follow instructions to ensure you spend your time enjoying the product instead of putting it together. But, if you need more information than what is provided here, please visit Lowe.com, search the item number and refer to the Guides & Documents tab on the product's page.

TROUBLESHOOTING

TROUBLESHOOTING	POSSIBLE CAUSE	CORRECTIVE ACTION
The light does not turn on.	The battery is out of power.	Charge the product for at least 10 minutes.

*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate, or install the product.



- DANGER**
- ELECTRIC SHOCK HAZARD! MAY CAUSE SERIOUS INJURY OR DEATH.
 - TURN OFF THE POWER SUPPLY TO THE CIRCUIT BREAKER BEFORE INSTALLATION.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PACKAGE CONTENTS

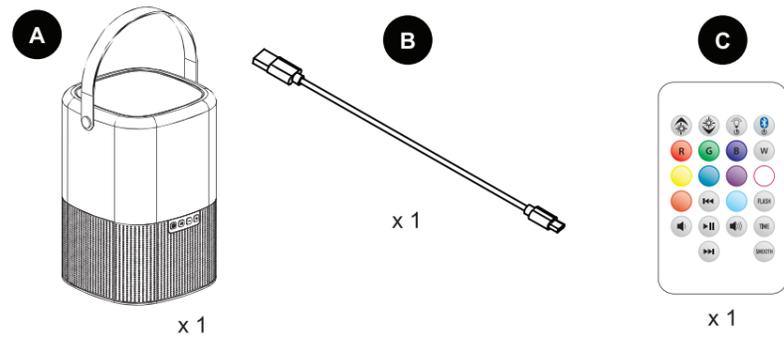


OVERVIEW

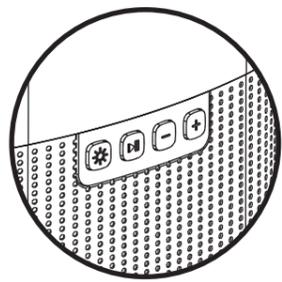

	Short press	Turn on the power. There will be a "Power on" prompt sound and a warm white light at 100% brightness. At this time, it enters the Bluetooth connection mode, and the blue of Bluetooth indicator light at the top will flash (slowly). The indicator light turns off after connecting via Bluetooth.
	Long press 3s	Turn off the power. There will be a "Power off" prompt sound and the light will go out.
	Short press while ON	Warm light 100% -- Warm light 50% -- Warm light 25% -- Color gradient mode -- Follow the music colorful gradient mode -- The lights went out -- Warm light 100%...
	Long press 3s	1. Enable "TWS" pairing mode, and the Bluetooth indicator will flash (fast) (The speaker that is operated by long pressing is the parent speaker). After the connection is successful, the indicator light of the parent speaker will flash (slowly), and the indicator light of the child speaker will turn off. 2. When there is already a TWS connection, long-press the child speaker to disconnect. (TWS has a memory function, and it will automatically connect when powered on next time.)
	Short press	Play and pause the music.
	Short press	Reduce the volume.
	Long press	Previous song
	Short press	Increase the volume.
	Long press	Next song

OVERVIEW


CHARGING CARGA

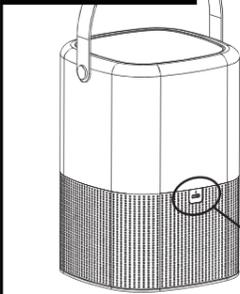

Charging Port

- Before use, charge the battery for at least 3 hours with provided USB cable:
1. Connect the USB cable to computer USB port or 5 volt output charger.
 2. Connect the USB cable to USB port of product.
 3. The charging indicator will be RED while charging.
 4. The charging indicator will turn GREEN after the battery is fully charged.
 5. Disconnect the external adapter from power when not in use.

OVERVIEW

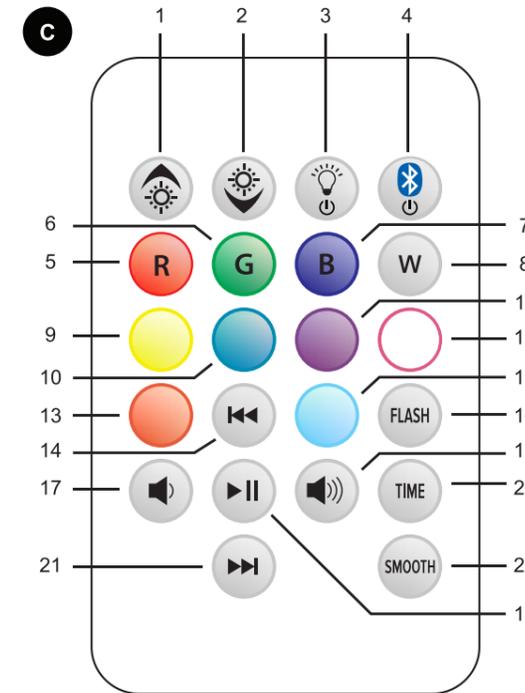

1. Brightness up
2. Brightness down
3. LED lights on/off
4. Bluetooth on/off
5. Red LED light
6. Green LED light
7. Blue LED light
8. White LED light
9. Yellow LED light
10. Light Blue LED light
11. Purple LED light
12. Hot Pink LED light
13. Orange LED light
14. Previous music
15. Cyan LED light
16. Flash-Dancing led colors along with Music
17. Volume down
18. Play/Pause
19. Volume up
20. Timer for colors
21. Next music
22. Smooth Automatic smooth transition of led colors

1. Remove the small plastic sheet from the battery cover before using the remote control.
2. Please return this plastic sheet to remote control when not using to save battery power.
3. Each time you need to turn on product before activating remote control function.

- TIMER BUTTON SETTINGS**
- 1st press, light in Red color for 30 minutes
 - 2nd press, light in Green color for 60 minutes
 - 3rd press, light in Blue color for 90 minutes
 - 4th press, light in Yellow color for 120 minutes
 - 5th press, light in Cyan color for 150 minutes
 - 6th press, light in Violet color for 180 minutes
- Note:** Power off the light speaker to cancel the timer

! WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or ingested inside any part of the body.

