



Talkase T3			
OVERVIEW	7	MUSIC	7
BEFORE YOU BEGIN	m	RECORDER	7
Install SIM Card		ВLUETOOTH	80
Charging		ALARM CLOCK	80
Battery Status		SETTINGS	6
Displays		Audio Profiles	
CALLS	2	Date & Time	
Make a call		Language	
Receive / Reject / End a Call		Wi-Fi Hotspot	
Speed Dial		Mobile Networks	
Call History		Reset to Factory Mode	
CONTACTS	7	SPECIFICATIONS	10
MMS	7	SUPPORT	10





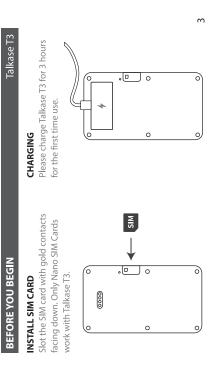

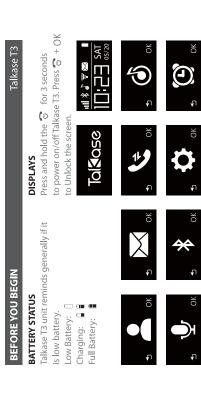

MAKE A CALL CALLS

In main screen, press numbers 0-9,and ${\boldsymbol \ell}$ to enter the Dial Pad. Enter phone numbers and press 🌈 to make a call.



Talkase T3 Set From Speed Dial List

SPEED DIAL

Set speed-dial list in the phone book. You can press numbers No. 2-9 to make speed dials.

Set From The Phone Book Go to the Contacts⇒ Speed Dial for speed dial setting.

Long press No. 2-9 in the standby screen. III % € ₹ ₹ III

CALL HISTORY
In the menu ♠, press OK to view the call history.

→ Incoming Call	← Outgoing Call	i Missed Call
↑ kobe	← Andy	! Cindy (3)

CONTACTS

The Contacts menu , , you can Add Contact, check Contacts, Speed Dial, Import / Export Contacts Contacts.

MESSAGE

New Message

You can manually type in or inset contact from the phone book for a message.

Conversation List

You can check the conversation content including sender, receiver and draft. The \rightarrow (press \triangle) indicates the received contents, and the ∇ (press \leftarrow) indicates the send contents.

MUSIC

Press ▲ or ▼ to select the music and control the volume. Press OK to play and pause the music. Press ◄ or ▶ to select previous song or next song.

During the music play, you can press the 2/4/5/6/8 key to control the music.

RECORDER

This feature allows you to record or play the recording. Press OK to start or stop recording and press \triangle or ∇ to switch \square (save the recording), \triangleright (continue recording) and \times (delete the recording), press OK to confirm. 7

BLUETOOTH

Enable the Bluetooth before searching the connectable device around you. You can revise the connected device's name and configure the password if needed.

ALARM CLOCK

Enable alarm function to configure alarm Time, Repeat setting, Ringtone selection and Vibrate setting.

ETTINGS

You can configure Audio profiles, Date & time, Language, Wi-Fi hotspot, Mobile networks, and Factory data reset.

AUDIO PROFILES

Set the audio mode currently including User defined profiles, Predefined profiles and Airplane mode.

DATE & TIME

This tab allows you to set the date and time according to your location.

SETTINGS

LANGUAGE

Support up to 12 languages for options.

WI-FI HOTSPOT

Set the hotspot to share the Internet with other devices. Enable this feature will accelerate the battery consumption.

MOBILE NETWORKS
This feature includes Data roaming and APN.

RESET TO FACTORY MODE


and all the saved data will be deleted. Reset your phone to factory default

	ומואמאב ו
Memory:	512MB + 256MB
Display:	0.96" OLED Resolution 128*64
Dimension:	90(L)*50(W)*6.5(H)mm
OS:	Android 4.4
SIM Card:	Support Nano SIM
Frequency:	WCDMA 850/2100, GSM 850/1900/900/1800
Battery Capacity:	550 mAh Original High Capacity Li-Polymer
Standby Time:	96 Hours
Talking Time:	Call Duration Approx. 3 Hours
Charger:	Magnetic Pogo Pin Charger

for further information or require assistance, please refer to https://www.talkase.com

lalkase I 3			< -
概述	7	章乐	7
使用前须知	m	录音机	7
安装SIM卡		財子	80
充电		闹钟	80
电池状态		设置	80
屏幕解锁与主菜单		情景模式设置	
拨号	Ŋ	日期和时间设置	
拨打电话		语言设置	
接听/拒接/结束通话		Wi-Fi热点设置	
快速拨号		移动网络设置	
通话记录		恢复出厂设置	
联系人	7	规格参数	10
短信	7	了解更多	10



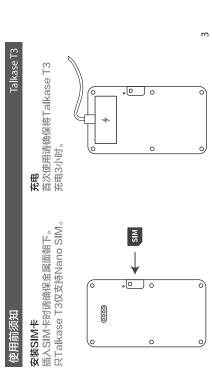



2

 拨号
 接所・担接・结束电话

 接号
 接所・担接・结束电话

 在主屏幕上,按数字0-9, 进入拨号
 投 後 所申话 投 む 担接或者结束

 盘。輸入申诺号码, 投 が 財 市 店。
 申 店





从待机界面设置快速拨号列表 待机界面长按2-9设置快速拨号列表。 Talkase T3 **快速拨号** 可以设置快速拨号列表,你可以长按 数字2-9进行快速拨号。

SAT SAT SAT SAT

通话记录 在通话记录菜单中,按 OK 查看通话历史记录。

→ 来电← 去电 + 接来电

在联系人菜单中设置 在联系人菜单中,找到快速拨号菜单 进行设置。

 
联系人菜单,可以添加联系人,查看 联系人,快速拨号,导入联系人。

短信

新建短信 您可以新建新的短信,手动输入内容 发送给您的联系人。 **短信列表**

您可以查看短信列表,按OK键进入 短信内容,按上下选择键可查看更多 内容,→此箭头表示收到的内容, ← 此箭头表示已发送的内容

可进行播放设置,歌曲选择,与声音 大小控制等。



温

允许您录制或播放录音。按 OK 开始或停止录音。

可修改蓝牙状态,修改蓝牙名称,搜 索并连接蓝牙设备。

闹钟

可添加新的闹钟,设置闹钟模式等,

您可以设置情景模式,日期和时间,语言,Wi-Fi热点,网络和恢复出厂设置等

情景模式 可设置情景模式,如飞行模式,会议 模式,静音等,或者根据您的需要自 定义模式。

日期和时间 可以根据您的具体位置设置当前日期 和时间与时间格式等

语言设置 支持多种以上语言的设置选项

WI-FI热点设置 设置WI-FI热点后,可以将网络分享给其他设备。

移动网络设置 该功能包含移动网络和APN设置

恢复出厂设置 将手机恢复出厂设置后,所有保存的 数据会清除。

规恰参数	lalkase 13
内存:	512MB + 256MB
显示屏:	0.96" OLED 屏 128*64
R寸:	90(L)*50(W)*6.5(H)mm
系统:	Android 4.4
SIM #:	Support Nano SIM
网络制式:	WCDMA 850/2100, GSM 850/1900/900/1800
电池:	550 mAh 聚合物锂电池
待机时间:	96 小时
通话时间:	3 ग्रेष्ठ
充电:	磁吸 Pogo Pin 充电

请登陆网站了解更多信息 https://www.talkase.com

Warning 5.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

- -- Reorient or relocate the receiving antenna.
 -- Increase the separation between the equipment and
- receiver.
 -- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV

technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information:
The SAR limit of USA (FCC) is 1.6W/kg averaged over one gram of tissue. Device Types (FCC ID: 2AC3S-TALKASET3) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 0.751 W/kg and for head is 0.541W/kg. Simultaneous RF exposure is 0.634W/Kg.
This device was tested for typical body - worn operations

with the back of thehandset kept 10mm from the body.To maintain compliance with FCC RF exposure requirements, use accessories that antain a 5mm separation distance between the user's body and the back of thehandset. The use of belt clips, holsters and similar accessories should not containmetallic components in its assembly.

The use of accessories that do not satisfy theserequirements may not comply with FCC RF exposure requirements, and should beavoided. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.