

USER MANUAL



Outdoor lighting speaker

Please read this user manual carefully before using the device.


Specifications:

Product name:M7
Input:DC5V=1A
Battery:3.7V
Charging time: about 4 hours
Speaker unite: 4 ohms, 3W
Lighting power: 2.4W,
Material: ABS / PP /Metal panel
products size:Φ140 X 60 mm
Frequency range: 50Hz~20KHz
Distortion:<0.5%
SNR: ≥65dB
Bluetooth Frequency:2.4 GHZ~2.8GHZ
Bluetooth protocol: A2DP1.2
Bluetooth version: V2.1 + EDR
Bluetooth distance: 10 m

Button explanation:

	Power switch(long press for 3 seconds)
	Mode switch
	Reset
	Play/pause answer the phone/hang off/radio
	Previous song/previous radio/volume decrease
	Next song/next radio/volume increase

Button function indication

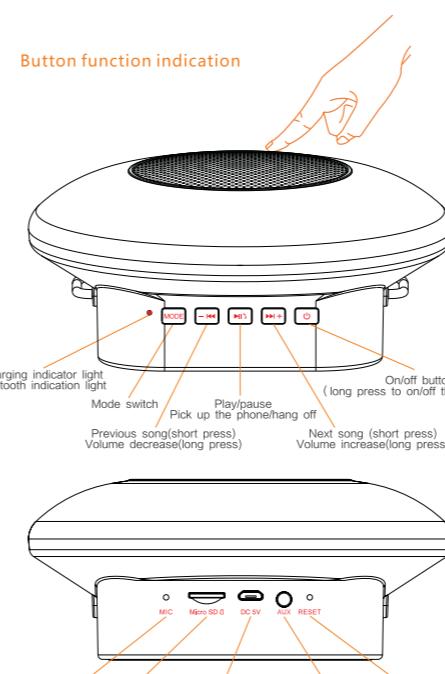

Charging indicator light
Bluetooth indication light
Mode switch
Play/pause
Previous song(short press)
Volume decrease(long press)
Next song (short press)
Volume increase(long press)
On/off button
(long press to on/off the speaker)
Pick up the phone/hang off

Charging
Please make sure the speaker is fully charged for using first time.When the voice prompt saying "low battery, please charge", then please charge the device in time when the power is low.
Connect the USB cable and power adaptor(cell phone charging adaptor and other usb output 5v adaptor is suggested to charge the devices) to charge the device, plug and play.
The charge indicator light will be on while charging, when it is fully charged, it will be off.

ON/OFF Switch
Long press the on/off button "O" for 3 second, the device will be open, and long press 3 second again, the device will be off. There will be voice indicating the on/off status.

Reset
When the speaker has no reaction for any instruction, please stir "RESET" on the speaker base for more than 3 seconds with a thin needle, and the speaker will restart.

Table lamp application
Open the table lamp with the touch of your finger on the metal panel when the device is open, there are 3 level light, micro, medium, high bright and SOS distress signal lamp, off the light.
The brightness will rotate until to off by simply touching the metal panel.
Long touch the panel will convert between the table lamp and color lighting, the color lighting will be orange red, dark blue, green, pink, light blue, color breathing light, music rhythm light(the light will dance with the music when playing music) in order with the touch of your finger when in the color light mode.

SOS Distress signal light
When the sos distress signal light is needed in emergency, pls press the metal panel under the warm light mode until 3 long 2 short alternating flashing lights.

Mode switch
Press the "MODE" button on the bottom to convert the mode from bluetooth mode,TF card mode and FM mode,AUX mode.

Bluetooth Mode:
Bluetooth paring and connection
Turn on the speaker and press the MODE button to bluetooth mode, there will be voice prompt saying "bluetooth mode,waiting for connection" and bluetooth indication light flash lasting for 10 second when in bluetooth status, it is time only when it is ready for connection and connection will be successful.
Bluetooth connection:
Step 1: Open the Bluetooth setting on your phone or tablet and click "search device", phones will search for Bluetooth devices automatically.
Step 2: when you find the mode "M7" on your screen display, click and pairing.
Step 3: Enter "0000" and click OK if there's a prompt that requires you to enter a password.
Step 4: The the bluetooth indication light will stop flashing when there is voice indicating that the bluetooth speaker is successful connected.

Bluetooth connection notification
1.If the speak has been connected with Bluetooth devices before, it will connect with the last Bluetooth device automatically once it is turned on.
2.Other phones or tablets can not be connected with the Bluetooth speaker when the speaker is being connected with a phone or tablet.
3.The phone or tablet can not be connected with the Bluetooth speaker if it is connected with other Bluetooth devices. You should turn off your Bluetooth connection and connect your phone with the Bluetooth speaker again.

Bluetooth Music Playing
Open the player device when the connection is successful. Click to play music, and the Bluetooth speaker will play the music. You can operate the bottom buttons on the Bluetooth speaker to control the player

Short press "▶▶" to play/pause.
Short Press "◀◀" button to previous song, long press to decrease the volume.
Short Press "▶▶+" button to next song, long press to increase the volume.

Bluetooth Hands free Call
Answer and hang up the phone:
There will be an alert sound from the speaker when there is a phone call coming.
Click "▶▶" to answer the phone, and click "▶▶" again to hang up the phone.

TF Card Mode
Insert the TF card when the speaker is turned on. Press the "MODE" button to TF card mode or the speaker will enter itself into the TF card mode when inserting the TF card. It support (MP3/WMA/FLAC format) from your TF card.
You can operate the player with the buttons under the Bluetooth speaker:

Short press "▶▶" to play/pause.
Press "◀◀" button to previous song and increase the volume.
Press "▶▶+" button to next song and decrease the volume.

FM radio function
Press the "MODE" button to FM mode, press the "▶▶" button to search the radio automatically, please do not press any button during the search, the radio will be numbered and stored.
Press "▶▶" button to search the radio.
Short Press "◀◀" button to previous radio and long press to increase the volume.
Short press "▶▶+" button to next radio and long press to decrease the volume.
FM mode, insert the 3.5mm audio cable as antenna.

Frequently Asked Questions
Unsuccessful pairing and connection repeatedly
1.Check the speaker and make sure it is in the searching state or reboot the speaker.
2.Connection is difficult when there are too many Bluetooth devices nearby. Turn off other Bluetooth devices.
3.Turn off the Bluetooth device that was connected with the Bluetooth speaker last time, and reconnect the speaker.
Muted or distorted sound
1.Check the volume of your phone or the speaker, and adjust the volume.
2.The battery is low. Please charge it.
Choppy music play
1.Check if the device is beyond the effective connection distance.
2.Check if there is any obstacle between the speaker and your device.
The indicator not shining in Bluetooth mode
1.The battery is low. Please charge it.
2.Please reboot the speaker.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*** RF warning for Portable device:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.