

## PORTABLE BLUETOOTH SPEAKER

Art No.: TS-030B

### **Features and Specifications**

- Output Power: 3Watt x 2
- Frequency Response: 180Hz – 20KHz
- RMS: (THD=10%) 2.0 Watt
- Driver: 1.5"\*2
- Power Supply: USB, DC 5V 500mA
- Distortion: <0.5%
- S/N: >65dB
- Battery Capacity: 1200mAh
- Battery Play Time: 4 hours
- Battery Charging Time: 4 hours
- Product Size: 120L\* 40W \* 135H mm
- Product Weight: 392g

### **Package Contents**

1. Speaker
2. User Manual
3. USB to Micro-USB Cable
4. 3.5mm Audio Cable

### **Charging the Speaker**

1. Your TS-030B should come with enough power to pair with your device. If you are having trouble with pairing or powering on the TS-030B, please make sure it is fully charged.
2. To charge the unit, connect the supplied micro USB cable to the DC in jack of the unit and the powered USB slot of your charging device.
3. The battery charge indicator will change red while charging and turn off when the battery is fully charged. In order to speed up the charging time, switch off the speaker during the charging process. The playback time depends on the volume level.
4. The unit beeps in "doo doo doo..." when its battery power is closed to be run out.
5. Note: Battery life varies by use and setting.

### **Bluetooth function set up**

1. Place speaker within 30ft of the Bluetooth-enabled device.
2. Slide the ON/OFF button to ON. Once switch on the unit, it will automatically enter into pairing mode and the indicator light flashes green quickly.
3. Follow the instructions of your device to search for the speaker.
4. The speaker is called "TS-030B". If you are prompted for a PIN, enter "0000" (four zeros).
5. Once paired, you can hear a voice indicator.
6. When paired successfully both the speaker and your Bluetooth device will store the last connected device. Now you can play music from your iPod/iPhone or mobile phone through the Bluetooth speaker. When you use the same Bluetooth device to connect to the speaker there is no need to use the password.
7. To disconnect the current connection, please press and hold the phone button till the green light flash quickly.

### **Based instructions**

#### ● **Bluetooth mode**

1. Press the "+" or "-" button to adjust the volume.
2. Press the "<<" or ">>" to swipe forwards or backwards to skip songs.

3. To Pause and resume play of the music track, press the “play/pause” button on the speaker or the Bluetooth device.
4. The unit will be turned off automatically if there is no Bluetooth connection in 15mins.

- **Speakerphone mode**

1. When there is a coming call, music play pauses. Pick up the phone call by press “Phone” button. You can talk through the microphone on “TS-030B”. Music play resumes when your call ends.
2. To reject an incoming call, please press and hold the “phone” button on the top.

- **Aux-in mode**

1. Connect a 3.5mm audio cable to the 3.5mm audio input on the speaker and an audio output on an MP3 player or other audio sources.
2. Speaker will switch to Aux-in mode automatically. The mode indicator light turns to green and start flashing slowing.
3. Play music from your external device and enjoy it.
4. Press the “Volume +/-” button or native controls on the connected MP3 player to control volume.
5. To Pause and resume play of the music track, press the “play/pause” button on the speaker or native controls on the connected Mp3 player.

- **FM radio control**

1. Please insert Aux-in cable as antenna.
2. Press “BLUETOOTH” key and switch to FM mode, where the LED green light is flash on.
3. Press the “PLAY/PAUSE” to start searching for all available FM radio stations, till it stops.
4. Press the “<<” or “>>” to choose FM channels one by one.

### **Safety information**

1. To reduce the risk of electric shock, do not attempt to disassemble the device.
2. Do not use this product in an aircraft or in a hospital.
3. Do not expose the device to direct sunlight, heat or flame.
4. The device may become warm while charging.

### **Caution**

1. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
2. This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.
3. The music streaming may be interrupted by obstacles between the device and the speaker, such as walls, metallic casing that covers the device, or other devices nearby that operate in the same frequency.

### **Speaker button functions (from the left to the right)**

1. Microphone
2. Bluetooth button
3. Hands-free
4. Play/pause
5. Previous song
6. Next song
7. Volume down
8. Volume up.

## **FCC Caution.**

### **§ 15.19 Labelling requirements.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **§ 15.21 Information to user.**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **§ 15.105 Information to the user.**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

“RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.”