

# USER MANUAL

## TS-507B (Read before proceeding)

### Charging and low battery power warning

1. Use the USB charge cable connecting to “TS-507B” from its micro charging port to your computer or charger. (The charging input is 5V 1A.)
2. The red light on top of the handle will turn off when power charging completes.
3. “TS-507B” should come with enough power to pair with your device. If you are having trouble on pairing or powering it, please make sure it is fully charged.

### Music Playing:

#### 1. Bluetooth Mode:

- Press and hold the “Power / Play/Pause” button for three seconds to power it on.
- Once power on, the unit turns default into Bluetooth mode, while there is no Micro SD card.
- Your “TS-507B” will automatically connect to the last Bluetooth device firstly. If no found, it will enter pairing mode and wait for a new Bluetooth device to connect.
- On the Bluetooth device, switch on Bluetooth setting and search for “TS-507B”. For the first-time connection, select “TS-507B” to start connection. If necessary, enter the pass code 0000 or 1234. There is a warning tone once connected successfully.
- To disconnect “TS-507B” from current Bluetooth device, choose to “Disconnect” or “Forget this device” from its connected Bluetooth device.
- Under this mode, press one time the “Power / Play/Pause” button to play or pause music.
- Under this mode, short press the “+” or “-” button to skip songs forwards or backwards. While press and hold these two buttons to adjust volume.
- “TS-507B” can be connected with Bluetooth devices wirelessly (< 30 ft.) The music streaming may be interrupted by obstacles between the device and “TS-507B”, such as walls, metallic casing that covers the device, or other devices nearby that operate in the same frequency.

#### 2. AUX-in Mode

- Use the audio cable to connect between your music device and your “TS-507B” through their 3.5mm audio port.
- When insert the audio cable into your “TS-507B”, it will switch to AUX-in Mode automatically.
- Under this mode, press one time the “Power / Play/Pause” button to enter silent mode.
- Skip songs and adjust volume from your music device.

#### 3. TF card/USB drive:

1. Once a TF Card is inserted, the unit will turn into TF Card mode and plays music automatically.
2. Under this mode, press one time the “Play/Pause / Phone” button to play or pause music.
3. Under this mode, short press the “+” or “-” button to skip songs forwards or backwards. While press and hold these two buttons to adjust volume.

### Speakerphone

1. When there is an incoming call, music will pause automatically. Pick up or hang up phone call by short pressing the “Phone” button. Music play resumes when your call ends.
2. To reject an incoming call, please press and hold the “Phone” button.
3. Quickly press twice the “Phone” button to redial the last number.

4. The Speakerphone function is only available under Bluetooth mode.

## FM Radio

1. Insert the USB charging cable to use it as antenna, press the "M" button to switch to Radio Mode.
2. Under this mode, press one time "Power / Play/Pause" button to search and lock all possible FM channels automatically. When the searching finishes, there is no channel changed.
3. Short press the "+" or "-" button to select a channel. While Press and hold the buttons to adjust volume.

## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.