

cricket

Clear and Simple
Quick Start Guide

ALCATEL ONETOUCH
Pop3-5.5 4G

Getting to know your
ALCATEL ONETOUCH Pop3-5.5 4G



Phone setup

1. ① Remove the back cover
② Turn the SIM card with the chip facing downwards
③ Slide the SIM card into its housing
2. Place the microSD card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted.
3. To remove the SIM or microSD card, press and slide it out, then install the back cover.

WARNING!

To avoid damage to the phone, do not use any other kind of SIM card or any non-standard micro-SIM card cut from a SIM card. You can get a standard micro-SIM card from your service provider.

Touch screen

Navigating your phone

- Use your finger tip to lightly touch the screen.
- Use quick flicks of your finger on the touch screen to swipe up, down, left, and right.
- To return to the previous screen, tap the **Back key** ◀.
- Tap the **Home key** ○ at any time to return to the main home screen.
- Tap the **Recent Apps key** □ to access recently viewed apps.
- Tap **Apps** 𐄂 to access applications on your phone.

Notifications panel

- Access alerts, including new messages, emails and software updates.
- Tap the top of the home screen and drag your finger down to see the Notifications panel.
 - Swipe right or left to clear individual notifications or tap 𐄂 to clear all.
 - With notification panel open, tap top of screen again and drag down to expand the quick settings menu.
 - Tap 𐄂 to access the settings menu.

Personalize

Set wallpaper

- To change your home or lock screen wallpaper, press and hold a blank part of the home screen and tap **WALLPAPERS**.
- Select a wallpaper and tap 𐄑 to set it. You can also tap **Pick image** for additional options.

Add to home screen

- To add app shortcuts, tap **Apps** 𐄂, press and hold the desired app, and drag it to the home screen.
- To add widgets, press and hold a blank part of the screen and tap **WIDGETS**, press and hold the desired widget and drag it to the home screen.

Organize home screens

- To move widget or shortcut, press and hold it and drag it to a new location. To delete it, drag it to the **X** to **Remove**.
- To organize app shortcuts in a folder, press and hold an icon and drag it so it is on top of another icon and release it. This will create a **Folder**. Drag additional shortcuts to the folder to add them.
- To rename a folder, tap the folder title and then type a new name.

Calls and voicemail

Make a call

1. From the home screen, tap **Phone** 𠇞.
2. Tap a contact, type a name or phone number, or select an option:
 - **Dialer** 𠇞: Manually enter a phone number.
 - **SPEED DIAL**: Choose frequently called contacts.
 - **RECENT CALLS**: Call from a list of people who you have called or have called you recently.
 - **CONTACTS**: Call from your contacts list.

Check voicemail

1. From the home screen, tap **Phone** 𠇞, then tap 𠇞.
2. Press and hold the **1 key** 1.

Use call waiting

Call waiting lets you answer a second call while you are on an existing call.

1. While on a call, you will hear a tone if another call comes in. Slide 𠇞 to the right to answer.
2. Tap 𠇞 or tap **On hold** to switch between active calls.
3. Tap 𠇞 to merge calls.
4. Tap 𠇞 to end a conference call.

Manage Conference Call to hang up or unmerge individual callers

Text and picture messaging

Send a text message

1. From the home screen, tap **Messaging** 𠇞.
2. Tap **New message** 𠇞 to start a new text message.
3. In the **To** field, enter a number or a contact name or tap **Contacts** 𠇞 to access your contacts.
4. Tap the **Send message** field and enter your message.
5. Tap **Send** 𠇞 to send the message.

Send a picture message

1. Follow steps 1-4 above.
2. Tap the **Paperclip** 𠇞.
3. Tap **Pictures** 𠇞 and select desired picture or tap **Take photo** to take a picture to attach.
4. Tap **Send** 𠇞 to send the message.

Please don't text and drive.

More information

On the web

Detailed support information, including device specifications and troubleshooting, is available at www.cricketwireless.com/support/devices.

On the phone

- Call Customer Care at **1-855-246-2461** or
- Dial **611** from your cell phone.

Accessories

For more information concerning accessories, please visit your local Cricket store location or go to www.cricketwireless.com/shop/accessories.



Note: Store and online inventories may vary.

Product meets FCC Radio Frequency Exposure Guidelines—FCC ID 2ACCJA009. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. © 2015 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are trademarks under license to Cricket Wireless LLC. Other marks are the property of their respective owners. microSDHC logo is a trademark of SD-3C, LLC. You can also create your own custom beats with the ONETOUCH Mix app, which lets you mix both local and streaming tracks to save and share with your friends. ALCATEL is a trademark of Alcatel-Lucent and is used under license by TCL Communication Ltd. © Copyright 2015 TCL Communication Ltd. All rights reserved. TCL Communication Ltd. reserves the right to alter material or technical specification without prior notice. All "Signature" ringtones embedded in this phone have been composed, arranged and mixed by NU TROPIC (Amar Kabouche).



CJB35HPALAAA

Printed in China

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not rated. M4 is the better/higher of the two ratings. Your device is rated M4. T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing aid's telecoil than phones that are not rated. T4 is the better/higher of the two ratings. Your device is rated T3.

SAR Information

1.46 W/kg @ 1g (HEAD)
1.36 W/kg @ 1g (BODY)

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided.

Unique Alcatel Features

Color notification

Color highlighting lets you quickly identify unread call or message notifications.

Additional Features

- **Selfie**: Take selfies quickly and easily. From the lock screen, double tap 𠇞 to quickly open the front-facing camera and capture the moment without switching between camera modes.
- **Scanner**: Easily scan barcodes from the lock screen. Take scanner quickly and easily. Access Scanner from the lock screen by double tapping 𠇞.

Email

Email setup (Gmail™, Yahoo!®, etc.)

1. From the home screen, tap **Apps** 𐄂 > **Email** 𠇞.
2. Select an account type, enter your email address and password, then tap **NEXT** >.
3. Confirm email account settings and tap **NEXT** >.
4. Tap **FINISH** >. Your email will begin to synchronize with your phone.

Note: To set up corporate email, contact your IT administrator.

Create and send an email message

1. From the home screen, tap **Apps** 𐄂 > **Email** 𠇞.
2. To compose a new message, tap **Compose** 𠇞.
3. Tap the **To** field and enter email address or name or tap **Contacts** 𠇞 to access your contacts.
4. Enter a subject and email message.
5. To attach files to the email message, tap the **Paperclip** 𠇞 and make your selection.
6. Tap **Send** 𠇞 to send the message.

Apps on Google Play™

The ALCATEL ONETOUCH Pop 3-5.5 4G is preloaded with great apps like Facebook and Twitter to help take your smartphone experience to the next level. To find additional apps, check out Google Play.

Access Google Play

1. From the home screen, tap **Play Store** 𠇞.
2. Enter your existing Google account or create one following the steps on the screen.

Navigate Google Play

From Play Store, there are multiple ways to find apps, games, and more.

1. Tap a category to browse popular apps, games, movies, and music organized by popularity or category.
2. Tap **Search** 𠇞 to search the Play Store for a specific game or app.
3. To install, tap the app and follow instructions. Once installed, you will see a notification in the Notifications panel. Open the app from this notification or by locating the app in **Apps** 𐄂.

Note: A Google Wallet™ payment method is required to purchase apps.

Camera and video

Take a picture

1. From the home screen, tap **Camera** 𠇞.
2. Tap 𠇞 to select different modes. Then tap 𠇞 to display **Camera settings**.
3. Zoom in and out by pinching with your fingers.
4. Tap the **Shutter button** 𠇞 or press the **Volume Keys** to take a photo.

View pictures

1. From the home screen, tap **Apps** 𐄂.
2. Tap **Gallery** 𠇞.

Take a video

1. In camera mode, tap **Start recording** 𠇞 to start and tap **Stop recording** 𠇞 to stop recording video.

Send a picture

1. After taking a picture, slide right to view the taken picture. Tap a selected picture and then tap **Share** 𠇞.
2. Scroll through options to send via text messaging or email, Evernote®, and more.

Cricket Apps & Services

These services make using Cricket even better and easier.

- **My Cricket**: Check account balance, make a quick payment, view usage and access support from the palm of your hand.

- **Cricket Wi-Fi Manager**: Helps you save your high speed data by seeking out free and open Wi-Fi hotspots whenever you're near them. Also remembers your favorite Wi-Fi hotspots and connects you automatically. Cricket does the searching so you can do the saving.

- **Cricket Voicemail**: Quickly view, access and play back your voicemail messages. Easily save important numbers to your Favorites list and respond to messages by calling back or texting.

- **Deezer**: Listen on-the-go with ad-free streaming music, download your favorites to your phone and get customized playlists based on your preferences.

Mix

Mix is more than just a music player. Listen, stream and mix songs all through one app. Create playlists from songs you own and also listen to music from the Deezer for Cricket app.

Listening to music

1. From the home screen, tap **Apps** 𐄂.
2. Tap **Mix** 𠇞.
3. Tap a song in the music library to listen to or tap 𠇞 and then **Deezer** to login to your Deezer account.

Mixing Music

Be the life of the party! DJ like a pro. Mix, scratch, and add effects to playlists at a touch of a button.

1. Swipe left or right to advance to the previous or next track.
2. Move your finger back and forth on the turntable to scratch.
3. Tap Automix to turn on auto DJ features. Rotate your device to access advanced DJ mode.
 1. Tap 𠇞 to turn on manual mixing.
 2. Tap 𠇞 to add effects to the songs playing, move sliders to switch between tracks, adjust playing speed etc.
 3. Tap 𠇞 to start recording, tap again to save the mixed song. For additional features, refer to the user manual.