

TCL TAB10

QUICK START GUIDE

9160G



XXXXX

 
 
Printed in China

User Manual and FAQ
are available online
www.tcl.com

SAVE
PAPER
SAVE
TREES


PLEASE CONSIDER THE
ENVIRONMENT BEFORE PRINTING

Your device

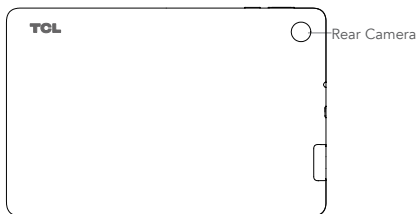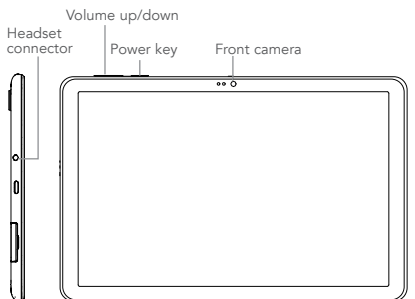


2 Getting Started

 1. Your new tablet is partially charged. Charge the battery by using the USB cable and charger provided.

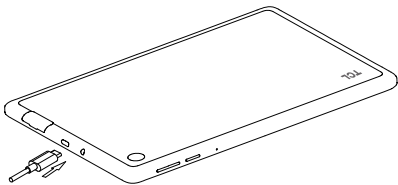

 
2. Open the slot and insert the SIM card and SD card.

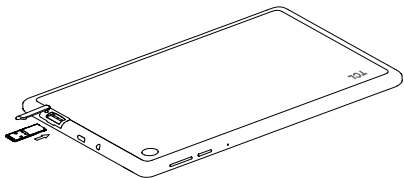

Note: microSD™ cards are sold separately.

3 Home screen

You can bring all of the items (applications, Widgets, folders) that you use most frequently to your Home screen for quick access.

Tapping Home button  always takes you back to the main Home screen.

Status bar

- Status/Notification indicators
- Drag down to open the notification panel.



Tap an icon to open an application, folder, etc.

Favorite applications tray

- Tap to enter the application.
- Long press to move or change applications.

The Home screen is provided in an extended format to allow more space for adding application icons, widgets etc. Swipe left and right on the Home screen to view the extended screens.

 
Status bar

In the status bar, you can see the notifications on the left side and the connection service status on the right side.

Swipe downward from the Status bar to access the Notification panel or the Quick Settings panel. To close the panel, touch and drag upward.

Notification panel

Tap on the notification to view it in the app.

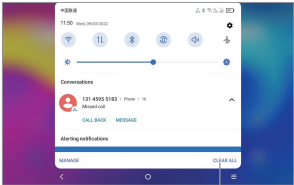


Tap to clear all event-based notifications. On-going notifications will remain on the panel.

Quick settings panel

Swipe down from the status bar twice to open the Quick settings panel. Then enable or disable functions or change modes by tapping the icons.

 Tap to access the full Settings menu, where you can manage other items.

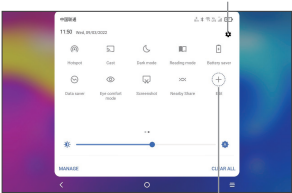


Tap to edit quick settings panel.


4 Phone call

Placing a call

You can easily place a call using the **Phone** application. Touch the Phone icon on your **Favourites Tray**.

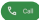

Call screen

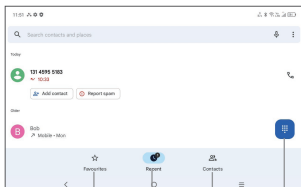 Enter the desired number from the dial pad directly and touch  to place the call or select a contact from **Favorites** or **Contacts** by touching tabs, then make the call

 


Favorites RECENT Contacts Touch to display dial pad.

Dial pad

Enter the desired number from the dial pad and touch the Call icon  to place the call. If you make a mistake, you can delete the incorrect digits by touching the Delete button .

Display the suggested numbers.

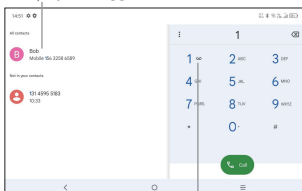

Long press to access voicemail.

Answering or rejecting a call



When you receive a call:


Slide up the icon  to answer;

Slide down the icon  to reject;

Touch  to reject the call by sending a preset message.

To mute the ringtone volume of an incoming call, press the Volume Up/Down key

Call history

 
You can access your call history by touching the Recents tab  from the **Call** screen to view missed calls, outgoing calls, and incoming calls.

5 Contacts



Contacts are stored in your tablet with the Contacts app.

Add, edit, or delete contacts on your tablet and synchronize them with the contacts in other accounts that support contact syncing.

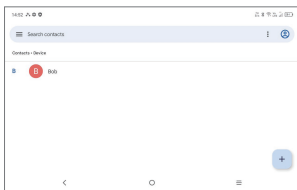You can also import or export your contacts from different locations such as an external storage, email, or other account.



Adding a contact

Open Contacts  from applications list, then tap  on the bottom right of the screen to add a new contact.

Synchronizing contacts in multiple accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your tablet.

6 Messaging

This tablet comes with a pre-installed Messaging app that allows you to send and receive SMS (Short Message Service) or MMS (Multimedia Messaging Service) with your wireless service provider.

To open your Messaging app, go to the Home screen and touch the Messaging icon in the Favourites tray or from the application list.



To check messages stored in your SIM card, touch the **⋮** button from the Messaging screen, then touch **Settings > Advanced > SIM card messages**.

Write message



On the Messaging app screen, touch  in the bottom right of the screen to begin.

- Touch to see the whole message thread.
- Touch and hold to activate delete mode.



Touch to create a new message.

Sending a text message

Enter the mobile phone number of the recipient in the "To" bar and touch the Text message bar to enter the text of the message. Touch the Smiley Face button  to insert emoticons. When finished, touch the Send button  to send the text message.



An SMS of more than 160 characters (Actually maybe little less than 160) will be charged as several SMS. Specific letters (accent) will also increase the size of the SMS. This may cause multiple SMS to be sent to your recipient.

 
Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, and sounds to other compatible phones and email addresses.

An SMS will be converted to MMS automatically when media files (images, videos, audio, documents, etc.) are attached.


7 Gmail

Gmail is a Google web-based email service. When you first set up your tablet, it is automatically synchronized with your Google account. Use Gmail to create, send, and receive emails directly on your tablet. The Gmail app will allow you to add several email accounts.

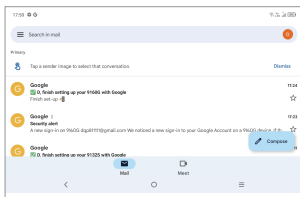





To open Gmail



From the Home screen, tap **Gmail**  in the Google folder.

Gmail displays messages and conversations from one single Gmail account at a time. If you own additional email accounts, you can add an account by tapping Menu  > **Settings** > **Add account**.

Switch to another account by tapping the icon in the top right corner, then select the name of the account you want to view.

To create and send emails

1. Tap  **Compose** from the Inbox screen.
2. Enter the recipient(s)'s email address in "To" field.
3. If necessary, tap  to copy (CC) or blind copy (BCC) a recipient to the message.
4. Enter the subject and the content of the message.
5. Tap  icon and select **Attach file** to add an attachment.
6. Tap  to send.

If you do not want to send the email right away, tap  > **Save draft**. To view the draft later, tap Menu  and select the **Drafts** folder.

8 Getting connected


To connect to the Internet with this tablet, you will need to have an internet connection via Cellular Data provider or via Wi-Fi.

Cellular Data

The first time you turn on your tablet with your SIM card inserted, it will automatically configure your network service: 2G, 3G, 4G To check the network connection you are using, touch **Settings > SIM card & Cellular network > Cellular network**, and touch **Access Point Names**. Your network service connection is also displayed on the Status bar.

Wi-Fi

To turn Wi-Fi on and connect to a Wi-Fi network:

1. Go to **Settings > Wi-Fi**.
2. Tap the switch  to turn on Wi-Fi.
3. Tap a Wi-Fi network to connect. If the network you selected is a secured network, you will need to enter a password or other credentials. When finished, tap **Connect**.
4. For hidden network, slide up the screen and select **Add network**. Enter the SSID of the network, password and its secured credentials. Then, tap **Connect**.

9 Support

1. Enter from your Smartphone / Tablet to the application: SUPPORT CENTER

2. Check our frequently asked questions or chat with us through <https://www.tcl.com> in the Support section.

3. Call the Call Center Locate your number, below:

Argentina- 8001220682

Australia- 1800-21-8730

Canada- 1-855-224-4228

Chile- 600-945-1941

Colombia- 18009520823

Ecuador- 800000636

Mexico- 8008909908

Nueva Zelanda- 0800-451-708

Peru- 80000698

Rep. Dominicana- 8887600164

Uruguay- 405296624

USA- 1-855-224-4228

Venezuela- 8001005368