

TCL 408

QUICK START GUIDE

SAVE
PAPER
SAVE
TREES

PLEASE CONSIDER THE
ENVIRONMENT BEFORE PRINTING



English - CJB2KM1LCAGA

Printed in China



T507A



tcl.com/mx

Your Mobile


Keys and connectors

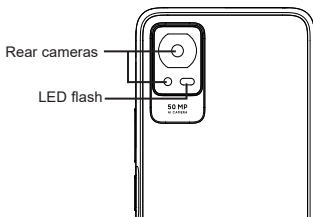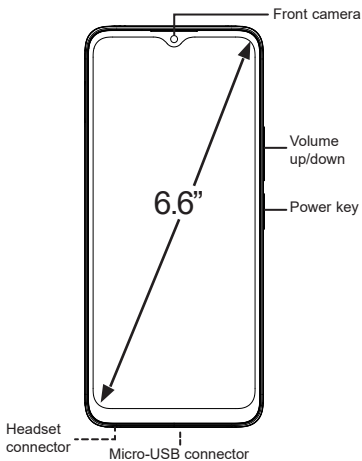


Getting started

- ① Charge the battery
- ② Insert or remove the microSD card.
- ③ Insert or remove the SIM card.

Single SIM

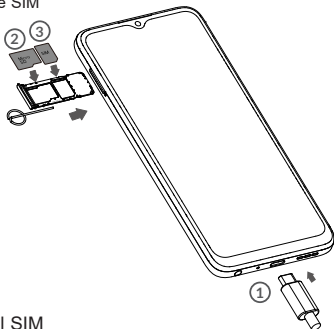


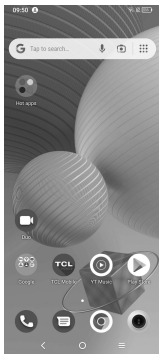
Dual SIM

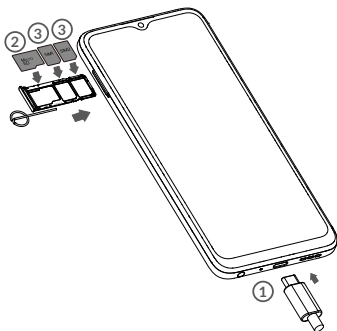


Home screen

You can bring all of the items that you use most frequently (applications, shortcuts, folders) to your Home screen for quick access.



Tapping Home  always takes you back to the main Home screen.



- ① Swipe down from the Status bar to view the Notification panel and access all pending notifications. Swipe down again to view Quick Access settings options.
- ② Tap  to access the complete Settings menu.




Calls


Making a call

From the Phone  app, use the keypad to enter the phone number, or keyboard to enter the contact name. Then tap  to place the call.

Answering a call


When you receive a call:

- Tap **ANSWER**, or swipe up the icon  to answer;
- Tap **DECLINE**, or swipe down the icon  to reject;
- Tap  to reject the call by sending a preset message.

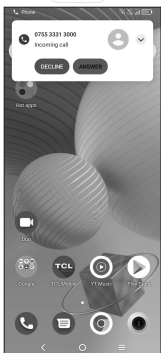

Contacts

Use **Contacts** to view your saved contacts or create a new contact. Synchronize your contacts from your email account(s) and other applications to your phone.

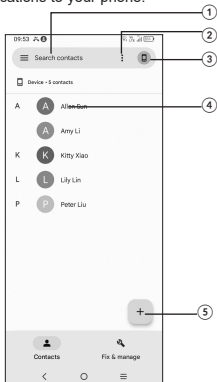


- ① Tap to search for a contact.
- ② Tap to select multiple contacts for bulk editing, such as adding a label to the contact.
- ③ Tap to view all the contacts saved on your device.
- ④ Tap on the contact name or icon to open the contact card, where you can edit their information, call them, and more.
Touch and hold to share or delete the selected contact(s).
- ⑤ Tap to create a new contact.

Messages

You can create, edit, send, and receive SMS and MMS.


An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached, when a subject is added to the message, or an email address is used for a recipient.

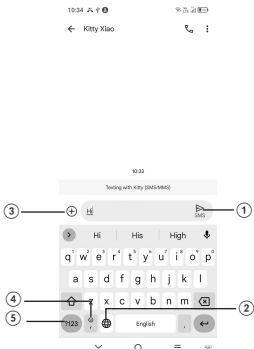

- ① Tap to send the SMS or MMS message.
- ② Touch and hold to switch language.
- ③ Insert an emoticon, pictures or videos from gallery or shoot one directly, or share a contact.
- ④ Tap to input a comma. Touch and hold to access keyboard settings, input an emoticon, and enter left or right hand input mode.
- ⑤ Tap to access the symbols and numbers keyboards.

Gmail

Use Gmail to create, send, and receive emails directly on your phone. The Gmail app will allow you to add several email accounts.

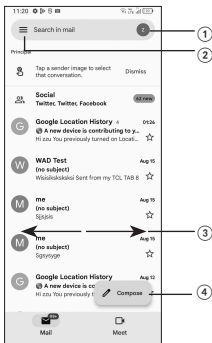

- ① Manage accounts.
- ② Tap to access email folders, settings, and more.
- ③ Swipe right or left to archive the email.
- ④ Tap to create an email.

General Information

- Visit the TCL website at <https://www.tcl.com/mx> for tutorials and answers to frequently asked questions, and to download the User Manual.

- To get support for your phone, visit the TCL website (www.tcl.com/mx), or dial the number listed below:

Argentina: 08001220682

Chile: 800000147

Colombia: 18009520823

Ecuador: 800000635

Mexico: 8008909908

Peru: 080000698

The Dominican Republic: 8887600164

Uruguay: 405296624

Venezuela: 08001005368

- **Update your phone's software**

Go to **Settings > System > System updates** to check software updates.

- **Back up your personal data**

Go to **Settings > System > Backup > Back up to Google Drive** and turn it on.

- **Reset your phone**

Go to **Settings > System > Reset > Factory data reset > Reset phone > Erase everything**.

- **Removing your Google Account**

Go to **Settings > Accounts > tap on the account > Remove Account**.