



TCL 40XE5G



QUICK START GUIDE



SAVE
PAPER
SAVE
TREES

PLEASE CONSIDER THE
ENVIRONMENT BEFORE PRINTING



CJB2LM001AAA


Printed in China


T609L



Your Mobile

Keys and connectors

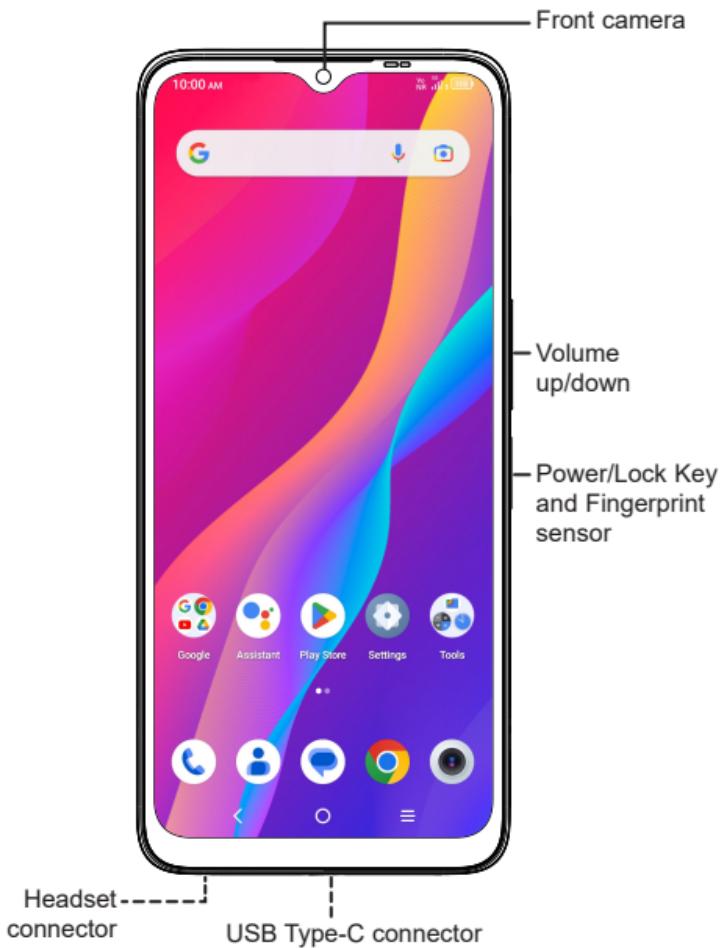

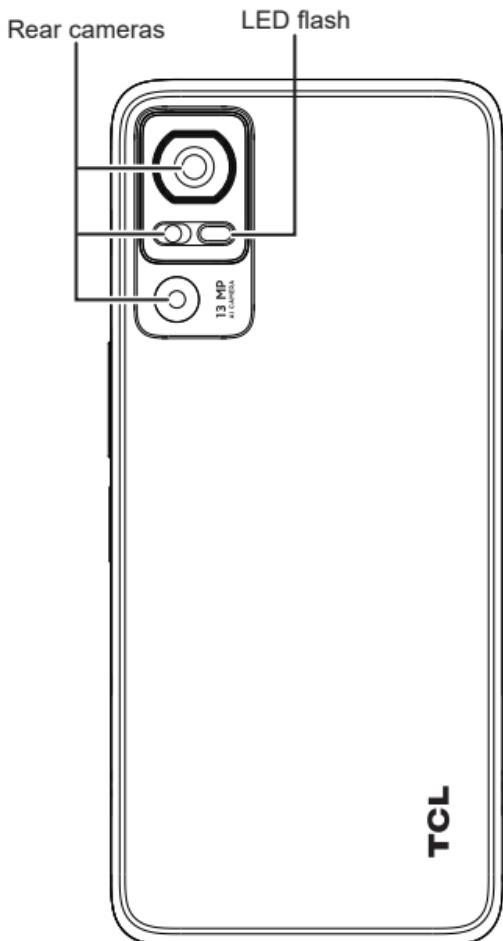




Getting started


Install the SIM card /microSD card

Step 1. Open the SIM card envelope included in shipment box. Use the SIM PIN tool to open the SIM card/microSD™ card tray. See diagram below.

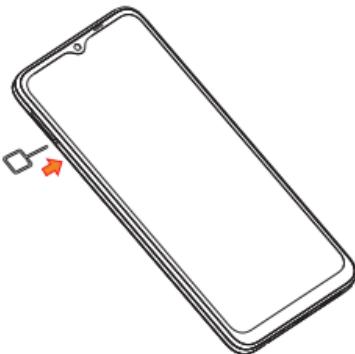

Step 2. Remove the NANO SIM card/microSD™ card tray.

Step 3. Place the SIM card and microSD™ card into the tray, then slide the tray into the slot. It only fits one direction. Do not force into place. Keep the SIM tool in a safe place for future use.

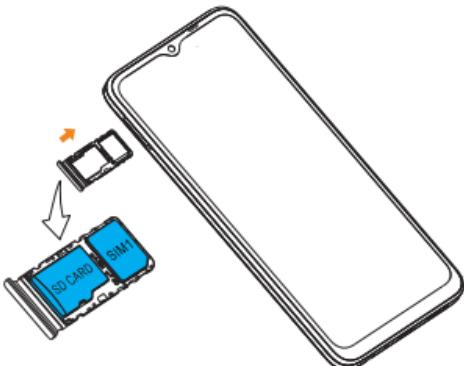


Note: a) MicroSD™ card is sold separately.

b) A USCC SIM card is already installed in your phone. This diagram shows SIM card location if you choose to remove or replace it.





Step 4 Your new phone is partially charged. Charge the battery by using the USB-C cable and charger provided.

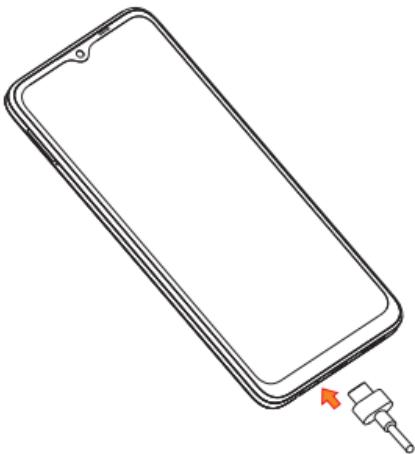

To turn your phone on, press and hold the **Power/Lock** button until the screen turns on.

To turn your phone off, press both the **Power/Lock** button and **Volume up** button at the same time, then tap **Power off** on the screen when it appears.






Home screen

You can bring all of the items (applications, shortcuts, folders) that you use most frequently to your Home screen for quick access.



Tapping Home  always takes you back to the main Home screen.

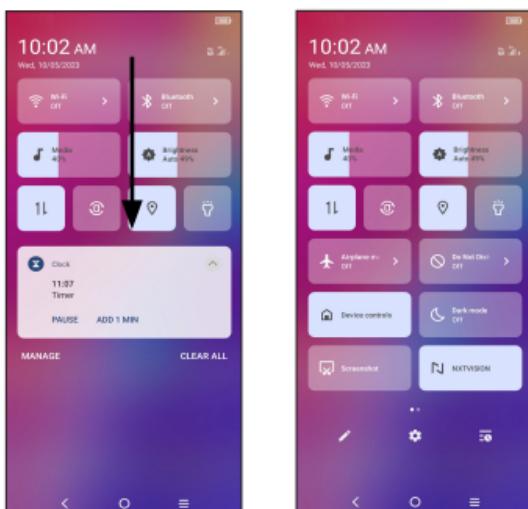

Drag down from the status bar to open the Notifications and Quick settings panel.

Swipe down again to view Quick Access settings options. Tap  to access the complete Settings menu.



Phone call


Making a call

From the Phone  app, use the keypad to enter the phone number, or keyboard to enter the contact name. Then tap  to place the call.

Answering a call


When you receive a call:

- Tap **ANSWER**, or swipe up  to answer;
- Tap **DECLINE**, or swipe down  to reject;
- Tap  to reject the call by sending a preset message.

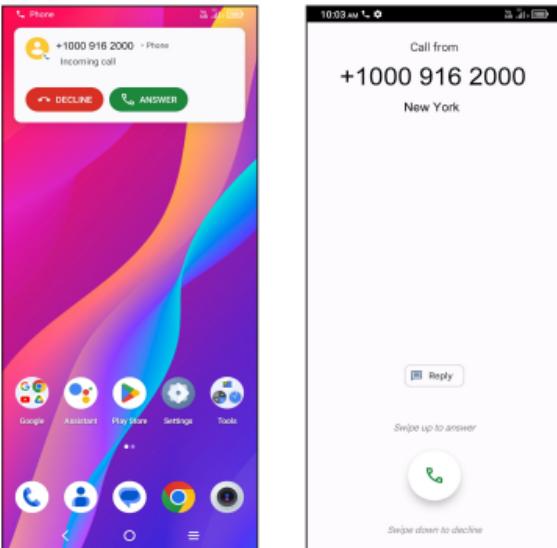

Contacts

Use **Contacts** to view your saved contacts or create a new contact. Synchronize your contacts from your email account(s) and other applications to your phone.

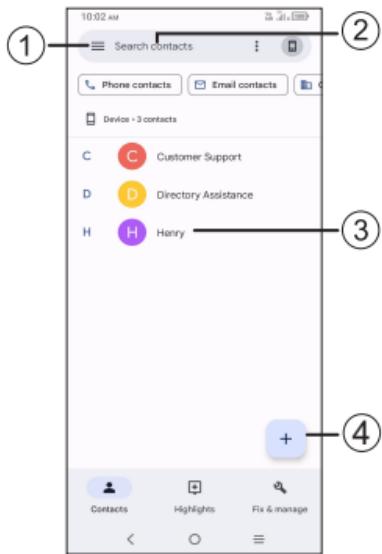


- ① Tap to open menu options.
- ② Tap to search Contacts.
- ③ Tap to view the contact's detailed information.
- ④ Tap to create a new contact.

Messages

You can create, edit, send, and receive SMS and MMS.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached, when a subject is added to the message, or an email address is used for a recipient.

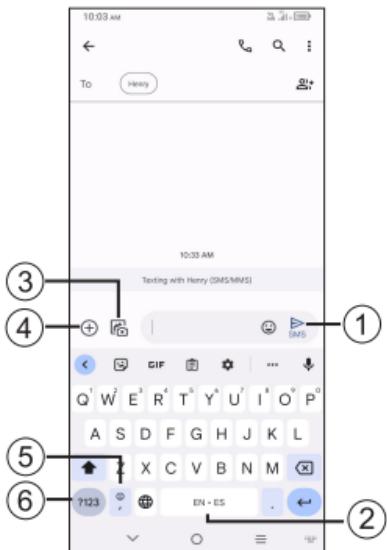

- ① Tap to send the SMS or MMS message.
- ② Touch and hold to switch language (if additional language keyboards are activated).
- ③ Insert a picture from gallery or shoot one directly.
- ④ Insert a GIF, location, contact or other media file.
- ⑤ Tap to input a comma. Touch and hold to access keyboard settings, smileys and emotions or enter left or right hand input mode.
- ⑥ Tap to access the symbols and numbers keyboards.

Gmail

Use Gmail to create, send, and receive emails directly on your phone. The Gmail app will allow you to add several email accounts.



- ① Tap to view the email accounts on your device.
- ② Tap to access email folders, settings, and more.
- ③ Swipe right or left to archive the email.
- ④ Tap to create an email.



Google Assistant

Google Assistant is built into your phone. When activated, Google Assistant will pop-up on your screen to let you know it is listening- speak your command when ready.

There are multiple ways to access it:

1. Press and hold the **Home**  and speak your command.
2. Tap the Microphone  on the Google Search bar located at the top of the Home screen and speak your command.
3. Be sure your phone is on and unlocked, then say out loud, "Hey Google" followed by a new command.
4. Tap the "Google Assistant" app from the Home screen and speak your command.
5. Press and hold the **power/Lock** button and speak your command.

Wireless Emergency Alerts (CMAS)

WEA is a public safety system that allows customers who own compatible mobile devices to receive geographically targeted, text-like messages alerting them of imminent threats to safety in their area.

To turn Wireless Emergency Alerts on

- Touch **Settings**  > **Safety & emergency** > **Wireless Emergency Alerts**.
- Turn on Allow alerts.
- Once WEA is turned on, various types of alerts are listed.



General Information

- Check out the TCL website at www.tcl.com for tutorials and answers to frequently asked questions, and to download the User Manual.
- To get support for your phone, visit the TCL website (www.tcl.com), or dial the number listed below:

Canada- 1-855-224-4228

United States- 1-855-224-4228

- UScellular Customer Care: 1-888-944-9400

- Update your phone's software

Go to **Settings > System > System Update** to check software updates.

- Back up your personal data

Go to **Settings > System > Backup > Back up your device with Google One** and turn it on.

- Reset your phone

Go to **Settings > System > Reset > Erase all data (factory reset) > Erase all data**.

